

[manuals.plus](#) /

› [Gorenje](#) /

› [Gorenje W6202 Front-loading Washing Machine User Manual \(6 Kg, White\)](#)

Gorenje W6202

Gorenje W6202 Front-loading Washing Machine User Manual

Model: W6202 | Capacity: 6 kg

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Gorenje W6202 Front-loading Washing Machine. Please read these instructions carefully before using the appliance and retain them for future reference.

2. SAFETY INSTRUCTIONS

Always adhere to the following safety guidelines to prevent injury or damage to the appliance.

- Ensure the washing machine is properly installed and grounded before use.
- Do not allow children to play with or operate the appliance.
- Never force the door open during operation.
- Unplug the appliance from the power supply before cleaning or maintenance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- This appliance is equipped with a Child Protection (CDP) feature. Refer to the 'Operating Instructions' section for activation details.

3. PRODUCT OVERVIEW



Figure 1: Front view of the Gorenje W6202 Front-loading Washing Machine. This image displays the appliance's white exterior, the central front-loading door with a visible drum, and the control panel located at the top right, featuring a program selector knob and various buttons.

The Gorenje W6202 is a 6 kg capacity front-loading washing machine designed for efficient and thorough laundry care. Key components include:

- **Control Panel:** Located on the top, featuring a program selector, temperature setting, and spin speed adjustment.
- **Detergent Dispenser:** For adding detergent and fabric softener.
- **Drum:** Stainless steel drum with a 180-degree opening door for easy loading.
- **Filter Access:** Located at the bottom front for easy maintenance.

4. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. It is recommended to have the appliance installed by a qualified technician.

4.1 Unpacking

- Remove all packaging materials, including the transport bolts at the rear of the machine. Keep these bolts for future transport.
- Check for any damage during transit. If damaged, do not install and contact your retailer.

4.2 Positioning

- Place the machine on a firm, level surface.
- Adjust the leveling feet to ensure the machine is stable and does not wobble.
- Ensure adequate ventilation around the appliance.

4.3 Water and Electrical Connections

- Connect the water inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
- Position the drain hose correctly into a standpipe or sink, ensuring it is not kinked.
- Plug the power cord into a grounded electrical outlet. Do not use extension cords.

5. OPERATING INSTRUCTIONS

Follow these steps for optimal washing results.

5.1 Preparing Laundry

- Sort laundry by fabric type, color, and degree of soiling.
- Empty pockets and close zippers and fasteners.
- Load laundry loosely into the drum, ensuring not to exceed the 6 kg capacity.

5.2 Adding Detergent

- Add the appropriate amount of detergent to the main wash compartment of the dispenser.
- For pre-wash, add detergent to the pre-wash compartment.
- Add fabric softener to its designated compartment.

5.3 Selecting a Program

Turn the program selector knob to choose one of the available wash programs:

- **Standard Programs:** Cotton, Synthetic, Wool.
- **Special Programs:** UltraWhite, PerfectBlack, Cold wash, Rinse, Softening, Water pump, Spinning, Eco program.

5.4 Adjusting Settings

Customize your wash cycle using the following options:

- **Temperature Setting:** Adjust the wash temperature as needed.
- **Adjustable Spin Speed:** Select the desired spin speed up to 1000 RPM.
- **Pre-Wash:** Activate for heavily soiled items.
- **Personal Settings:** The machine allows for customized settings for all programs.

5.5 Starting and Stopping

- Press the Start/Pause button to begin the cycle.
- To pause a cycle, press the Start/Pause button again.
- To cancel a program, turn the program selector to the 'Off' position.

5.6 Child Protection (CDP)

To activate or deactivate the child lock, refer to the specific instructions in your machine's control panel guide. This feature prevents accidental changes to settings during operation.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your washing machine.

6.1 Cleaning the Detergent Dispenser

- Remove the dispenser drawer and rinse it under running water.
- Clean any residue from the compartments.

6.2 Cleaning the Drain Pump Filter

- Open the small cover at the bottom front of the machine.
- Place a shallow container to collect any residual water.
- Unscrew the filter slowly, allowing water to drain.
- Clean the filter of lint and foreign objects.
- Screw the filter back in securely and close the cover.

6.3 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

This section addresses common issues you might encounter. For more complex problems, contact customer support.

Problem	Possible Cause	Solution
Machine does not start	No power supply; Door not closed properly; Program not selected.	Check power plug and fuse; Ensure door is firmly closed; Select a wash program and press Start.
Water not filling	Water tap closed; Inlet hose kinked; Water supply pressure too low.	Open water tap; Straighten inlet hose; Check household water pressure.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean the drain pump filter (refer to Maintenance).
Excessive vibration/noise	Transport bolts not removed; Machine not level; Uneven load.	Remove transport bolts; Adjust leveling feet; Redistribute laundry in the drum.
Service diagnostic indicator active	Internal error detected.	Note the error code (if displayed) and contact customer support.

8. SPECIFICATIONS

Model	W6202
Brand	Gorenje
Type	Front-loading Washing Machine
Capacity	6 Kilograms
Maximum Rotational Speed	1000 RPM

Energy Efficiency	A++ (as per product description)
Installation Type	Freestanding
Control Console	Fully Automatic
Special Features	Child Lock, Portable, SensoCARE, Detergent Saving System, Shower system, SensorIQ, Stability Control System, Overflow protection
Color	White
Item Dimensions (LxWxH)	60 x 60 x 85 Centimeters
Item Weight	72 kg

9. WARRANTY AND SUPPORT

Your Gorenje W6202 washing machine comes with a **2-year warranty** on the product.

For technical assistance, service requests, or warranty claims, please contact Gorenje customer support.

Refer to your purchase documentation for specific contact details in your region.

When contacting support, please have your model number (W6202) and serial number ready.

© 2023 Gorenje. All rights reserved.