

Manuals.plus /

› Bajaj /

› Bajaj Majesty MX 7 Steam Iron User Manual

## Bajaj MX 7

# Bajaj Majesty MX 7 Steam Iron User Manual

Model: MX 7

## 1. IMPORTANT SAFEGUARDS

---

Please read all instructions carefully before using the Bajaj Majesty MX 7 Steam Iron. Keep this manual for future reference.

- Always ensure the voltage indicated on the rating plate corresponds to your mains voltage.
- Do not leave the iron unattended while it is connected to the mains supply.
- Keep the iron and its cord out of reach of children.
- Do not immerse the iron, cord, or plug in water or any other liquid.
- Unplug the iron from the power outlet before filling or emptying the water tank, and when not in use.
- Use the iron only for its intended household purpose.
- Never operate the iron with a damaged cord or plug, or if it has been dropped or damaged. Contact authorized service personnel for repair.
- The iron must be used and rested on a stable, heat-resistant surface.
- Do not touch hot surfaces. Use handles or knobs.

## 2. PRODUCT OVERVIEW

---

The Bajaj Majesty MX 7 Steam Iron is designed for efficient and convenient ironing. It features a non-stick soleplate, adjustable temperature control, and various steam functions.



Image 1: Bajaj Majesty MX 7 Steam Iron. This image displays the overall design of the iron, highlighting its blue and white color scheme and ergonomic handle.

## Key Features:

- **Non-stick Coated Soleplate:** Ensures smooth gliding over fabrics and prevents sticking.
- **Adjustable Temperature Control:** Allows selection of appropriate heat settings for different fabric types.
- **Water Spray Function:** Provides a fine mist to dampen stubborn creases.
- **Steam Output:** 12 grams per minute, with 15 steam vents for even distribution.
- **Water Tank Capacity:** 150 ml.
- **Vertical Ironing:** Enables steaming of hanging garments and drapes.
- **360-Degree Swivel Cord:** Offers flexibility and ease of movement during ironing.
- **Self-Cleaning Facility:** Helps maintain the iron's performance and extends its lifespan.
- **Cool Touch Body:** Designed for comfortable and safe handling.
- **Steam Burst:** Delivers an extra shot of steam for tough wrinkles.

## 3. BEFORE FIRST USE

---

1. Remove any labels or protective film from the soleplate.
2. Wipe the soleplate with a soft, damp cloth to remove any manufacturing residue.
3. It is recommended to fill the water tank and iron an old piece of fabric for a few minutes to clean any internal impurities.

## 4. SETUP

---

### Filling the Water Tank:

1. Ensure the iron is unplugged from the power outlet.
2. Set the steam control to the 'Dry Ironing' or 'No Steam' position.
3. Open the water filler cap.
4. Using a measuring cup, carefully pour clean tap water into the water tank up to the 'MAX' fill line. Do not overfill.
5. Close the water filler cap securely.

*Note: For areas with hard water, it is recommended to use distilled or demineralized water to prevent mineral buildup.*

## 5. OPERATING INSTRUCTIONS

---

## 5.1 Dry Ironing

1. Ensure the water tank is empty or the steam control is set to 'Dry Ironing'.
2. Plug the iron into a suitable power outlet.
3. Turn the temperature control dial to the desired setting for your fabric type (refer to garment care labels).
4. The indicator light will illuminate, indicating the iron is heating up.
5. Once the light turns off, the iron has reached the selected temperature and is ready for use.

## 5.2 Steam Ironing

1. Fill the water tank as described in Section 4.
2. Plug the iron into a suitable power outlet.
3. Set the temperature control dial to the 'Steam' range (usually indicated by three dots or a steam symbol). Steam ironing is only effective at higher temperatures.
4. Wait for the indicator light to turn off, signifying the iron has reached the correct temperature.
5. Adjust the steam control to the desired steam level.
6. Begin ironing.

## 5.3 Water Spray Function

To use the spray function, ensure the water tank is filled. Press the spray button to release a fine mist onto the fabric, helping to remove stubborn creases.

## 5.4 Steam Burst Function

For particularly stubborn wrinkles, press the steam burst button. This delivers a powerful shot of steam. Allow a few seconds between bursts for the steam to regenerate.

## 5.5 Vertical Steaming

The iron can be used for vertical steaming of hanging garments, curtains, or drapes. Hold the iron vertically a few inches away from the fabric and press the steam burst button. Ensure the iron is at a high temperature setting for effective vertical steaming.

# 6. MAINTENANCE AND CLEANING

---

## 6.1 After Each Use

1. Unplug the iron and allow it to cool completely.
2. Empty any remaining water from the tank.
3. Wipe the soleplate with a damp cloth to remove any starch or fabric residue.
4. Clean the exterior of the iron with a soft, damp cloth. Do not use abrasive cleaners.

## 6.2 Self-Cleaning Facility

The self-cleaning function helps remove mineral deposits from the steam chamber. Perform this function monthly or as needed.

1. Fill the water tank to the 'MAX' level.
2. Plug in the iron and set the temperature control to the maximum setting.
3. Once the indicator light turns off, unplug the iron.
4. Hold the iron horizontally over a sink.
5. Press and hold the self-clean button (if available, otherwise use steam burst repeatedly). Hot water and steam will be expelled from the soleplate, carrying impurities.
6. Gently shake the iron back and forth until the water tank is empty.
7. Plug the iron back in and heat it to dry the soleplate.
8. Unplug and allow to cool before storing.

## 6.3 Storage

Store the iron upright on its heel rest in a cool, dry place. Ensure the cord is neatly wrapped and not tightly coiled around the soleplate.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Iron not heating	Not plugged in; power outlet fault; thermal fuse activated.	Check power connection; test outlet with another appliance; contact service center if thermal fuse is suspected.
No steam or insufficient steam	Water tank empty; temperature too low; steam vents blocked; steam control set to 'Dry'.	Fill water tank; set temperature to steam range; perform self-clean; adjust steam control.
Water leaking from soleplate	Temperature too low for steam; water tank overfilled; iron left horizontal when hot.	Increase temperature; do not overfill; store iron upright.
Iron sticking to fabric	Soleplate dirty; incorrect temperature setting.	Clean soleplate; adjust temperature according to fabric type.

## 8. SPECIFICATIONS

- **Brand:** Bajaj
- **Model:** MX 7
- **Power Consumption:** 1200 Watts
- **Water Tank Capacity:** 150 ml
- **Steam Output:** 12 gms/min
- **Soleplate:** Non-stick Coated
- **Cord:** 360-degree Swivel Cord
- **Weight:** 740 g

- **Color:** Blue and White
- **Special Features:** Water Spray, Steam Burst, Vertical Ironing, Self-Cleaning, Thermal Fuse

## 9. WARRANTY AND SUPPORT

---

This Bajaj product is covered by a manufacturer's warranty against manufacturing defects. For warranty claims, technical support, or service inquiries, please refer to the warranty card included with your purchase or contact Bajaj customer service directly. Please retain your purchase receipt as proof of purchase.