

Beetel B17

Beetel B17 Corded Landline Phone User Manual

Model: B17

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your Beetel B17 Corded Landline Phone. Please read these instructions carefully before using the device to ensure optimal performance and longevity.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your product package:

- Beetel B17 Landline Instrument
- Coil Cord (for handset connection)
- Line Cord (for telephone line connection)
- User Manual (this document)
- 2 AA batteries (included)

3. PRODUCT FEATURES

The Beetel B17 Corded Landline Phone is designed for reliable communication with several convenient features:

- **Ringer Volume Control:** Adjust the incoming call volume to your preference.
- **Tone/Pulse Switchable:** Compatible with both tone and pulse dialing systems.
- **Call Management Functions:** Includes Mute, Pause, Flash, and Redial capabilities.
- **LED for Ring Indication:** A visual indicator illuminates when an incoming call is received.
- **Wall/Desk Mountable:** Flexible installation options for various environments.



Image: Top-down view of the Beetel B17 Corded Landline Phone, showcasing its compact design and keypad.

4. SETUP INSTRUCTIONS

4.1 Connecting the Handset

1. Locate the coiled handset cord.
2. Plug one end of the coiled cord into the handset.
3. Plug the other end of the coiled cord into the designated port on the phone base, typically marked with a handset icon.

4.2 Connecting to the Telephone Line

1. Locate the straight line cord.
2. Plug one end of the line cord into the port on the phone base, typically marked with a wall jack icon.
3. Plug the other end of the line cord into your telephone wall jack.

4.3 Battery Installation (for specific features, if applicable)

The phone requires 2 AA batteries (included). These are typically for features like LED ring indication or memory functions. Refer to the battery compartment, usually on the underside of the phone, for correct polarity and installation.

4.4 Wall Mounting (Optional)

The Beetel B17 can be mounted on a wall. Locate the wall mounting slots on the underside of the phone. Secure two screws (not included) into the wall, spaced appropriately for the slots. Ensure the screws are firmly anchored before hanging the phone. Some models may require rotating a small knob on the base to secure the handset when wall-mounted.

B17

b
BEETEL

Desktop / Wall Mountable



Image: The Beetel B17 phone displayed in both desktop and wall-mounted configurations, highlighting its versatile design.

5. OPERATING INSTRUCTIONS

5.1 Making a Call

1. Lift the handset.
2. Listen for a dial tone.
3. Dial the desired telephone number using the keypad.
4. Once the call is complete, replace the handset on the phone base.

5.2 Receiving a Call

1. When the phone rings and the LED indicator flashes, lift the handset to answer.
2. Once the call is complete, replace the handset on the phone base.

5.3 Ringer Volume Adjustment

Locate the ringer volume switch on the side or underside of the phone. Adjust it to your preferred volume level

(e.g., High, Medium, Low, or Off).



Image: The Beetel B17 phone highlighting the LED ring indicator, which provides a visual alert for incoming calls.

5.4 Mute Function

During a call, press the **MUTE** button to temporarily disable your microphone. The other party will not hear you. Press **MUTE** again to resume conversation.

5.5 Redial Function

To redial the last number called, lift the handset and press the **REDIAL** button.

5.6 Flash Function

The **FLASH** button is used for network services such as call waiting or transferring calls. Consult your telephone service provider for specific instructions on using this feature.

5.7 Pause Function

The **PAUSE** button inserts a brief pause in the dialing sequence, useful when dialing through a PABX system

or accessing certain services.

5.8 Tone/Pulse Dialing Switch

Locate the TONE/PULSE switch on the phone base. Set it according to your telephone line's dialing system. Most modern lines use Tone dialing.



Image: The Beetel B17 phone illustrating the tone/pulse switch, allowing compatibility with different telephone line types.

6. MAINTENANCE

To ensure the longevity and proper functioning of your Beetel B17 phone, follow these maintenance guidelines:

- **Cleaning:** Wipe the phone with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Environment:** Keep the phone away from direct sunlight, excessive heat, moisture, and dust.
- **Cords:** Regularly check the handset and line cords for any signs of damage. Replace if necessary.
- **Avoid Drops:** Handle the phone with care to prevent physical damage.

7. TROUBLESHOOTING

If you encounter issues with your Beetel B17 phone, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No dial tone	Line cord not connected properly; telephone line issue.	Ensure the line cord is securely plugged into both the phone and the wall jack. Test with another phone if available. Contact your service provider if the issue persists.
Cannot hear caller / Caller cannot hear me	Handset cord loose; Mute function activated.	Check that the handset cord is securely connected. Ensure the MUTE button is not active.
Phone does not ring	Ringer volume set to low or off; telephone line issue.	Adjust the ringer volume switch. Check for dial tone to confirm line functionality.
Buttons not responding	Stuck buttons; internal fault.	Gently press buttons to ensure they are not stuck. If the issue persists, contact customer support.

8. SPECIFICATIONS

- **Model:** B17
- **Type:** Corded Landline Phone
- **Color:** Black
- **Material:** Plastic
- **Product Dimensions:** Approximately 20.5 x 13 x 7.6 cm
- **Item Weight:** Approximately 530 g
- **Batteries:** 2 AA batteries (included)
- **Features:** Ringer volume control, Tone/Pulse switchable, Redial, Mute, Flash, Pause, LED for ring indication, Wall/Desk mountable.

9. WARRANTY AND SUPPORT

Your Beetel B17 Corded Landline Phone comes with a **1-year manufacturer warranty** for the device from the date of purchase. In-box accessories, including batteries, are covered by a **6-month manufacturer warranty**. For technical support, warranty claims, or further assistance, please refer to the contact information provided with your purchase documentation or visit the official Beetel website.

10. PRODUCT OVERVIEW VIDEO

For a visual guide on the features and usage of the Beetel B17 Corded Landline Phone, please watch the video below:

Your browser does not support the video tag.

Video: An overview of the Beetel B17 Corded Landline Phone, demonstrating its key features and design. This video provides a visual walkthrough of the product's functionalities and benefits.

