

[manuals.plus](#) /

- › [SKYLINK](#) /
- › [Skylink KN-318 Keyless Entry System Instruction Manual](#)

## SKYLINK KN-318

# Skylink KN-318 Keyless Entry System Instruction Manual

## INTRODUCTION

---

This manual provides comprehensive instructions for the installation, programming, operation, and maintenance of your Skylink KN-318 Keyless Entry System. Please read this manual thoroughly before attempting to install or operate the device to ensure proper function and safety.

The Skylink KN-318 is designed to provide convenient keyless access to your garage. It is compatible with all Skylink Garage Door Openers. For universal compatibility with most national brand garage door openers, the KN-318 keypad requires the Skylink GB-318 Smart Button Receiver (sold separately).



*Image: The Skylink KN-318 Keyless Entry System with its protective cover lifted, revealing the numeric keypad.*

## SAFETY INFORMATION

---

- Always keep the garage door area clear of obstructions when operating the opener.
- Ensure children and pets are away from the garage door when it is in motion.
- Do not allow children to play with the keypad or remote controls.
- Regularly inspect the garage door and opener for any signs of wear or damage.
- The keypad is designed for outdoor use and includes a weather-proof cover. Ensure the cover is closed when not in use to protect against environmental elements.

## SETUP

---

### 1. Components

The package includes:

- Skylink KN-318 Keyless Entry System Keypad
- Weather-proof cover
- 1 AAA Alkaline Battery (included)
- Mounting hardware

### 2. Battery Installation

1. Carefully remove the back cover of the keypad. You may need a small screwdriver to loosen the screw at the bottom.
2. Insert the included AAA Alkaline battery, ensuring correct polarity.
3. Replace the back cover and tighten the screw.



*Image: Side view of the Skylink KN-318 Keyless Entry System, illustrating its compact design with the protective cover closed.*

### 3. Mounting the Keypad

Choose a convenient location near your garage door, out of reach of small children, but easily accessible. Use the provided mounting hardware to securely attach the keypad to a wall or door frame. Ensure the keypad is mounted vertically.

## 4. Changing the Passcode

The default passcode is typically 0000. It is highly recommended to change this to a personal, secure 4-digit code immediately after installation.

1. Enter the current passcode (e.g., 0000) followed by the asterisk (\*) button.
2. Enter your new 4-digit passcode followed by the asterisk (\*) button.
3. Re-enter your new 4-digit passcode followed by the asterisk (\*) button to confirm.

Three beeps will confirm that the passcode has been successfully changed.

Your browser does not support the video tag.

*Video: Instructions on how to change the passcode on the Skylink KN-318 Keyless Entry System from the default 0000 to a new code (1234 shown as an example).*

## 5. Programming with your Garage Door Opener

Follow the specific programming instructions provided with your Skylink Garage Door Opener to link the KN-318 keypad. If you are using a non-Skylink garage door opener, you must first install the Skylink GB-318 Smart Button Receiver (sold separately) and then follow its instructions to program the keypad.

Typically, this involves pressing a learn button on your garage door opener or receiver, then entering the default passcode (0000) on the KN-318 keypad.

Your browser does not support the video tag.

*Video: A brief segment demonstrating the final step of programming the keypad with the default passcode 0000 to a garage door opener.*

# OPERATING INSTRUCTIONS

---

## 1. Basic Operation

To operate your garage door, simply enter your 4-digit passcode followed by the hash (#) button. The garage door will activate (open or close).

The keypad features a back-lit display for easy visibility in low-light conditions.



*Image: Front view of the Skylink KN-318 Keyless Entry System with its cover open, clearly displaying the numeric keypad for operation.*

## **2. Single Door Operation Mode**

In single door operation mode, the keypad is configured to control one garage door. To activate the door, enter your PIN followed by the hash (#) button. The keypad will emit three beeps to confirm activation.

Your browser does not support the video tag.

*Video: Demonstrates how to operate the garage door in single door mode by entering the PIN followed by the hash (#) button.*

## **3. Multiple Doors Operation Mode**

The KN-318 can operate up to four Skylink garage door openers. To switch to Multiple Doors Operation Mode:

1. Enter your current PIN, then press the asterisk (\*) button, then the number 9, then the hash (#) button.
2. Two beeps will indicate that the keypad has successfully changed to Multiple Doors Operating Mode.

To operate a specific door in this mode, enter your PIN, then the hash (#) button, followed by the door number (1, 2, or 3). For example, PIN [#] [1] for door 1.

Your browser does not support the video tag.

*Video: Demonstrates how to change the keypad setting from Single Door Operation to Multiple Doors Operation and how to operate individual doors.*

To change back to Single Door Operation Mode:

1. Enter your current PIN, then press the asterisk (\*) button, then the number 0, then the hash (#) button.
2. Two beeps will indicate that the keypad has successfully changed to Single Doors Operating Mode.

Your browser does not support the video tag.

*Video: Demonstrates how to change the keypad setting from Multiple Doors Operation back to Single Door Operation.*

## MAINTENANCE

---

### 1. Battery Replacement

The keypad is powered by one AAA Alkaline battery. When the battery is low, the keypad's performance may degrade. Replace the battery by following the steps in the "Battery Installation" section. Ensure to use a fresh AAA Alkaline battery for optimal performance and battery life (approximately 4350 hours).

### 2. Cleaning

Clean the keypad and its cover with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish or electronic components.

### 3. Weather Protection

Always ensure the weather-proof cover is closed when the keypad is not in use. This protects the internal components from rain, snow, dust, and direct sunlight, extending the lifespan of the device.

## TROUBLESHOOTING

---

### 1. Keypad Not Responding

- Check the battery: Ensure the AAA battery is correctly installed and not depleted. Replace if necessary.
- Verify programming: Confirm the keypad is correctly programmed to your garage door opener or the GB-318 receiver. Refer to the "Programming with your Garage Door Opener" section.
- Range: Ensure you are within the operating range of the garage door opener (up to 100 feet).

### 2. Incorrect Passcode Attempts

The keypad features a Passcode Lock Timeout. If ten incorrect passcode attempts are made, the keypad will automatically lock for 10 minutes to prevent unauthorized access. Wait for the lockout period to expire before attempting to enter the passcode again.

### 3. Resetting the Passcode to Factory Default (0000)

If you forget your passcode or wish to reset it to the factory default (0000), follow these steps:

1. Remove the back cover and take out the AAA battery.
2. Press and hold both the hash (#) and asterisk (\*) buttons simultaneously.
3. While holding these buttons, reinsert the AAA battery.
4. Continue holding both buttons until you hear three beeps. This indicates the passcode has been reset to 0000.
5. Replace the back cover and tighten the screw.

After resetting, you will need to reprogram the keypad with your garage door opener using the default passcode 0000, and then change the passcode to a new personal code.

Your browser does not support the video tag.

*Video: Detailed instructions on how to reset the passcode of the Skylink KN-318 Keyless Entry System to its factory default of 0000.*

## SPECIFICATIONS

Feature	Detail
Brand	SKYLINK
Model Name	KN-318
Lock Type	Keypad
Material	Metal
Color	Black
Item Dimensions (L x W x H)	7 x 5 x 1 inches
Item Weight	8 ounces
Power Source	Battery (1 AAA Alkaline, included)
Average Battery Life	4350 Hours
Connectivity Protocol	Skylink
Coverage	100 Feet
Special Feature	Universal (with GB-318 receiver)
Included Components	Weather-proof cover

## WARRANTY INFORMATION

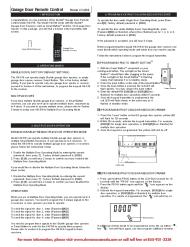
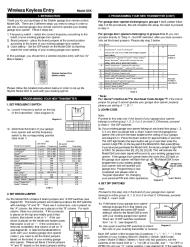
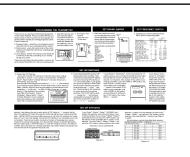
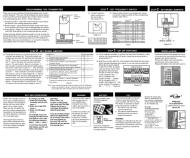
The Skylink KN-318 Keyless Entry System comes with a 1-year limited warranty from the date of purchase. Please retain your proof of purchase for warranty claims. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, modification, or unauthorized repair.

## CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Skylink customer service. Refer to the product packaging or the official Skylink website for the most current contact information.

© 2023 SKYLINK. All rights reserved.

### Related Documents - KN-318

	<p><a href="#">Skylink KN-318 Garage Door Remote Control Programming and Operation Manual</a></p> <p>Comprehensive guide for the Skylink KN-318 Garage Door Remote Control, covering installation, programming for single and multiple doors, operation modes, troubleshooting, and warranty information.</p>
	<p><a href="#">Skylink KN-318 Garage Door Keypad User Manual</a></p> <p>Comprehensive user manual for the Skylink KN-318 Garage Door Keypad, covering installation, setup, programming, operation, troubleshooting, and warranty information.</p>
	<p><a href="#">Skylink SMO Side Mount Garage Door Opener Owner's Manual</a></p> <p>Comprehensive owner's manual for the Skylink SMO Side Mount Garage Door Opener, covering installation, programming, operation, maintenance, and troubleshooting. Learn how to safely and effectively use your garage door opener.</p>
	<p><a href="#">Skylink G5K Wireless Keyless Entry Programming and Setup Guide</a></p> <p>Comprehensive guide to programming the Skylink G5K Wireless Keyless Entry system for your garage door opener. Covers frequency settings, brand jumper configuration, DIP switch programming, keypad operation, installation, and troubleshooting.</p>
	<p><a href="#">Skylink Model 88 Wireless Keyless Entry User Instructions</a></p> <p>Comprehensive guide for setting up and operating the Skylink Model 88 wireless keyless entry system for garage door openers, including programming, code setting, and troubleshooting.</p>
	<p><a href="#">Skylink Model 89 Wireless Keyless Entry User's Instructions</a></p> <p>Comprehensive guide for the Skylink Model 89 Wireless Keyless Entry system. Learn how to program frequency switches, set brand jumpers, configure DIP switches, install the unit, and operate the keypad for your garage door opener. Includes compatibility charts and FCC information.</p>

