

[Manuals.plus](#) /

› [JBL](#) /

› JBL E30 On-Ear Headphones User Manual

JBL E30

JBL E30 On-Ear Headphones User Manual

1. INTRODUCTION

This user manual provides comprehensive instructions for the JBL E30 On-Ear Headphones. It covers product features, setup procedures, operational guidelines, maintenance tips, and troubleshooting information to help you maximize your listening experience and ensure the longevity of your device.

The JBL E30 headphones are designed to deliver clear audio with enhanced bass, featuring a lightweight and comfortable on-ear design suitable for extended use.

2. PRODUCT OVERVIEW

2.1 Key Features

- **30mm Drivers:** Engineered for powerful sound with deep bass.
- **Universal In-Line Remote with Microphone:** For hands-free calls and music control with compatible smartphones and tablets.
- **Detachable Cable:** Enhances portability and reduces tangling.
- **Lightweight and Ergonomic Design:** Provides a comfortable fit for prolonged listening sessions.
- **DJ-Pivot Ear Cups:** Allows for flexible positioning and single-ear monitoring.

2.2 Components

The JBL E30 headphones consist of the following main components:

- Headband (adjustable)
- Left and Right Ear Cups (with JBL logo and DJ-pivot mechanism)
- Detachable Audio Cable with In-Line Remote and Microphone
- 3.5mm Audio Jack (on ear cup)



Figure 1: Front view of the JBL E30 Blue On-Ear Headphones, showing the adjustable headband and ear cups.



Figure 2: Side view of the JBL E30 Blue On-Ear Headphones, illustrating the foldable ear cup design for portability.



Figure 3: Angled view of the JBL E30 Blue On-Ear Headphones, highlighting the textured ear cup and 'SYNCHROS' branding.

3. SETUP

3.1 Connecting the Audio Cable

1. Locate the 3.5mm audio jack on the left ear cup of the headphones.
2. Insert the smaller end of the detachable audio cable into the headphone's audio jack until it clicks securely.
3. Insert the larger end of the audio cable into the 3.5mm headphone port of your audio source (e.g., smartphone, tablet, computer).

3.2 Adjusting the Fit

For optimal sound quality and comfort, adjust the headphones as follows:

- Gently extend or retract the headband slides until the ear cups rest comfortably over your ears.
- Ensure the ear cushions fully cover your ears to create a proper seal for bass response and noise isolation.
- The DJ-pivot ear cups allow for slight rotation to conform to your head shape.

4. OPERATING INSTRUCTIONS

4.1 Audio Playback

Once connected to an audio source, begin playback from your device. Adjust the volume using your device's volume controls or the in-line remote if available and compatible.

4.2 Using the In-Line Remote and Microphone

The detachable cable features a universal one-button remote and an integrated microphone. Functionality may vary slightly depending on your device's operating system.

- **Single Press:** Play/Pause music, Answer/End a call.
- **Double Press:** Skip to the next track (during music playback).
- **Triple Press:** Go to the previous track (during music playback).
- **Hold:** Activate voice assistant (e.g., Siri, Google Assistant) or decline an incoming call.

5. MAINTENANCE

5.1 Cleaning

- Use a soft, dry cloth to wipe the exterior surfaces of the headphones.
- Do not use liquid cleaners or aerosols directly on the headphones.
- Periodically clean the ear cushions with a slightly damp cloth and allow them to air dry completely before use.

5.2 Storage

- When not in use, store the headphones in a cool, dry place.
- Avoid exposing the headphones to extreme temperatures or humidity.
- The ear cups can be pivoted inward for a more compact storage profile.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	Cable not fully connected; device volume too low; incorrect audio output selected on device.	Ensure cable is securely connected to both headphones and audio source. Increase device volume. Check audio output settings on your device.
Poor sound quality (e.g., static, distorted)	Loose cable connection; damaged cable; audio source issue.	Reconnect the audio cable firmly. Try a different audio cable if available. Test with a different audio source.
Microphone not working	Cable not fully connected; device microphone settings; incompatibility.	Ensure the cable is fully inserted. Check microphone privacy settings on your device. Some older devices may not fully support in-line remote functions.

7. SPECIFICATIONS

Model Name:

E30

Connectivity Technology:

Wired

Ear Placement:

On Ear

Form Factor:

On Ear

Headphones Jack:

3.5 mm Jack

Material:

Aluminum

Item Weight:

3.52 ounces (0.1 Kilograms)

Product Dimensions:

2.95 x 7.26 x 8.48 inches

Special Feature:

Lightweight, Universal Phone Control

Control Type:

Volume Control (via connected device)

Cable Feature:

Detachable

UPC:

050036321907

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service, please refer to the documentation included with your product packaging or visit the official JBL website. Warranty terms and conditions may vary by region and purchase date.

JBL Official Website: www.jbl.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00LT28U32>

More documents and user manuals: <https://manuals.plus/>