

[Manuals.plus](#) /

> [BLACK+DECKER](#) /

> [BLACK+DECKER 2-Slice Rapid Toast Toaster, Stainless Steel, Model TR3500SD User Manual](#)

## BLACK+DECKER TR3500SD

# BLACK+DECKER 2-Slice Rapid Toast Toaster, Stainless Steel, Model TR3500SD User Manual

Model: TR3500SD

[Overview](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance  
& Support](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

## PRODUCT OVERVIEW

The BLACK+DECKER 2-Slice Rapid Toast Toaster, Model TR3500SD, is designed for efficient and quick toasting. Its sleek stainless steel exterior complements any kitchen countertop. This toaster features extra-wide slots to accommodate various bread types, including bagels and thick artisan bread. With multiple toasting functions and shade settings, you can customize your toast to perfection. The extra-lift lever ensures safe retrieval of smaller items, and cleanup is simplified with its design.



*The BLACK+DECKER 2-Slice Rapid Toast Toaster in stainless steel, featuring its sleek design.*

## SETUP GUIDE

1. **Unpack:** Carefully remove the toaster and all packaging materials. Ensure all components are present and undamaged.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface. Ensure there is adequate space around and above the toaster for proper ventilation and heat dissipation. Avoid placing it near curtains or flammable materials.
3. **First Use (Burn-off):** Before first use, operate the toaster without bread on the highest setting (7) for a few cycles. This will burn off any manufacturing residues and eliminate initial odors. A slight odor or smoke during this process is normal.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

## OPERATING INSTRUCTIONS

### 1. Loading Bread

- Place one or two slices of bread, bagels, or other items into the toasting slots. The extra-wide slots are designed to accommodate various thicknesses.
- The self-centering guides will automatically adjust to hold the bread in place for even toasting.



**50%  
FASTER  
TOASTING\***



**RAPID TOAST  
2-Slice Toaster**

\*When compared to the Black & Decker model TR3340

*The toaster features extra-wide slots, making it easy to insert bagels or thicker slices of bread.*

### 2. Selecting Toast Shade

- Turn the shade selector dial to your desired browning level, from 1 (lightest) to 7 (darkest).
- Experiment with different settings to find your preferred toast shade.



## EXTRA-WIDE TOASTING SLOTS

TOAST BAGELS AND  
THICK ARTISAN BREADS WITH EASE

*Close-up of the shade selector dial, allowing users to choose from 7 browning levels.*

### 3. Using Special Functions

- **Bagel Function:** Press the **Bagel** button (often indicated by a bagel icon) for perfect bagels, toasting the cut side while gently warming the other.
- **Frozen Function:** Press the **Frozen** button (often indicated by a snowflake icon) to defrost and toast frozen items.
- **Cancel Function:** Press the **Cancel** button (often indicated by a stop or cancel icon) at any time to stop the toasting cycle and eject the items.



## STAINLESS STEEL FINISH

*The control panel showing the illuminated Bagel, Frozen, and Cancel function buttons for versatile toasting.*

### 4. Starting and Retrieving Toast

- Push the toast lever down until it locks into place. The selected function button will illuminate.
- Once the toasting cycle is complete, the toast will automatically pop up.
- Use the **Extra-Lift Lever** to raise smaller items higher for easier and safer retrieval, preventing burns.



*The extra-lift lever in its raised position, demonstrating how it helps retrieve smaller toasted items safely.*

## CARE AND MAINTENANCE

### 1. Cleaning the Crumb Tray

- Always unplug the toaster and allow it to cool completely before cleaning.
- Locate the crumb tray at the bottom of the toaster. Pull the tray out to remove accumulated crumbs.
- Discard crumbs and wipe the tray clean with a damp cloth. Dry thoroughly before reinserting.
- Ensure the crumb tray is fully reinserted before using the toaster.



The removable crumb tray, shown partially pulled out, for convenient cleaning of accumulated crumbs.

## 2. Cleaning Exterior

- Wipe the exterior of the toaster with a damp cloth and dry thoroughly. Do not use abrasive cleaners or metal scouring pads.
- Never immerse the toaster in water or any other liquid.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; circuit breaker tripped.	Ensure toaster is securely plugged into a working outlet. Check household circuit breaker.
Bread is stuck in the slots.	Item too large; crumb buildup.	Unplug the toaster and carefully remove the item. Clean the crumb tray.
Toast is too light or too dark.	Shade setting incorrect; type of bread.	Adjust the shade selector dial. Denser breads may require a higher setting.
Uneven toasting.	Inconsistent bread thickness; crumb buildup.	Ensure bread slices are of similar thickness. Clean crumb tray regularly.
Burning smell or smoke.	Crumb buildup; food lodged inside.	Immediately unplug. Allow to cool, then clean crumb tray and remove any lodged food.

## PRODUCT SPECIFICATIONS

- **Brand:** BLACK+DECKER
- **Model Number:** TR3500SD
- **Color:** Silver
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 7"D x 10.25"W x 8"H
- **Item Weight:** 3 Pounds
- **Wattage:** 1200 watts
- **Voltage:** 240 Volts
- **Slot Count:** 2
- **Number of Settings:** 7 (Shade Settings)
- **Special Features:** Manual controls, Bagel function, Frozen function, Cancel function, Extra-Lift Lever, Extra-Wide Slots
- **GTIN/UPC:** 050875812529

## WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the official BLACK+DECKER website or contact their customer service. Keep your purchase receipt as proof of purchase for any warranty claims.

