

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [George Foreman](#) /
- › [George Foreman 4-Serving Removable Plate Grill and Panini Press User Manual](#)

George Foreman GRP360R

George Foreman 4-Serving Removable Plate Grill and Panini Press

USER MANUAL - MODEL GRP360R

Brand: George Foreman

INTRODUCTION

Thank you for choosing the George Foreman 4-Serving Removable Plate Grill and Panini Press, Model GRP360R. This appliance is designed for quick and convenient cooking of various meals, from burgers and chicken to grilled vegetables and paninis. Its advanced non-stick coating and removable, dishwasher-safe plates ensure easy use and cleanup.

Key features include:

- **Advanced George Tough Coating:** 3x more durable, easy to clean, and reduces the need for added oils or butter.
- **Removable Plates:** Dishwasher-safe for effortless cleanup.
- **Ready Indicator Light:** Signals when the grill is preheated and ready for cooking.
- **Faster Heat-up:** Improved heating elements preheat 35% faster for quicker meal preparation.



Advanced George Tough™ **NONSTICK COATING**

Image: A close-up view of the grill plates, highlighting the durable Advanced George Tough Nonstick Coating designed for easy cooking and cleaning.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

12. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.

WARNING: This product can expose you to chemicals including Styrene, which is known to the State of California to cause cancer, and Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

GETTING STARTED (SETUP)

Unpacking and Initial Cleaning

1. Remove all packaging materials, stickers, and plastic bands from the grill.
2. Wash the removable grill plates and drip tray in warm, soapy water. Rinse and dry thoroughly. The plates are also dishwasher-safe.
3. Wipe the exterior of the grill with a damp cloth.

Placement

Place the grill on a stable, level, heat-resistant surface. Ensure there is adequate space around the grill for ventilation and to prevent heat damage to surrounding surfaces.

Drip Tray Setup

Slide the included drip tray underneath the front of the grill, ensuring it is properly positioned to catch any grease or liquids that drain from the grill plates.



Image: The George Foreman grill with its black drip tray positioned underneath the front, ready to collect excess grease.

OPERATING INSTRUCTIONS

Preheating the Grill

1. Ensure the grill plates are securely in place and the drip tray is positioned.
2. Close the grill lid.
3. Plug the power cord into a standard electrical outlet. The red indicator light will illuminate, signaling that the grill is powered on.
4. Allow the grill to preheat. The green indicator light will illuminate when the grill has reached its optimal cooking temperature, typically in about 10 minutes.



Image: A close-up view of the top of the George Foreman grill, highlighting the red and green indicator lights that signal power and readiness.

Cooking

1. Once the green indicator light is on, carefully open the grill.
2. Place food directly onto the bottom grill plate. The non-stick coating allows for cooking without added oil or butter.
3. Close the lid. The floating hinge design accommodates various food thicknesses.
4. Cook for the recommended time for your specific food item. Cooking times will vary based on food type, thickness, and desired doneness.
5. When cooking is complete, carefully remove food using heat-resistant plastic or wooden utensils to avoid scratching the non-stick surface.



Feed the whole family fast!
4 SERVINGS

Image: The George Foreman grill open, showing four pieces of grilled salmon on the cooking plates, demonstrating its 4-serving capacity.

Panini Press Function

The grill can also function as a panini press. Simply place your assembled sandwich onto the bottom grill plate and close the lid. The even heat and pressure from both plates will create perfectly toasted paninis.



Image: The George Foreman 4-Serving Removable Plate Grill and Panini Press in its closed position, showcasing its sleek red design.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your George Foreman grill.

Cleaning the Grill Plates

1. Unplug the grill and allow it to cool completely before cleaning.
2. Press the plate release buttons (located on the sides of the grill) and carefully remove the grill plates.
3. The grill plates are dishwasher-safe. Alternatively, they can be washed by hand in warm, soapy water using a non-abrasive sponge or cloth. Avoid using metal scouring pads or abrasive cleaners, as these can damage the non-stick coating.
4. Rinse and dry the plates thoroughly before reattaching them to the grill.



Image: A hand placing one of the removable George Foreman grill plates into a dishwasher rack, demonstrating their dishwasher-safe feature.

Cleaning the Drip Tray and Exterior

- Empty the drip tray after each use. The drip tray is also dishwasher-safe or can be washed by hand with warm, soapy water.
- Wipe the exterior of the grill with a damp cloth. Do not immerse the grill base in water or any other liquid.
- Ensure all parts are dry before storing.

Storage

Store the grill in a clean, dry place. The grill can be stored horizontally. Ensure the drip tray is clean and in place or stored separately.

TROUBLESHOOTING

Problem	Possible Cause	Solution
----------------	-----------------------	-----------------

Problem	Possible Cause	Solution
Grill not heating up.	Not plugged in; power outlet issue; appliance malfunction.	Ensure the grill is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food sticking to plates.	Plates not clean; non-stick coating damaged; food type.	Ensure plates are thoroughly cleaned. Avoid using metal utensils. While the coating is durable, extreme heat or abrasive cleaning can damage it.
Drip tray overflowing.	Too much grease/liquid; tray not emptied.	Empty the drip tray more frequently, especially when cooking fatty foods. Ensure the tray is correctly positioned.
Grill plates not staying in place.	Plates not properly locked; debris in locking mechanism.	Ensure plates are aligned and clicked into place. Check for any food debris obstructing the locking mechanism.

SPECIFICATIONS

Feature	Detail
Brand	George Foreman
Model Number	GRP360R
Color	Red
Material	Plastic
Product Dimensions	5.5"D x 10.5"W x 12.5"H
Wattage	1800 watts
Item Weight	6 Pounds
Voltage	110 Volts
Special Feature	Removable Plate
Included Components	George Foreman 4-Serving Removable Plate Grill and Panini Press, Red, GRP360R

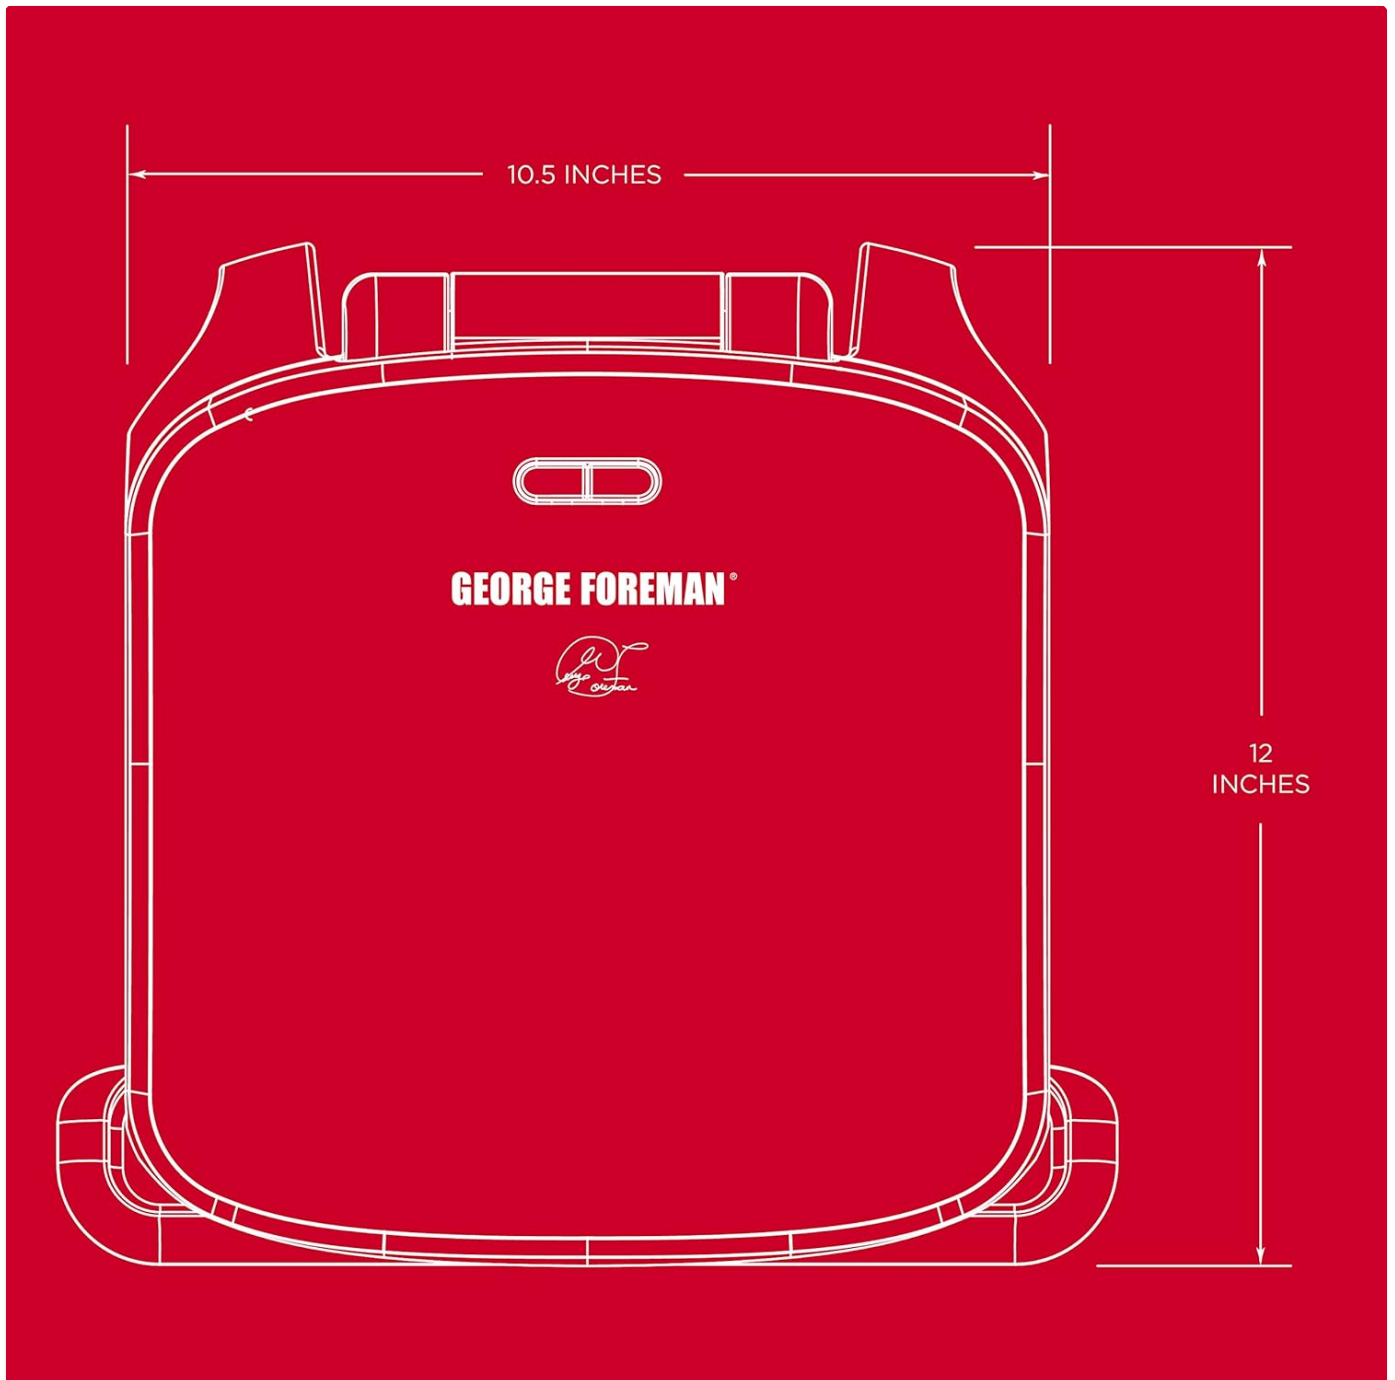


Image: A diagram illustrating the dimensions of the George Foreman grill, showing its width as 10.5 inches and depth as 12 inches.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the warranty card included with your purchase or visit the official George Foreman website. Do not attempt to repair the appliance yourself. Any servicing other than cleaning should be performed by an authorized service representative.

For additional assistance, you may contact George Foreman customer service. Please have your model number (GRP360R) and purchase date available when contacting support.

© 2024 George Foreman. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.