

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BLACK+DECKER](#) /

› [BLACK+DECKER 8-Slice Extra Wide Convection Toaster Oven User Manual](#)

BLACK+DECKER 050875812185

BLACK+DECKER 8-Slice Extra Wide Convection Toaster Oven

Model: 050875812185

INTRODUCTION

Thank you for choosing the BLACK+DECKER 8-Slice Extra Wide Convection Toaster Oven. This versatile countertop appliance is designed to simplify your cooking tasks, offering a spacious interior that accommodates a 13x9 inch oven pan with handles or a 12-inch pizza. Featuring convection technology for fast and even results, along with dedicated functions for baking, broiling, toasting, and keeping food warm, this oven is a convenient addition to any kitchen. Please read this manual thoroughly before use to ensure safe and optimal performance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric

shock.

- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or any materials not specifically designed for oven use.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

GETTING STARTED

Unpacking and Initial Setup

1. Remove all packing materials, stickers, and plastic bands from the oven.
2. Remove all literature and accessories from inside the oven.
3. Wash all removable parts as instructed in the "Care and Cleaning" section.
4. Select a level, non-flammable surface where the oven will be used, ensuring at least 4 inches of space on all sides and above the oven for proper ventilation.
5. Plug the power cord into a standard electrical outlet.

First Use

It is recommended to operate the oven for approximately 10 minutes on the highest temperature setting (450°F) in the Bake function before first use. This will burn off any manufacturing residues and eliminate any initial odors. A slight odor and smoke may be present during this process; this is normal and will dissipate.

PARTS AND FEATURES



Front view of the BLACK+DECKER 8-Slice Extra Wide Convection Toaster Oven, showcasing its stainless steel finish and glass door.



**BLACK+
DECKER**

EXTRA WIDE COUNTERTOP CONVECTION OVEN

Convection
Technology

Fits a 12" Pizza

8 Toast Slices

Removable
Crumb Tray

Dedicated
Toast Timer

Detailed view of the oven's control knobs, including settings for function, temperature/timer, and toast shade.



Interior of the oven highlighting the three available rack positions for versatile cooking.



Extra Wide interior fits a 12" pizza, 8 slices of bread, and a 9"x13" bake pan with handles

The removable crumb tray being pulled out for easy cleaning.

Components:

- **Temperature/Function Control Knob:** Used to select cooking function (Bake, Broil, Toast, Keep Warm) and set temperature.
- **Timer Control Knob:** Sets cooking time up to 60 minutes or selects 'Stay On' for continuous operation.
- **Toast Shade Selector Knob:** For precise toast shade selection when using the Toast function.
- **Power Indicator Light:** Illuminates when the oven is on.
- **Oven Rack:** Adjustable to three positions for different cooking needs.
- **Baking/Broiling Pan:** Included for baking and broiling tasks.
- **Removable Crumb Tray:** Catches crumbs and drips for easy cleaning.
- **Glass Door:** Allows for easy viewing of food during cooking.

OPERATING INSTRUCTIONS

General Operation

Before cooking, ensure the oven rack is in the desired position. Place food on the baking/broiling pan or directly on the rack, depending on the recipe. Close the oven door completely.

Bake Function

1. Turn the Temperature/Function Control Knob to the desired temperature (250°F - 450°F) and the "Bake" setting.
2. Turn the Timer Control Knob to the desired baking time. For continuous baking, turn the knob past 20 and then back to "Stay On".
3. The power indicator light will illuminate. The oven will begin heating.
4. When the set time expires, a bell will sound and the oven will turn off. If using "Stay On", manually turn the Timer Control Knob to "Off" when cooking is complete.



The oven's spacious interior easily accommodates a 9x13 inch baking pan, perfect for dishes like lasagna.

Broil Function

1. Place the oven rack in the top position for broiling.
2. Turn the Temperature/Function Control Knob to the "Broil" setting.
3. Turn the Timer Control Knob to the desired broiling time.
4. Monitor food closely as broiling is a fast cooking method.
5. When the set time expires, a bell will sound and the oven will turn off.

THREE SLIDE RACK POSITIONS

Best for Broiling —

Best for Baking —

Best for Pizza —



The broil function in action, ideal for browning and crisping food surfaces.

Toast Function

1. Place bread slices directly on the oven rack in the middle position. This oven can toast up to 8 slices.
2. Turn the Temperature/Function Control Knob to the "Toast" setting.
3. Turn the Toast Shade Selector Knob to the desired shade (light to dark).
4. Turn the Timer Control Knob past 20 and then back to the "Toast" icon.
5. The power indicator light will illuminate.
6. When the toast cycle is complete, a bell will sound and the oven will turn off.

Removable Crumb Tray For Easy Cleaning



EvenToast Technology ensures consistent toasting results across up to 8 slices of bread.

Keep Warm Function

1. Turn the Temperature/Function Control Knob to the "Keep Warm" setting.
2. Turn the Timer Control Knob to the desired time or to "Stay On".
3. The oven will maintain a low temperature to keep food warm without further cooking.

Rack Positions

The oven features three rack positions for optimal cooking flexibility:

- **Top Position:** Ideal for broiling and thin items requiring intense top heat.
- **Middle Position:** Best for most baking, toasting, and general cooking.
- **Bottom Position:** Suitable for larger items, such as a whole chicken or a 12-inch pizza, and for dishes that require more bottom heat.

Proper care and cleaning will ensure the longevity and performance of your toaster oven. Always unplug the oven and allow it to cool completely before cleaning.

Removable Crumb Tray

The crumb tray slides out from the bottom front of the oven for easy removal and cleaning. Empty crumbs frequently to prevent buildup. Wash the crumb tray in warm, soapy water, rinse thoroughly, and dry completely before replacing.

Oven Rack and Baking Pan

Wash the oven rack and baking pan in warm, soapy water. For stubborn food residue, soak them in hot, soapy water before cleaning with a non-abrasive sponge or cloth. Rinse and dry thoroughly.

Interior and Exterior

Wipe the interior walls and glass door with a damp cloth and mild liquid soap. For tougher stains, use a non-abrasive cleaner. Avoid using steel wool pads or abrasive cleaners on any part of the oven, as they can damage the finish. Wipe the exterior surfaces with a damp cloth and dry thoroughly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven does not turn on.	Oven not plugged in; power outage; timer not set.	Ensure oven is securely plugged into a working outlet. Check household circuit breaker. Turn Timer Control Knob to desired time or "Stay On".
Food is not cooking evenly or is burning on top.	Incorrect rack position; temperature variations.	Adjust rack position for optimal cooking. Note that temperatures in this oven may be lower than the set point due to advanced heating elements; dial settings are calibrated for expected results. Adjust cooking time or temperature as needed for your recipe. Consider tenting food with foil if browning too quickly.
Toast is too light or too dark.	Toast Shade Selector not set correctly; timer setting.	Adjust the Toast Shade Selector Knob to a lighter or darker setting. Ensure the Timer Control Knob is set to the "Toast" icon.
Smoke or odor during first use.	Manufacturing residues burning off.	This is normal. Operate the oven empty for 10 minutes on high heat before first use to burn off residues. Ensure adequate ventilation.

PRODUCT SPECIFICATIONS



Visual representation of the oven's dimensions.

Feature	Specification
Brand	BLACK+DECKER
Model Name	8 Slice Extra Wide Convection Toaster Oven
Model Number	050875812185
Color	Stainless Steel
Product Dimensions	14.5"D x 22"W x 11.5"H
Item Weight	17.5 pounds
Control Type	Knob Control
Temperature Range	250 - 450 Degrees Fahrenheit
Special Features	Timer, Large Capacity, Adjustable Rack, Convection Technology
Included Components	Baking Pan, Crumb Tray
Country of Origin	China

WARRANTY AND CUSTOMER SUPPORT

BLACK+DECKER provides a limited warranty for this product. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official BLACK+DECKER website. Keep your purchase

receipt as proof of purchase for warranty claims.

For technical assistance, troubleshooting, or to inquire about replacement parts, please contact BLACK+DECKER customer support. Contact information can typically be found on the product packaging, in the included literature, or on the official brand website.

Online Resources: For additional support, FAQs, and product registration, visit the official BLACK+DECKER website: www.blackanddecker.com

Related Documents - 050875812185

	<p>BLACK+DECKER 4-Slice Toaster Oven: Instructions for Use, Features, and Specifications</p> <p>Comprehensive guide to the BLACK+DECKER 4-Slice Toaster Oven (Model TO1745SSG-1A). Learn about its four cooking functions, 30-minute timer, extra-wide viewing window, and technical specifications including dimensions, voltage, and wattage.</p>
	<p>BLACK+DECKER TO4304SS Convection Countertop Oven User Manual and Safety Guide</p> <p>Comprehensive user manual for the BLACK+DECKER TO4304SS Convection Countertop Oven, covering essential safety instructions, detailed operating procedures for toast, bagel, convection bake, and broil functions, care and cleaning guidelines, and warranty information.</p>
	<p>Black+Decker Air Fry Toaster Oven TO1787SS User Manual</p> <p>Comprehensive user manual for the Black+Decker Air Fry Toaster Oven, model TO1787SS. Includes important safety precautions, operating instructions for toast, bake, air fry, broil, and keep warm functions, as well as care and cleaning guidelines and warranty information.</p>
	<p>Black+Decker Extra-Wide Convection Oven User Manual and Care Guide</p> <p>Comprehensive user manual and care guide for the Black+Decker Extra-Wide Convection Oven (Models TO3265XSSD, TO3265XSSC), covering safety precautions, operating instructions for toasting, broiling, air frying, and baking, care and cleaning procedures, and warranty information.</p>
	<p>BLACK+DECKER Toaster Oven & Amazon Basics Bakeware Set User Guides</p> <p>User manuals and safety instructions for the BLACK+DECKER 4-Slice Natural Convection Toaster Oven (TO1755SBC) and the Amazon Basics 6-Piece Nonstick, Carbon Steel Oven Bakeware Baking Set.</p>

BLACK+DECKER

NO PREHEAT

SANS PRÉCHAUFFAGE

EXPERT™TEMP

TOD5030SC



[BLACK+DECKER TOD5030SC Countertop Convection Oven Use and Care Manual](#)

Official use and care manual for the BLACK+DECKER TOD5030SC Countertop Convection Oven, providing operating instructions, safety precautions, cleaning guidelines, and warranty information.