

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [V-Zug](#) /
- › [V-Zug Adora S Freestanding Washing Machine User Manual](#)

V-Zug Adora S

V-Zug Adora S Washing Machine User Manual

Model: Adora S

[Safety](#)

[Setup](#)

[Operating](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your V-Zug Adora S Freestanding Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.



Figure 1: Front view of the V-Zug Adora S washing machine, showcasing its sleek white design and central drum.

SAFETY INSTRUCTIONS

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

- Ensure the appliance is properly grounded before connecting to power.
- Do not operate the washing machine if the power cord is damaged.
- Keep children and pets away from the appliance during operation.
- Do not open the detergent dispenser or door during a wash cycle, especially when hot water is in use.
- Unplug the appliance from the power supply before performing any cleaning or maintenance.

- Do not install the appliance in areas prone to freezing temperatures.

SETUP AND INSTALLATION

1. Unpacking

Carefully remove all packaging materials. Inspect the appliance for any transit damage. Retain packaging for potential future transport.

2. Location and Leveling

Place the washing machine on a firm, level surface. Adjust the leveling feet to ensure the appliance is stable and does not wobble. Proper leveling minimizes vibration and noise during operation.



Waschgerät und Trockner kann sowohl

- **nebeneinander als auch zur**
- **Wasch-Trocken-Säule kombiniert werden,**

ganz nach Ihren Platzverhältnissen.

Waschen und Trocknen mit der neuen Adora: Kombinationen à discrétion

Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Figure 2: The V-Zug Adora S washing machine can be installed freestanding, side-by-side with a dryer, or stacked to optimize space. Ensure adequate clearance for ventilation and access.

3. Water Connection

Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks. Position the drain hose into a suitable standpipe or sink, ensuring it is securely fastened to prevent displacement during draining.

4. Electrical Connection

Connect the power cord to a grounded electrical outlet. Ensure the voltage and frequency match the specifications listed on the appliance's rating plate. Do not use extension cords or adapters.

5. First Use

Before the first wash, run an empty cycle with a small amount of detergent to clean the drum and internal components.

OPERATING INSTRUCTIONS

1. Control Panel Overview

The V-Zug Adora S features an intuitive control panel for easy program selection and monitoring.



Die neue schwenkbare Bedienblende

Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Figure 3: Detailed view of the V-Zug Adora S control panel, showing the display and touch-sensitive buttons for program selection and settings.

2. Loading Laundry

Open the door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. Close the door firmly.

3. Adding Detergent and Additives

Pull out the detergent dispenser drawer. Add the appropriate amount of detergent to the main wash compartment and any fabric softener or pre-wash agents to their respective compartments. The Adora S features an automatic detergent dispenser option.



Die neue Waschmittelschublade - innovatives neues Design erleichtert die Reinigung

Dieses Szenebild ist beispielhaft. Alle Informationen entnehmen Sie bitte der Artikelbeschreibung.

Figure 4: The innovative detergent drawer of the V-Zug Adora S, designed for easy cleaning and efficient dispensing of detergents and additives.

4. Selecting a Wash Program

Turn the program selector or use the touch controls to choose the desired wash program. Available cycle options include:

- **Delicate Wash:** For sensitive fabrics.
- **Cotton:** Standard program for cotton items.
- **Eco:** Energy-efficient program.
- **Speed Wash:** Quick wash cycle for lightly soiled items.

Additional options such as temperature, spin speed, and pre-wash can be selected via the control panel.

5. Starting the Cycle

Press the Start/Pause button to begin the wash cycle. The display will show the remaining time and current cycle status.

6. Special Features

The V-Zug Adora S incorporates advanced features for enhanced performance:

- **Steam Ironing:** Reduces wrinkles, making ironing easier or unnecessary for some garments.



Figure 5: Visual demonstration of the steam ironing feature, showing a significant reduction in wrinkles compared to a garment washed without this function.

- **Vibration Absorbing System (VAS):** This innovative system automatically detects and corrects imbalances in the drum by adding water, ensuring quiet and stable operation even with uneven loads.

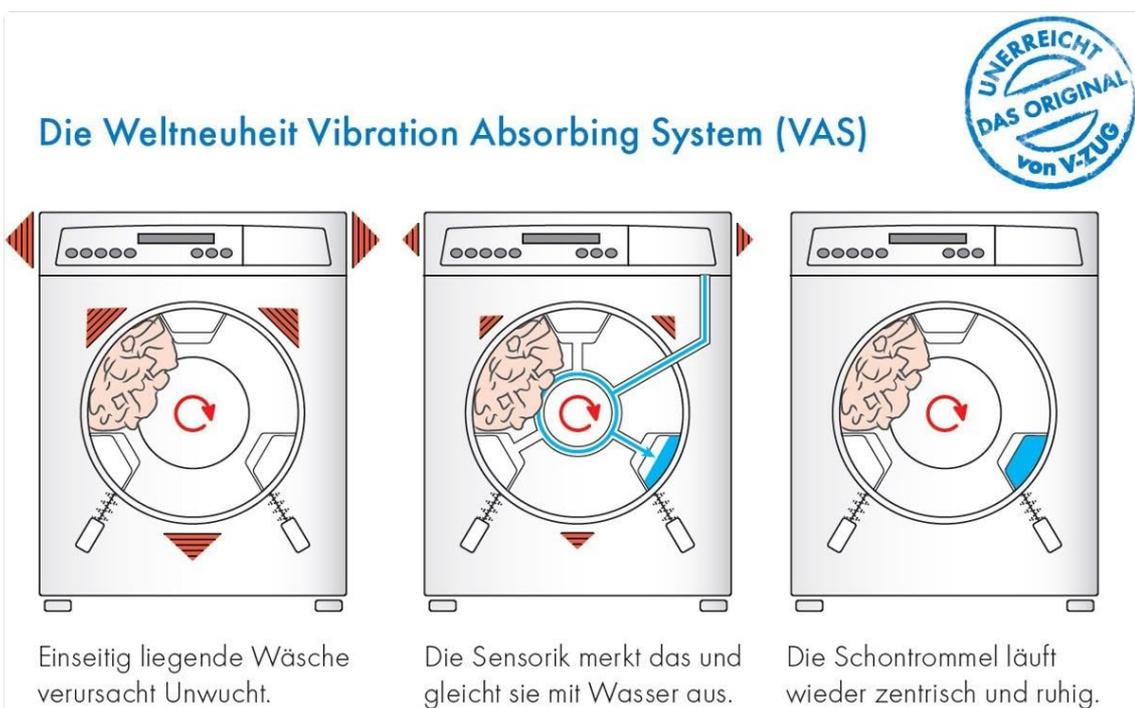


Figure 6: Diagram explaining the Vibration Absorbing System (VAS). It shows how the system detects unbalanced

MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

1. Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and dry thoroughly before reinserting.

2. Cleaning the Drum

Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) monthly to prevent odors and mold buildup.

3. Cleaning the Filter

Locate the drain pump filter (usually at the bottom front of the machine). Open the cover, place a shallow container underneath to catch water, and carefully unscrew the filter. Clean any lint or debris and screw it back in securely.

4. Exterior Care

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

Before contacting customer service, refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.
Excessive vibration	Uneven load; Machine not level; Transit bolts not removed.	Redistribute laundry; Adjust leveling feet; Remove all transit bolts.
Water leakage	Loose hose connections; Clogged drain filter.	Tighten water inlet/drain hoses; Clean the drain filter.
Detergent residue in dispenser	Too much detergent; Low water pressure; Clogged dispenser.	Use less detergent; Check water supply; Clean dispenser drawer.

SPECIFICATIONS

Feature	Detail
Model	Adora S
Installation Type	Freestanding
Color	White
Control Type	Push Button
Door Type	Front-loading
Material	Steel
Operating Mode	Fully Automatic
Cycle Options	Delicate, Cotton, Eco, Speed Wash
Detergent Dispenser Options	Automatic detergent dispenser

WARRANTY AND SUPPORT

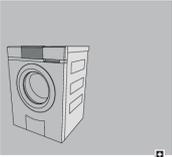
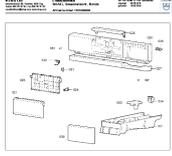
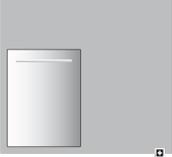
Your V-Zug Adora S washing machine comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and what is covered.

For technical support, service requests, or to order spare parts, please contact V-Zug customer service. Contact details can typically be found on the V-Zug official website or on your purchase documentation. When contacting support, please have your appliance's model number (Adora S) and serial number ready. The serial number is usually located on a label inside the door frame or on the back of the appliance.

© 2024 V-Zug. All rights reserved.

This manual is for informational purposes only. V-Zug reserves the right to make changes to product specifications without prior notice.

Related Documents - Adora S

 <p>Operating instructions Adora L Washing machine</p>	<p>V-ZUG Adora L Washing Machine Operating Instructions</p> <p>Comprehensive operating instructions for the V-ZUG Adora L washing machine, covering safety precautions, program selection, operation, care, troubleshooting, and technical data.</p>
 <p>Operating instructions Adora SL fully integrated and design integrated Dishwasher</p>	<p>V-ZUG WAASL Ersatzteilliste und technische Übersicht</p> <p>Finden Sie detaillierte Ersatzteillisten und technische Diagramme für V-ZUG WAASL Waschmaschinen (Artikelnummer 1101202002), einschließlich Komponenten für die Gesamtansicht, Verkleidung, Bottich, Trommel und Wasseranschlüsse.</p>
 <p>Operating instructions Adora SL fully integrated and design integrated Dishwasher</p>	<p>V-ZUG Adora SL Dishwasher: Operating Instructions & Guide</p> <p>Comprehensive operating instructions for the V-ZUG Adora SL series of dishwashers, covering installation, usage, care, troubleshooting, and technical data for fully integrated and design integrated models.</p>
 <p>Operating instructions Adora S Washing machine</p>	<p>V-ZUG Adora S Washing Machine: Operating Instructions & User Guide</p> <p>Comprehensive operating instructions and user guide for the V-ZUG Adora S washing machine. Learn about features, programs, safety precautions, maintenance, and troubleshooting for optimal performance.</p>
 <p>Operating instructions Adora S integrated, design-integrated, fully integrated Dishwasher</p>	<p>V-ZUG Adora S Dishwasher: Operating Instructions and User Manual</p> <p>Comprehensive operating instructions and user manual for the V-ZUG Adora S integrated, design-integrated, and fully integrated dishwashers. Learn about setup, operation, maintenance, troubleshooting, and technical specifications.</p>
 <p>Operating instructions V-ZUG-Home</p>	<p>V-ZUG-Home Operating Instructions: Connect and Control Your Appliances</p> <p>Comprehensive operating instructions for V-ZUG-Home, detailing how to connect, configure, and use your V-ZUG appliances remotely via LAN or WLAN. Includes safety information, troubleshooting, and support.</p>

