

DURO 970052

DURO 30 Gallon 2-Ply Paper Lawn and Leaf Bags

INSTRUCTION MANUAL

1. Setup and Preparation

These DURO 30 Gallon 2-Ply Paper Lawn and Leaf Bags are designed for collecting yard waste. Each package contains 25 bags, bundled for transport and storage.



Image 1.1: A stack of 25 DURO 30 Gallon 2-Ply Paper Lawn and Leaf Bags, as typically received in packaging.

1. **Unpack the Bags:** Carefully remove the yellow straps or any packaging material securing the stack of bags.
2. **Prepare for Use:** Take one bag from the stack. The bags are designed to be self-standing. Gently unfold the bag and push the bottom flat to create a stable base.
3. **Open the Bag:** Separate the top edges of the bag to fully open the mouth. The bag should stand upright on its own, ready for filling.



Image 1.2: A single DURO bag unfolded and standing upright, ready for yard waste collection.

2. Operating Instructions

These bags are suitable for collecting various types of yard waste, such as leaves, grass clippings, and small branches.

1. **Position the Bag:** Place the open bag in a convenient location for collecting yard waste. Its self-standing design allows it to remain open without external support.
2. **Fill the Bag:** Carefully place leaves, grass clippings, and other yard debris into the bag. Distribute

the contents evenly to maintain stability.

3. **Observe Capacity:** Do not overfill the bag. The bag has a 30-gallon capacity. There is a fill line indicated on the bag; do not fill beyond this line to ensure proper closure and prevent tearing.
4. **Close the Bag:** Once filled to the appropriate level, fold the top edges of the bag down several times to seal the contents. This helps to secure the waste and prevent spillage during transport.



Image 2.1: A DURO bag positioned in a yard, demonstrating its self-standing capability for collecting leaves.

3. Maintenance and Storage

Proper handling and storage ensure the longevity and effectiveness of unused bags.

- **Storage:** Store unused bags in a dry environment, away from moisture and direct sunlight. This prevents degradation of the paper material.
- **Disposal:** These bags are made from paper and are recyclable. Check with your local waste management facility for specific guidelines on yard waste and paper bag disposal.

4. Troubleshooting

Issue	Possible Cause	Solution
Bag tears during filling or lifting.	Overfilling, sharp objects, or excessive moisture.	Avoid exceeding the fill line. Do not place sharp objects directly into the bag without protection. Minimize exposure to excessive moisture.
Bag does not stand upright.	Improper unfolding or uneven ground.	Ensure the bottom of the bag is fully flattened. Place the bag on a level surface.
Bag becomes soggy or disintegrates.	Prolonged exposure to rain or wet contents.	Use bags for dry yard waste when possible. If collecting wet materials, dispose of them promptly to prevent bag degradation. Store unused bags in a dry area.

5. Specifications

Feature	Detail
Brand	DURO
Model Number	970052
Capacity	30 Gallons
Ply	2-Ply
Material	Paper (Biodegradable)
Unit Count	25 Bags
Recommended Use	Yard Waste
Item Dimensions (L x W x H)	15 x 12 x 10 inches (packaged)
UPC	079594113311

6. Warranty Information

DURO products are manufactured to high standards. If you encounter any issues with product quality or defects, please retain your proof of purchase and contact customer support for assistance. Specific warranty details may vary; please refer to the manufacturer's official website or contact support for the most current information.

7. Customer Support

For further assistance, questions, or to report product issues, please contact DURO customer support:

- **Manufacturer:** Duro Bag
- **Phone:** 1-800-879-3876
- **Address:** 7600 Empire Drive, Florence, KY 41042, Made in U.S.A.
- **Online:** Visit the [DURO Store on Amazon](#) for more product information and contact options.

