

[Manuals.plus](#) /

› [Timex](#) /

› Timex Men's Ironman Classic 30 38mm Watch Instruction Manual

Timex T5K822

Timex Men's Ironman Classic 30 38mm Watch Instruction Manual

Model: T5K822

1. OVERVIEW

The Timex Men's Ironman Classic 30 38mm Watch is a durable and functional digital timepiece designed for active individuals. It features a 100-hour chronograph, 30-lap memory, 24-hour countdown timer, multiple alarms, dual time zones, and the INDIGLO backlight for clear visibility in low light conditions. This manual will guide you through its various functions and maintenance.



Figure 1: Front view of the Timex Ironman Classic 30 38mm Watch.

2. SETUP

2.1 Initial Time and Date Setting

1. Press the **MODE** button repeatedly until the time setting screen appears.
2. Use the **SET/RECALL** button to select the digit you wish to adjust (hours, minutes, seconds, month, day, year).
3. Use the **START/SPLIT** button to increase the selected value.
4. Press **MODE** to confirm and exit the setting mode.

2.2 Button Functions

- **MODE:** Cycles through watch functions (Time, Chronograph, Timer, Alarm).
- **SET/RECALL:** Used to set values in setting modes and recall lap times.
- **INDIGLO:** Activates the backlight for the display.
- **STOP/RESET:** Stops the chronograph/timer and resets values.
- **START/SPLIT:** Starts the chronograph/timer and records split/lap times.



Figure 2: Angled front view of the watch, highlighting the function buttons.

3. OPERATING INSTRUCTIONS

3.1 Chronograph Function

The 100-hour chronograph measures elapsed time with lap or split timing. It includes a 30-lap memory recall and a 99-lap counter.

1. Press **MODE** until "CHRONO" appears on the display.
2. Press **START/SPLIT** to begin timing.
3. Press **START/SPLIT** again to record a lap or split time. The display will show the lap time while the chronograph continues to run in the background.
4. Press **STOP/RESET** to pause the chronograph. Press again to resume.

5. To reset, press and hold **STOP/RESET**.

3.2 Countdown Timer

The 24-hour countdown timer features countdown/stop and countdown/repeat options.

1. Press **MODE** until "TIMER" appears.
2. Use **SET/RECALL** and **START/SPLIT** to set the desired countdown duration.
3. Press **START/SPLIT** to begin the countdown.
4. To pause, press **STOP/RESET**. Press again to resume.
5. To reset, press and hold **STOP/RESET**.

3.3 Alarms

The watch includes three customizable alarms (daily, weekday, or weekend).

1. Press **MODE** until "ALARM" appears.
2. Use **SET/RECALL** to select an alarm (ALA 1, ALA 2, ALA 3).
3. Use **SET/RECALL** and **START/SPLIT** to set the alarm time and frequency (daily, weekday, weekend).
4. Press **MODE** to activate the alarm. An alarm icon will appear on the display.

3.4 INDIGLO Backlight

Press the **INDIGLO** button (top right) to illuminate the watch display for enhanced visibility in low-light conditions.

Your browser does not support the video tag.

Video 1: A brief overview of the Timex Men's T5K822 Ironman Classic 30 Black Resin Strap Watch, demonstrating its features and design.

4. MAINTENANCE

4.1 Water Resistance

The watch is water-resistant up to 100 meters (330 feet). This makes it suitable for showering, swimming, and snorkeling. However, it is not recommended for scuba diving. Do not press any buttons while the watch is submerged to prevent water ingress.

4.2 Cleaning

Clean the watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the case or strap.

4.3 Battery Replacement

The watch uses 1 Lithium Metal battery (included). Battery replacement should ideally be performed by a qualified watch technician to ensure water resistance is maintained. If attempting self-replacement, note that some models may feature specialized screws (e.g., triangle head screws) requiring specific tools.



Figure 3: Back view of the watch, showing the case back.

5. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, refer to specific model instructions for lock features). If the issue persists, a reset may be required (consult the full manual or contact support).
- **Incorrect time/date:** Re-enter the time and date settings as described in Section 2.1.
- **Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to open it yourself, as this may void the warranty and cause further damage.

6. SPECIFICATIONS

Model Number	T5K822
Case Diameter	38mm
Case Material	Resin
Strap Material	Resin
Water Resistance	100 meters (330 feet)
Battery Type	Lithium Metal (included)
Chronograph	100-hour with lap/split, 30-lap memory, 99-lap counter
Timer	24-hour countdown with stop/repeat
Alarms	3 daily, weekday, or weekend alarms
Backlight	INDIGLO

Your browser does not support the video tag.

Video 2: A short promotional video from Timex Corporation showcasing the Ironman Classic series.

7. WARRANTY AND SUPPORT

Your Timex watch is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty details, including duration and coverage, please refer to the warranty card included with your purchase or visit the official Timex website. For technical support, service, or inquiries, please contact Timex customer service directly.

Timex Official Website: www.timex.com