



Manuals.plus /

› Tchibo /

› TCM Tchibo Digital Radio Clock with Motion Sensor, LCD, and Crescendo Alarm - Instruction Manual

Tchibo B00LXY3NEW

TCM Tchibo Digital Radio Clock with Motion Sensor, LCD, and Crescendo Alarm

Model: B00LXY3NEW

INTRODUCTION

Thank you for choosing the Tchibo Digital Radio Clock. This device combines a precise digital clock with a radio function and a convenient motion sensor for display illumination. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance and longevity of your product.

SAFETY INSTRUCTIONS

- Read all instructions carefully before use and retain for future reference.
- Do not expose the device to water, high humidity, or extreme temperatures.
- Use only the specified battery type. Ensure correct polarity when inserting batteries.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep out of reach of children.
- Dispose of batteries responsibly according to local regulations.

PACKAGE CONTENTS

Please check that all items are present in your package:

- Tchibo Digital Radio Clock (1 unit)
- Instruction Manual (this document)
- *Note: Batteries are not included and must be purchased separately.*

PRODUCT OVERVIEW

Familiarize yourself with the main components of your radio clock:



Image 1: Front view of the Tchibo Digital Radio Clock. The image displays the rectangular anthracite-colored clock with a clear LCD screen in the center. Below the screen, several control buttons are visible, likely for setting time, alarm, and radio functions. The overall design is modern and compact, suitable for a bedside table.

- **LCD Display:** Shows time, alarm status, and radio frequency.
- **Motion Sensor:** Activates display backlight when motion is detected nearby.
- **Control Buttons:** (e.g., SET, ALARM, MODE, TUNING, SNOOZE) - Specific button functions will be detailed in the "Operating" section.
- **Battery Compartment:** Located on the back or bottom of the unit.

SETUP

1. Powering On (Battery Installation)

1. Locate the battery compartment cover on the back or bottom of the clock.
2. Open the cover.
3. Insert the required batteries (e.g., 2x AA or AAA, refer to the compartment label) ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.
5. The display should now light up, and the clock will attempt to synchronize the time automatically.

2. Initial Time Synchronization

Your radio clock is designed to automatically synchronize with a radio time signal. This process may take a few minutes, especially during the first setup or after battery replacement. Ensure the clock is placed near a window or in an area with good reception.

- During synchronization, an icon (e.g., an antenna symbol) may flash on the display.
- Once synchronized, the icon will become solid, and the correct time will be displayed.

3. Manual Time Setting (If Automatic Fails)

If the clock fails to synchronize automatically or if you wish to set the time manually:

1. Press and hold the **SET** button for approximately 3 seconds until the hour digits start flashing.
2. Use the **UP** or **DOWN** buttons (or similar, depending on model) to adjust the hour.
3. Press **SET** again to confirm the hour and move to the minute setting.
4. Adjust the minutes using the **UP** or **DOWN** buttons.
5. Press **SET** to confirm and exit the time setting mode.

4. Setting the Alarm

Your clock features a Crescendo alarm, which gradually increases in volume.

1. Press and hold the **ALARM** button for approximately 3 seconds until the alarm hour digits flash.
2. Use the **UP** or **DOWN** buttons to set the desired alarm hour.
3. Press **ALARM** again to confirm the hour and move to the minute setting.
4. Adjust the alarm minutes using the **UP** or **DOWN** buttons.
5. Press **ALARM** to confirm and exit alarm setting mode.
6. To activate/deactivate the alarm, briefly press the **ALARM** button. An alarm icon will appear/disappear on the display.

5. Radio Tuning

(Note: While the product is a "radio clock", specific radio tuning details are not provided. This section assumes basic functionality.)

1. Press the **RADIO** or **MODE** button to switch to radio mode.
2. Use the **TUNING** or **UP/DOWN** buttons to manually tune to your desired station.
3. Some models may have an auto-scan function; press and hold the **TUNING** button to activate it.

OPERATING

1. Display Features

- **LCD Display:** The main display shows the current time, and when active, the alarm time or radio frequency.
- **Motion Sensor Backlight:** The display is designed to be dim in normal conditions to avoid disturbing sleep. To illuminate the display, wave your hand over the top of the clock or activate the motion sensor area. The backlight will activate for a few seconds.

2. Alarm Functions

- **Crescendo Alarm:** When the alarm sounds, its volume will gradually increase over a short period to gently wake you up.
- **Snooze Function:** When the alarm sounds, press the **SNOOZE** button (usually a large button on top). The alarm will pause for a set period (e.g., 5-10 minutes) and then sound again.
- **Stopping the Alarm:** To turn off the alarm for the day, press any other button (e.g., **ALARM**, **SET**) while it is sounding. The alarm will reset for the next day if it is still activated.

3. Radio Functions

- **Switching to Radio:** Press the **RADIO** or **MODE** button to listen to the radio.
- **Volume Control:** Use dedicated **VOLUME +/-** buttons or the **UP/DOWN** buttons in radio mode to adjust the sound

level.

- **Switching Off Radio:** Press the **OFF** or **MODE** button again to return to clock display or turn off the radio.

MAINTENANCE

1. Cleaning

- Wipe the clock with a soft, dry, or slightly damp cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these can damage the surface and electronic components.
- Ensure no liquid enters the device.

2. Battery Replacement

- When the display becomes dim or functions become erratic, it's time to replace the batteries.
- Follow the "Powering On (Battery Installation)" steps in the Setup section to replace old batteries with new ones.
- Dispose of used batteries according to local environmental regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low or dead batteries; motion sensor not activated.	Replace batteries. Wave hand over the motion sensor area to activate backlight.
Time is incorrect or not synchronizing.	Poor radio signal; interference; initial synchronization failed.	Move the clock to a location with better reception (e.g., near a window). Perform manual time setting.
Alarm does not sound.	Alarm is not activated; alarm volume is too low.	Ensure the alarm icon is visible on the display. Check alarm settings and volume.
Radio reception is poor.	Weak signal; interference.	Adjust the clock's position. Extend any built-in antenna if available.

SPECIFICATIONS

Feature	Detail
Brand	Tchibo
Model	B00LXY3NEW
Color	Anthracite
Display Type	Digital LCD
Style	Modern
Special Features	Alarm, Radio, Motion Sensor, Crescendo Alarm
Power Source	Battery Powered
Shape	Rectangular
Frame Material	Acrylonitrile Butadiene Styrene (ABS)
Batteries Included	No
Mounting Type	Tabletop
Movement Type	Quartz

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or contact your retailer for specific warranty terms and conditions.

For technical support or service inquiries, please contact the retailer where you purchased the product or visit the official Tchibo website for customer service information.