

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SONGMICS](#) /

› [SONGMICS LLR41L Adjustable Garment Rack Instruction Manual](#)

SONGMICS LLR41L

SONGMICS LLR41L Adjustable Garment Rack

Instruction Manual

[Contents](#) [Setup](#) [Operation](#) [Introduction](#) [Safety Information](#) [Package](#)
[Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the SONGMICS LLR41L Adjustable Garment Rack. This manual provides essential information for the safe assembly, operation, and maintenance of your new garment rack. This product features a robust stainless steel frame, adjustable height and width, and four universal wheels for easy mobility. It is designed for organizing clothes, bags, and towels in various living spaces.



Image 1: Full view of the SONGMICS LLR41L Adjustable Garment Rack.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembling and using this product. Failure to follow these instructions may result in injury or damage to the product.

- Ensure all parts are securely fastened during assembly and before placing items on the rack.
- Do not exceed the maximum load capacity of 25 kg per rail to prevent tipping or collapse.
- Keep small parts and packaging materials away from children to avoid choking hazards.
- Use the garment rack on a flat, stable surface.
- Engage the wheel brakes when the rack is in a desired position to prevent accidental movement.
- Do not hang heavy items unevenly, as this may affect stability.

3. PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer service.



Image 2: Exploded view of components for assembly.

- (A) Base Connectors with Wheel Sockets (x2)
- (B) Horizontal Tubes (x3)
- (C) Wheels with Brakes (x2)
- (D) Wheels without Brakes (x2)
- (E) Vertical Support Tubes (x4)
- (F) Extendable Rods (x2)

- Plastic Connectors/Clamps (various)
- Assembly Instructions Manual

4. SETUP (ASSEMBLY INSTRUCTIONS)

The SONGMICS LLR41L garment rack is designed for quick and easy assembly. Follow these steps:

1. **Attach Wheels to Base Connectors:** Insert the four wheels (2 with brakes C, 2 without brakes D) into the designated sockets on the two base connectors (A). Ensure the two wheels with brakes are positioned on one side for easy access.
2. **Assemble the Base:** Connect the two base connectors (A) using one of the horizontal tubes (B).
3. **Insert Lower Vertical Support Tubes:** Insert the lower sections of the vertical support tubes (E) into the base connectors (A).
4. **Attach Lower Horizontal Bar:** Connect the middle horizontal tube (B) between the lower vertical support tubes (E) using the plastic connectors.
5. **Insert Upper Vertical Supports:** Insert the upper sections of the vertical support tubes (E) into the lower ones.
6. **Attach Upper Horizontal Bar:** Connect the remaining horizontal tube (B) between the upper vertical support tubes (E) using the plastic connectors.
7. **Insert Extendable Rods:** Slide the extendable rods (F) into the ends of the upper horizontal tube (B).
8. **Adjust Height and Width:** Loosen the plastic clamps to adjust the height of the vertical tubes and the width of the extendable rods as desired. Tighten clamps securely after adjustment.

Refer to the included assembly diagram (Image 2) for visual guidance during each step.

5. OPERATION

5.1 Adjusting Height and Width

The garment rack offers adjustable height and width to accommodate various clothing lengths and quantities.

- **Height Adjustment:** Loosen the plastic clamps on the vertical support tubes. Slide the tubes up or down to achieve the desired height (from 113 cm to 198 cm). Securely tighten the clamps once adjusted.
- **Width Adjustment:** Pull the extendable rods at each end of the upper horizontal bar outwards to increase the width (from 101 cm to 166 cm). Push them inwards to decrease the width. Ensure they are evenly extended and securely in place before loading.

Regolabile in altezza e larghezza

Soddisfa le tue diverse esigenze


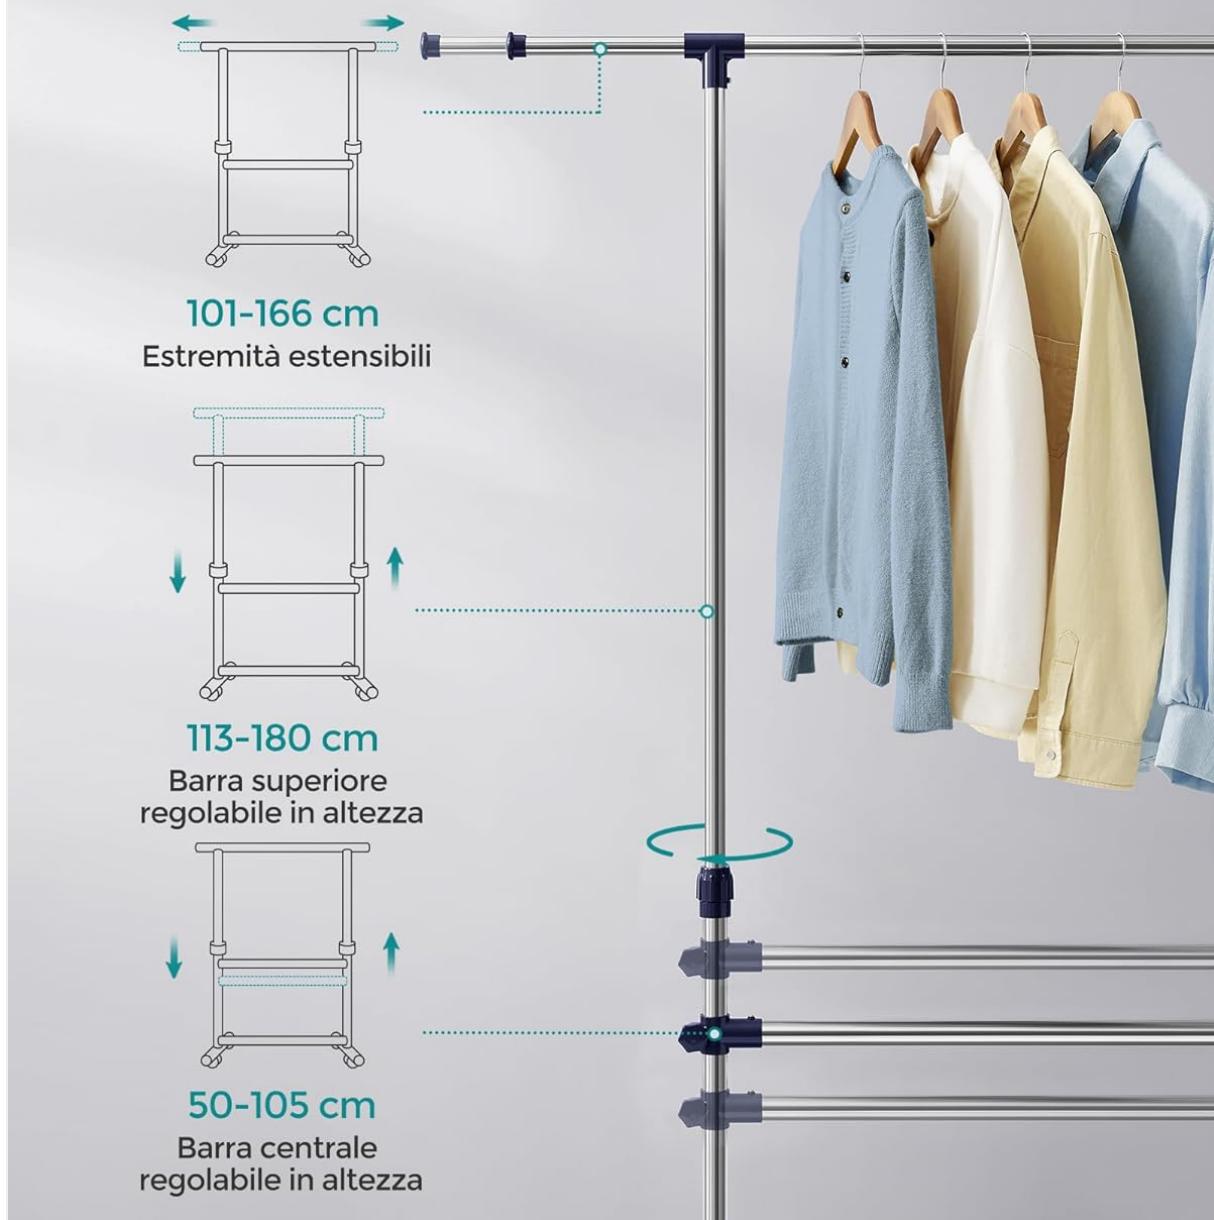


Image 3: Illustration of height and width adjustment mechanisms.

5.2 Using the Wheels and Brakes

The garment rack is equipped with four universal wheels for easy movement. Two of these wheels include brakes for stability.

- **Moving the Rack:** Ensure the brakes on the two wheels are disengaged (unlocked position). Gently push or pull the rack to its desired location.
- **Securing the Rack:** Once the rack is in position, press down on the levers of the two braking wheels to engage the brakes (locked position). This will prevent the rack from moving unintentionally.

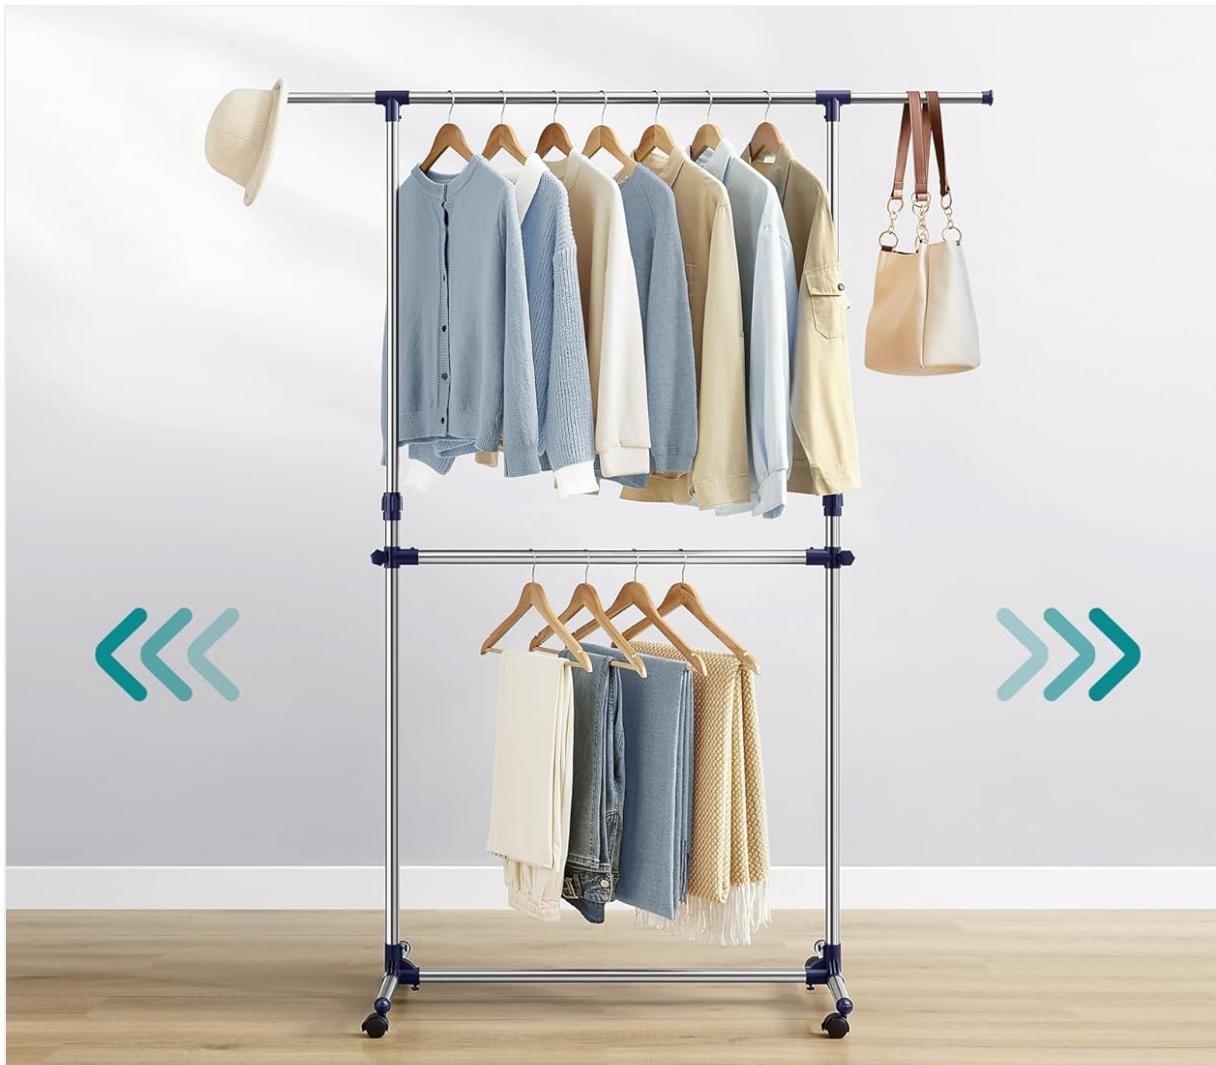

Facile da spostare con 4 ruote

- Girevoli a 360°
- 2 ruote con freno



Image 4: Detail of the 360-degree swivel wheels, including two with locking brakes.

5.3 Load Capacity

The garment rack is designed for stability and can support a significant amount of clothing. Each rail has a maximum load capacity of 25 kg. The scientific structure ensures stability even when fully loaded.

50 kg

Appende stabilmente
tanti abiti



**Robusto tubo in
acciaio ispessito**



Resistente
alla ruggine



Robusto

Diam. 25,4 mm



Image 5: Visual representation of the 50 kg total load capacity and robust 25.4 mm diameter steel tubes.



**Doppia barra,
doppio spazio**

**Un appendiabiti
per diverso
abbigliamento**



Image 6: Example of using both upper and lower bars for different types of clothing.

6. MAINTENANCE

Regular maintenance will help prolong the life of your garment rack.

- **Cleaning:** Wipe the stainless steel tubes and plastic parts with a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals that could damage the finish.
- **Inspection:** Periodically check all connections and clamps to ensure they remain tight and secure. Retighten if necessary.
- **Wheel Care:** Keep the wheels free of dust and debris to ensure smooth movement.

7. TROUBLESHOOTING

If you encounter any issues with your garment rack, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Loose connections; uneven load distribution.	Ensure all plastic clamps and tube connections are securely tightened. Distribute clothing weight evenly across the rails.
Wheels do not roll smoothly.	Brakes engaged; debris in wheels.	Check that the wheel brakes are disengaged. Clean any dust or debris from the wheel casters.
Difficulty adjusting height or width.	Clamps are too tight; tubes are stuck.	Loosen the plastic clamps sufficiently before attempting to adjust. Ensure tubes are clean and free of obstructions.
Rack tips over.	Overloaded; uneven surface.	Do not exceed the maximum load capacity of 25 kg per rail. Place the rack on a flat, level surface.

8. SPECIFICATIONS

Brand:	SONGMICS
Model:	LLR41L
Material:	Stainless Steel Coated Tube, ABS Plastic Parts
Adjustable Height:	113 cm to 198 cm (44.5 inches to 78 inches)
Adjustable Width:	101 cm to 166 cm (39.8 inches to 65.4 inches)
Base Width:	49 cm (19.3 inches)
Load Capacity per Rail:	25 kg (55 lbs)
Wheels:	4 universal wheels (2 with brakes)



Image 7: Detailed dimensions and load capacity overview.

9. WARRANTY & SUPPORT

Warranty Information: Please refer to your purchase documentation or the retailer's website for specific warranty details regarding the SONGMICS LLR41L garment rack.

Customer Support: For any questions, missing parts, or assistance with assembly or operation, please contact SONGMICS customer service directly. Contact information can typically be found on the product packaging or the official SONGMICS website.

