

[Manuals.plus](#) /

› [Power Wheels](#) /

› Power Wheels Disney Frozen Jeep Wrangler Ride-On Vehicle User Manual

Power Wheels Frozen Jeep Wrangler

Power Wheels Disney Frozen Jeep Wrangler Ride-On Vehicle User Manual

Model: Frozen Jeep Wrangler

Brand: Power Wheels

PRODUCT OVERVIEW

The Power Wheels Disney Frozen Jeep Wrangler is a battery-powered ride-on toy designed for preschool children aged 3-7 years. This vehicle features vibrant colors and graphics inspired by Disney's Frozen, along with realistic Jeep Wrangler styling. It includes a 12-volt rechargeable battery for extended play.

Key features include two forward speeds (2.5 mph and 5 mph) with a parent-controlled high-speed lockout, reverse driving, and a Power-Lock brake system. The multi-terrain traction allows the vehicle to operate on hard surfaces, wet grass, and rough terrain. For entertainment, it plays songs from the movie and produces realistic driving sounds. The vehicle is designed to seat two children and has a maximum weight capacity of 130 lbs (59 kg). A convenient storage area is also included for toys.



Figure 1: Power Wheels Disney Frozen Jeep Wrangler Ride-On Vehicle with its 12-volt rechargeable battery.

SAFETY INFORMATION

Always ensure children are supervised while operating the ride-on vehicle. Read all instructions before use. Do not allow children to operate the vehicle near streets, swimming pools, or steep inclines. Ensure the vehicle is used on appropriate terrain as specified. Always use the parent-controlled high-speed lockout for younger or less experienced drivers.

- Adult supervision is required at all times.
- Ensure the battery is properly installed and charged before each use.
- Do not overload the vehicle beyond the maximum weight capacity of 130 lbs (59 kg).

- Keep hands, hair, and loose clothing away from moving parts.

SETUP AND ASSEMBLY

The Power Wheels Disney Frozen Jeep Wrangler requires assembly before first use. Follow the detailed instructions provided in the separate assembly guide that accompanies the product. Ensure all components are securely fastened. The stickers, including the Frozen graphics, should be applied carefully to avoid bubbles.

Battery Installation and Initial Charging

The 12-volt rechargeable battery is crucial for operation. Before the first use, the battery must be charged for at least 18 hours, but no more than 30 hours. Locate the battery compartment, typically in the front of the vehicle, and connect the battery as per the assembly instructions. Use only the charger provided with the product.



Figure 2: The 12-volt rechargeable battery for the Power Wheels Jeep.

After the initial charge, always recharge the battery for at least 14 hours, but no more than 30 hours, after each use or when the vehicle's performance diminishes. Overcharging or undercharging can reduce battery life.

OPERATING INSTRUCTIONS

Starting the Vehicle

To start the vehicle, ensure the battery is fully charged and properly connected. The vehicle is operated by a foot pedal. Press the pedal to engage the motor and move forward or in reverse.

Speed Control

The Jeep Wrangler offers two forward speeds: 2.5 mph and 5 mph. A parent-controlled high-speed lockout feature is included to limit the vehicle to the lower speed for younger drivers. Refer to the assembly guide for instructions on how to engage or disengage this lockout. The vehicle also has a reverse gear.



**FORWARD
AND REVERSE**



RECHARGEABLE
12-Volt Battery

3-7

YEARS
130 LB. MAX WEIGHT

Figure 3: Children enjoying the ride-on vehicle, demonstrating its two-seater capacity and forward/reverse capabilities.

Music and Sounds

The vehicle features an integrated sound system that plays fun songs from the Disney Frozen movie and realistic driving sounds. The radio unit is located on the dashboard. It operates on two AA batteries (included).



Sing along with songs from the movie!

Figure 4: The dashboard radio, which plays songs from the movie.

Storage Compartment

A convenient storage area is located at the rear of the vehicle, allowing children to carry small toys or belongings during their adventures.

MAINTENANCE

Battery Care

- Always recharge the 12-volt battery for at least 14 hours (but no more than 30 hours) after each use.
- Store the battery in a cool, dry place when not in use.
- Do not store the battery in temperatures below 0°F (-18°C) or above 75°F (25°C).
- If the vehicle will not be used for an extended period, charge the battery once a month to maintain its life.

General Cleaning

Clean the vehicle with a soft, damp cloth. Do not use abrasive cleaners or solvents. Avoid spraying water directly onto electrical components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vehicle does not move.	Battery not charged or improperly connected.	Check battery connection and charge the battery.
Vehicle moves slowly.	Low battery charge or overloaded.	Recharge battery. Reduce weight in vehicle.
Music/sounds not working.	AA batteries for radio are dead or missing.	Replace AA batteries in the radio unit.
Wheels spin on grass/rough terrain.	Lack of traction.	Ensure vehicle is used on suitable surfaces. Avoid very wet or loose terrain.

If problems persist, please contact Power Wheels customer support.

SPECIFICATIONS

- **Model:** Disney Frozen Jeep Wrangler Ride-On Vehicle
- **Battery:** 12-Volt, 12-Ah Rechargeable
- **Speeds:** 2.5 mph (forward), 5 mph (forward, with lockout removed), Reverse
- **Seating Capacity:** 2 children
- **Maximum Weight Capacity:** 130 lbs (59 kg)
- **Recommended Age:** 3-7 years
- **Features:** Music sounds, storage area, multi-terrain traction, Power-Lock brake system.

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included with your purchase or visit the official Power Wheels website. Keep your proof of purchase for warranty claims.

Power Wheels Official Website: www.fisher-price.com/power-wheels

© 2024 Power Wheels. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question