

[manuals.plus](#) /› [Frigidaire](#) /› [Frigidaire 134719300 Dryer Drive Belt: Installation and Maintenance Guide](#)**Frigidaire 134719300**

Frigidaire 134719300 Dryer Drive Belt: Installation and Maintenance Guide

1. PRODUCT OVERVIEW

The Frigidaire 134719300 Drive Belt is a genuine replacement part designed for various Frigidaire and Electrolux clothing dryer models. This belt is crucial for the proper rotation and tumbling action of the dryer drum, ensuring clothes are dried efficiently. If your dryer drum is not rotating, or if you hear unusual noises, the drive belt may need inspection or replacement.

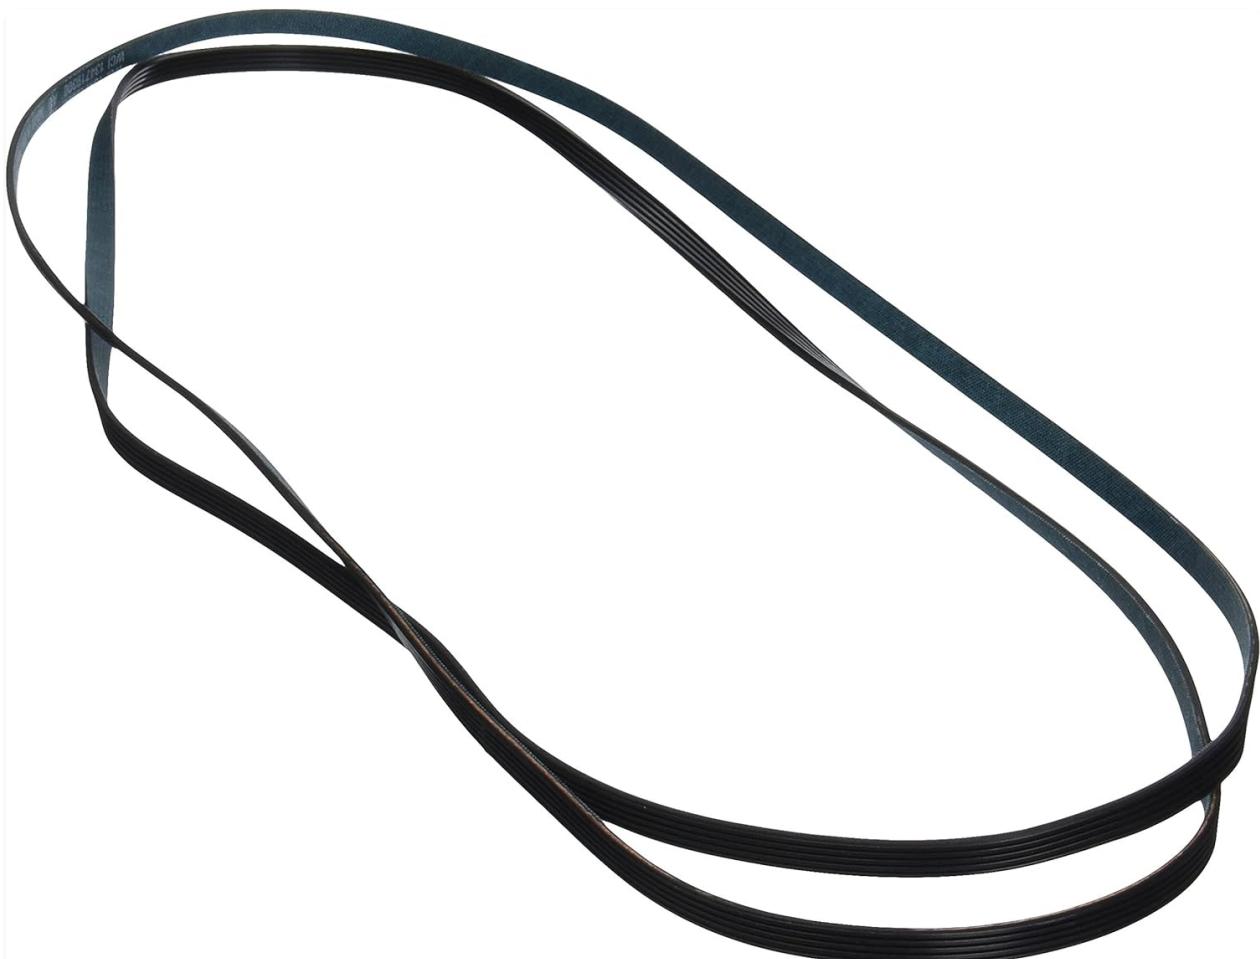


Image 1: The Frigidaire 134719300 Dryer Drive Belt, coiled for packaging.

Compatibility Note:

This drive belt is compatible with a variety of dryers from Frigidaire, Electrolux, and other brands. Always ensure the replacement part number matches your appliance's requirements before purchasing and installation.

Be Sure, Check First

Confirm part number
with appliance manufacturer.



FRIGIDAIRE®

Part # **134719300**
Drive Belt
Genuine OEM Replacement Parts

Image 2: Confirmation of the Frigidaire Part # 134719300 Drive Belt, emphasizing genuine OEM replacement parts.

2. PRODUCT SPECIFICATIONS

- **Brand:** Frigidaire
- **Model Info:** 134719300
- **Part Number:** 134719300
- **Item Weight:** Approximately 0.32 ounces (9.07 g)
- **Product Dimensions:** Approximately 1 x 11 x 15 inches (packaged)
- **Color:** Black
- **Compatible Devices:** Frigidaire Dryers (and other compatible Electrolux models)
- **Belt Style:** Drive Belt

134719300

Length: 88 inches
Width: 0.12 inches
Height: 0.25 inches



FRIGIDAIRE®

Image 3: Detailed dimensions for the 134719300 drive belt: Length 88 inches, Width 0.12 inches, Height 0.25 inches.

3. SAFETY INFORMATION

WARNING: Before attempting any repair or maintenance on your dryer, always disconnect the appliance from its power source to prevent electric shock or injury.

- Ensure the dryer is unplugged from the electrical outlet.
- Wear appropriate personal protective equipment, such as gloves, to protect your hands.
- If you are unsure about any step, consult a qualified appliance technician.

4. INSTALLATION INSTRUCTIONS

Replacing a dryer drive belt typically involves accessing the internal components of the dryer. The following steps provide a general guide. Specific models may vary, so always refer to your dryer's specific service manual if available.

Step 1: Prepare the Dryer

1. **Disconnect Power:** Unplug the dryer from the electrical outlet.

2. **Access Lint Filter:** Remove the lint filter from its housing.
3. **Remove Top Panel Screws:** Locate and remove any screws securing the top panel of the dryer. These are often found near the lint filter opening.
4. **Open Top Panel:** Carefully lift the top panel of the dryer and prop it open.

Step 2: Access the Drum and Motor

1. **Secure the Drum:** To prevent the drum from falling, you may use a coat hanger wire or similar tool to temporarily secure the drum to the dryer cabinet.
2. **Disconnect Door Switch Wiring:** Locate the door safety switch wiring harness and disconnect it.
3. **Remove Front Panel Screws:** Remove the screws that secure the front panel of the dryer.
4. **Remove Front Panel:** Carefully remove the front panel to expose the dryer drum and internal components.

Step 3: Replace the Drive Belt

1. **Remove Old Belt:** If the old belt is still partially intact, remove it from around the drum, idler pulley, and motor shaft.
2. **Remove Idler Pulley (if necessary):** If the idler pulley is damaged or needs replacement, remove it at this stage.
3. **Position New Belt on Drum:** Place the new drive belt around the dryer drum. You can use tape to temporarily hold it in place on the drum if needed.
4. **Install Belt on Idler Pulley and Motor Shaft:** Route the belt around the idler pulley and the motor shaft. Ensure the ribbed side of the belt is against the motor shaft and idler pulley. The idler pulley should apply tension to the belt.

Your browser does not support the video tag.

Video 1: A demonstration of installing a dryer drum drive belt, including routing it around the idler pulley and motor shaft. This video specifically mentions the 134719300 part number.

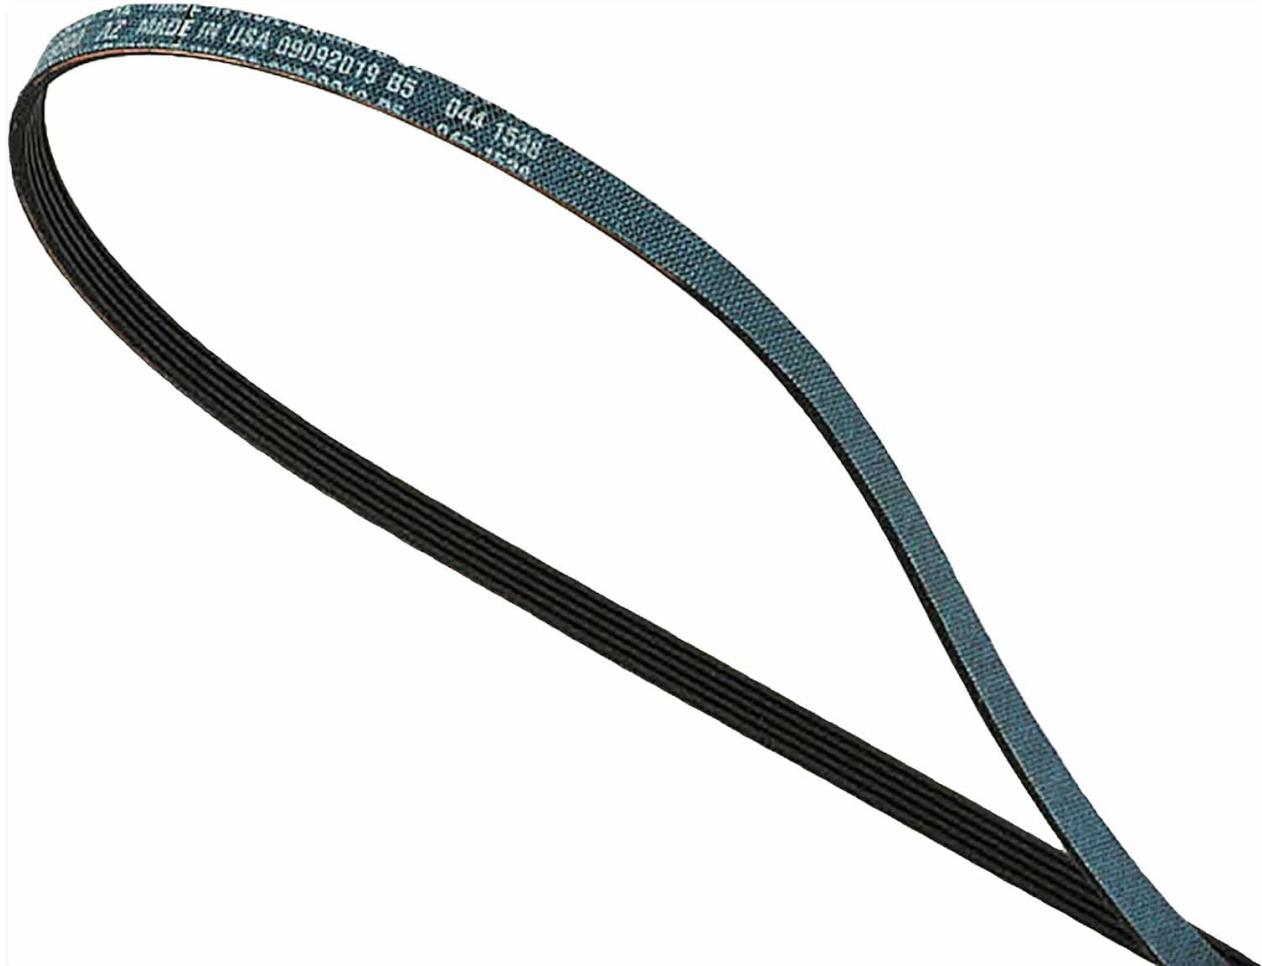


Image 4: Close-up view of the drive belt, highlighting its ribbed surface for proper grip on the motor shaft and idler pulley.

Step 4: Reassemble the Dryer

- 1. Remove Temporary Securing:** Remove any tape or wire used to hold the belt or drum in place.
- 2. Reinstall Front Panel:** Position the front panel back onto the dryer and secure it with its screws.
- 3. Reconnect Door Switch Wiring:** Reconnect the door safety switch wiring harness.
- 4. Close Top Panel:** Lower the top panel and press down firmly until it snaps into place.
- 5. Reinstall Lint Filter:** Place the lint filter back into its housing.
- 6. Reconnect Power:** Plug the dryer back into the electrical outlet.

5. MAINTENANCE

To ensure the longevity of your Frigidaire 134719300 Drive Belt and overall dryer performance:

- Regular Cleaning:** Periodically clean the lint filter before or after every load to maintain proper airflow and reduce strain on the motor and belt.
- Avoid Overloading:** Do not overload the dryer, as excessive weight can put undue stress on the drive belt, leading to premature wear and breakage.
- Inspect Annually:** Consider a visual inspection of the drive belt and other internal components annually for signs of wear, cracking, or fraying.

6. TROUBLESHOOTING

If your dryer is experiencing issues after belt replacement or during normal operation, consider these common

problems:

- **Dryer Drum Not Turning:** This is the most common symptom of a broken or dislodged drive belt. Re-check the belt installation and tension.
- **Loud Thumping or Squealing Noises:** Could indicate a worn-out drive belt, idler pulley, or drum rollers. Inspect these components for wear.
- **Dryer Starts but Stops Quickly:** May be related to a loose belt or an issue with the motor or thermal fuse.

For persistent issues, it is recommended to consult a professional appliance repair technician.

7. WARRANTY AND SUPPORT

This Frigidaire 134719300 Drive Belt is a genuine replacement part. For specific warranty information, please refer to the documentation provided with your purchase or contact Frigidaire customer support directly. Many genuine parts come with a manufacturer's warranty against defects.

For further assistance or inquiries, please contact your retailer or the official Frigidaire support channels.