

[Manuals.plus](#) /

› [ISYMPHONY Parts](#) /

› iSymphony TV Remote Control RC3008i User Manual

ISYMPHONY Parts RC3008I

iSymphony TV Remote Control RC3008i User Manual

Model: RC3008I

PRODUCT OVERVIEW

This manual provides instructions for the iSymphony TV Remote Control, model RC3008I. This original remote control is designed to work seamlessly with various iSymphony television models, ensuring full functionality and ease of use.

Compatible TV Models: LC40IF80, LED32IF50, LED42IF80, LED24IF80, LE24IF20, LC37IF80, LC32IH62.



Figure 1: The iSymphony RC3008i TV Remote Control, shown in its clear plastic packaging. The remote is black with white and grey buttons, featuring a central 'OK' button surrounded by directional controls. Numeric keys and function buttons like 'VOL+', 'CH+', 'MUTE', 'MENU', 'EXIT', 'CC', 'MTS', 'EPG', and 'FAV' are clearly visible.

SETUP

1. Battery Installation

The iSymphony RC3008i remote control requires two AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent battery leakage.

2. Initial Connection

This remote control is an original replacement and typically requires no programming for compatible iSymphony TV models. Simply insert the batteries and point the remote towards your television's infrared receiver.

OPERATING INSTRUCTIONS

The RC3008i remote control provides full functionality for your iSymphony television. Below is a guide to its primary buttons and their functions.

Remote Control Button Functions

Button	Function
Power	Turns the TV on or off.
0-9 (Numeric Keys)	Direct channel selection.
VOL+ / VOL-	Increases or decreases the volume level.
CH+ / CH-	Changes the channel up or down.
MUTE	Mutes or unmutes the TV audio.
MENU	Accesses the TV's main menu.
OK	Confirms selections within menus.
Directional Arrows	Navigates through menus and options.
EXIT	Exits the current menu or screen.
CC (Closed Caption)	Toggles closed captions on or off.
MTS (Multi-channel Television Sound)	Selects audio modes (e.g., Stereo, SAP).
EPG (Electronic Program Guide)	Displays the electronic program guide.
FAV (Favorites)	Accesses favorite channels list.

MAINTENANCE

Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote not responding.	Batteries are dead or inserted incorrectly: Replace batteries, ensuring correct polarity (+/-). Obstruction between remote and TV: Ensure a clear line of sight to the TV's infrared sensor. Remote is too far from the TV: Move closer to the television.
Some buttons not working.	Dirty contacts: Clean the remote control as described in the Maintenance section. Internal damage: If cleaning and battery replacement do not resolve the issue, the remote may be damaged and require replacement.
TV not responding to specific functions (e.g., volume, channel).	TV model incompatibility: Verify your TV model is listed as compatible with the RC3008i. TV settings: Check your TV's settings to ensure no features are disabled or configured in a way that prevents remote control interaction.

If troubleshooting steps do not resolve the issue, please contact iSymphony customer support for further assistance.

SPECIFICATIONS

- Model Number:** RC3008I
- Brand:** ISYMPHONY Parts
- Compatible Devices:** Television (Specific iSymphony models: LC40IF80, LED32IF50, LED42IF80, LED24IF80, LE24IF20, LC37IF80, LC32IH62)
- Connectivity Technology:** Infrared
- Number of Buttons:** 25
- Special Feature:** Ergonomic design
- Item Weight:** 3.56 ounces
- Package Dimensions:** 10.98 x 3.23 x 1.97 inches
- Date First Available:** July 23, 2014

WARRANTY AND SUPPORT

For warranty information or technical support regarding your iSymphony RC3008i remote control, please refer to the documentation provided with your original television purchase or contact ISYMPHONY Parts customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Note: As an original replacement part, warranty terms may vary. Please retain your proof of purchase.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question