

Element JX8036A Version 2

Element TV Remote Control JX8036A Version 2

INSTRUCTION MANUAL

1. Product Overview

This manual provides essential information for the Element TV Remote Control JX8036A Version 2. This remote is an original replacement designed for various Element LCD TV models, ensuring full compatibility and functionality.

Brand: Element

Model: JX8036A Version 2



Figure 1: Front view of the Element TV Remote Control JX8036A Version 2.

2. Setup and Installation

2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: Replace batteries when the remote's response becomes sluggish or inconsistent. Do not mix old and new batteries, or different types of batteries.



Figure 2: Back view of the remote control showing the battery compartment.

3. Operating Instructions

This remote control is pre-programmed for compatible Element TV models. No additional setup is typically required after battery installation.

3.1 Basic Functions

- **Power (Red Button):** Turns the TV on or off.
- **Number Pad (0-9):** Directly enter channel numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the channel up or down.
- **MUTE:** Mutes or unmutes the TV audio.
- **SOURCE:** Cycles through available input sources (HDMI, AV, Component, etc.).
- **MENU:** Opens the TV's main menu.
- **Navigation Buttons (Up, Down, Left, Right):** Navigate through menu options.
- **OK:** Confirms selections in menus.
- **EXIT:** Exits the current menu or on-screen display.

- **INFO:** Displays current channel information.
- **SLEEP:** Sets the TV's sleep timer.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip):** Control media playback if supported by the TV and connected device.

4. Maintenance

4.1 Battery Replacement

Refer to Section 2.1 for detailed instructions on replacing batteries. Always use fresh, high-quality AAA batteries for optimal performance.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as this can damage the remote's electronics.

5. Troubleshooting

5.1 Common Issues and Solutions

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries. Obstruction between remote and TV.	Replace batteries, ensuring correct polarity. Remove any objects blocking the remote's signal path to the TV's IR receiver.
Specific buttons not working	Dirt or debris under the button. Button malfunction.	Clean the remote's surface around the button. If issue persists, the button may be faulty, consider replacing the remote.
Limited functionality (e.g., only volume/channel work)	Remote not fully compatible with the specific TV model.	Verify your TV model is listed as compatible with JX8036A V2. Some older or newer Element models might require a different remote.

6. Specifications

Feature	Detail
Product Dimensions	6.9 x 1.1 x 0.7 inches
Item Weight	2.39 ounces
Item Model Number	4330248186
Manufacturer Part Number	845-045-06B04
Brand	Element

Feature	Detail
Color	Black
Max Number of Supported Devices	1
Compatible Devices	Television

7. Warranty and Support

For information regarding product warranty, technical support, or replacement parts, please refer to the official Element Electronics website or contact their customer service directly. Warranty terms and support options may vary based on your region and purchase date.