

Zojirushi EC-AK60-TD

Zojirushi EC-AK60-TD 6-Cup Drip Coffee Maker

Instruction Manual

Safety

[Precautions](#)[Parts](#)[Setup](#)[Operation](#)[Maintenance
Support](#)[Troubleshooting](#)[Specifications](#)[Warranty &](#)

INTRODUCTION

Thank you for purchasing the Zojirushi EC-AK60-TD Drip Coffee Maker. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFETY PRECAUTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

- Scalding may occur if the lid is removed during the brewing cycles.
- This appliance is for household use only.

PARTS IDENTIFICATION

Familiarize yourself with the components of your Zojirushi EC-AK60-TD coffee maker:

- **Main Unit:** Houses the heating element and control panel.
- **Water Tank:** Detachable for easy filling and cleaning.
- **Filter Case:** Removable basket for holding coffee grounds and filter.
- **Glass Carafe:** Collects brewed coffee.
- **Lid:** Covers the main unit and carafe.
- **Measuring Spoon:** For accurate coffee ground measurement.
- **Concentration Adjustment Lever:** Allows selection of brew strength.



This image provides a side view of the Zojirushi EC-AK60-TD coffee maker, showing its approximate dimensions: 28cm height, 23cm width, and 15.5cm depth. These measurements are useful for planning counter space.

SETUP AND FIRST USE

Before using your coffee maker for the first time, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and inspect the coffee maker for any damage.
2. **Clean Components:** Wash the removable water tank, filter case, and glass carafe with warm, soapy water. Rinse thoroughly and dry.
3. **Initial Rinse Cycle:** Fill the water tank to the maximum level with fresh water. Place the empty filter case and carafe in position. Run a brewing cycle without coffee grounds to clean the internal components. Discard the water.

はずせる水タンク

はずせる水タンクだから使うたびに洗えて清潔!

毎回の給水もお手入れもラクラク簡単。

給水に
便利!



This image illustrates the removable water tank of the Zojirushi EC-AK60-TD coffee maker being filled with water. The detachable design allows for easy filling directly from a tap and thorough cleaning, promoting hygiene and convenience.

はずせるフィルターケース

フィルターケースがはずせて便利!



The image demonstrates the ease of removing the filter case from the Zojirushi EC-AK60-TD coffee maker. The filter case slides out for convenient cleaning and coffee ground disposal, simplifying maintenance.

OPERATING INSTRUCTIONS

Follow these steps to brew coffee:


1. **Fill Water Tank:** Remove the water tank and fill it with fresh, cold water up to the desired number of cups indicated on the tank. Reattach the water tank securely.
2. **Add Coffee Grounds:** Place a #4 cone-shaped paper filter or the reusable filter (if included) into the filter case. Add the desired amount of coffee grounds. A general guideline is one level measuring spoon (approximately 7-10 grams) per cup.
3. **Select Brew Strength:** Adjust the concentration adjustment lever to your preferred strength: 'Regular' for a standard brew or 'Strong' for a more robust flavor.
4. **Position Carafe:** Ensure the glass carafe with its lid is correctly placed on the warming plate.
5. **Start Brewing:** Plug the coffee maker into a power outlet and press the power button to start the brewing cycle. The

indicator light will illuminate.

6. **Serving:** Once brewing is complete, the coffee maker will automatically switch to a keep-warm function. Carefully remove the carafe to pour coffee.

ダブル加熱95℃抽出※1

熱湯と蒸気で
豆を蒸らして、
95℃抽出。
水をヒーターで
2回加熱。

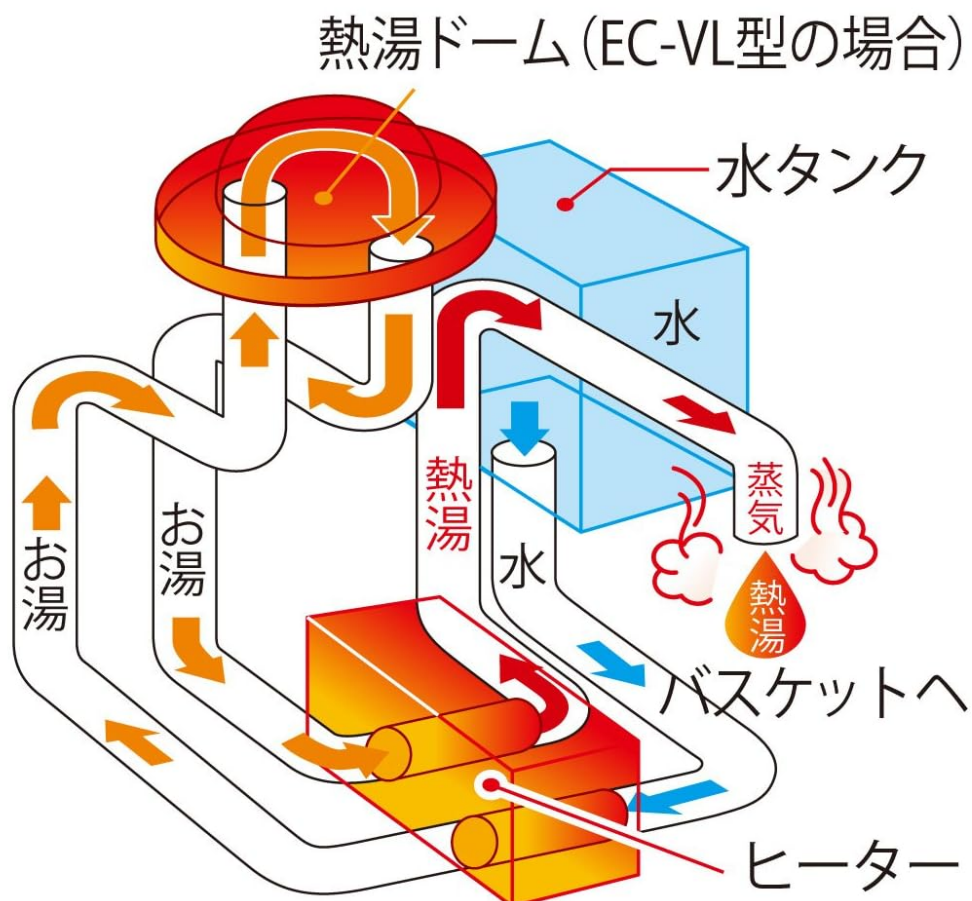

※1

コーヒー抽出温度安定時の最高温度が95℃以上。測定条件は、定格電力水温20℃ 室温20℃ 温度測定箇所は、ドリップしたバスケット内のコーヒー粉中央。

イラストはイメージ図です。

This diagram shows the internal mechanism of the Zojirushi EC-AK60-TD coffee maker, highlighting the double heating system that ensures coffee is brewed at an optimal 95°C. Water from the tank is heated twice, once to create steam and hot water for pre-steaming the coffee grounds, and again to maintain the brewing temperature as it passes through the coffee basket.

お好みの濃さに 抽出できる!

2段階濃度調節(レバー式)

普通

濃い

レギュラー(ふつう)

ストロング(こい)

調節レバー

A close-up view of the concentration adjustment lever on the Zojirushi EC-AK60-TD coffee maker. Users can select between 'Regular' and 'Strong' brew strengths to customize their coffee taste preference.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your coffee maker.

Daily Cleaning:

- Unplug the coffee maker and allow it to cool completely.
- Remove and discard used coffee grounds and filter.
- Wash the removable water tank, filter case, and glass carafe with warm, soapy water. Rinse thoroughly and dry.
- Wipe the exterior of the coffee maker with a damp cloth. Do not immerse the main unit in water.

Descaling (Monthly or as needed):

Mineral deposits can build up over time, affecting performance. Descale your coffee maker regularly:

1. Prepare a descaling solution using white vinegar and water (1:2 ratio) or a commercial descaling agent according to its instructions.
2. Fill the water tank with the descaling solution.
3. Place an empty paper filter in the filter case and position the empty carafe.
4. Run a brewing cycle. After about half the solution has brewed through, turn off the coffee maker and let it sit for 15-20 minutes to allow the solution to work.
5. Turn the coffee maker back on and allow the remaining solution to brew through.
6. Discard the solution and run two full cycles with fresh, clean water to rinse thoroughly.

TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew.	No power; water tank empty; carafe not in place.	Check power connection; fill water tank; ensure carafe is correctly positioned.
Coffee tastes weak.	Insufficient coffee grounds; incorrect brew strength setting; old coffee grounds.	Add more coffee grounds; select 'Strong' setting; use fresh coffee grounds.
Coffee overflows from filter.	Too many coffee grounds; filter clogged; carafe not in place.	Reduce coffee grounds; ensure filter is not clogged; check carafe position.
Brewing is slow.	Mineral buildup (scaling).	Perform a descaling cycle as described in the Maintenance section.

SPECIFICATIONS

Model Number	EC-AK60-TD
Brand	Zojirushi
Capacity	0.81 Liters (6 Cups)
Color	Brown
Special Feature	Programmable
Coffee Maker Type	Drip Coffee Machine
Wattage	650 watts
Voltage	100 Volts
Item Weight	1.7 kg
Filter Type	Reusable (#4 cone filter)

Operation Mode	Manual
Dishwasher Safe	No (Main unit)

WARRANTY AND SUPPORT

Zojirushi products are manufactured to high-quality standards. For warranty information, please refer to the warranty card included with your product or visit the official Zojirushi website. For technical support or service inquiries, please contact Zojirushi customer service.

Zojirushi Customer Service: Please refer to the contact information provided in your product packaging or on the official Zojirushi website for your region.

© 2023 Zojirushi Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question