

## EASYmaxx 09267

# EASYmaxx 09267 Color Changing Magic Light

## Instruction Manual

### INTRODUCTION

The EASYmaxx 09267 Color Changing Magic Light is a versatile, battery-operated LED light designed for both indoor and outdoor use. It features 10 LED lights, offers 15 different colors, 4 lighting programs, and is controlled via a remote. Its waterproof design allows for placement in various environments, including water features.

### SAFETY INSTRUCTIONS

- Always ensure the battery compartment is securely closed and sealed before placing the light in water or using it outdoors.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the device will not be used for an extended period to prevent leakage.
- Keep batteries out of reach of children.
- Do not expose the light to extreme temperatures or direct sunlight for prolonged periods.

### PACKAGE CONTENTS

Please check that all items are present:

- 1 x EASYmaxx 09267 Color Changing Magic Light Unit
- 1 x Remote Control

### SETUP

#### 1. Battery Installation (Light Unit)

1. Twist the bottom cover of the light unit counter-clockwise to open the battery compartment.

2. Insert **three (3) AAA 1.5V batteries** (not included) according to the polarity markings (+/-).
3. Ensure the rubber sealing ring is properly seated in its groove.
4. Replace the bottom cover and twist clockwise until it is securely tightened to ensure a waterproof seal.



Image: Top view of the light unit showing the battery compartment and the remote control. The light unit requires 3 AAA batteries, and the remote control requires 1 CR2 battery.

## 2. Battery Installation (Remote Control)

1. The remote control comes with one (1) CR2 battery pre-installed. Remove the plastic tab from the battery compartment to activate it.
2. If replacing the battery, slide open the battery tray on the back of the remote.
3. Insert a new **CR2 battery** with the correct polarity.
4. Close the battery tray securely.

## OPERATING INSTRUCTIONS

### Using the Remote Control

Point the remote control directly at the light unit to operate it.



Image: A single light unit emitting a blue glow, positioned next to its remote control. The remote allows for various color and mode selections.

- **ON/OFF:** Press the **ON** button to turn the light on, and the **OFF** button to turn it off.
- **Brightness Adjustment:** Use the **brightness up** and **brightness down** buttons to adjust the intensity of the light.
- **Color Selection:** Press any of the 15 color buttons (e.g., **R**, **G**, **B**, **W** for white) to select a static color.
- **Lighting Programs:**
  - **FLASH:** Rapidly cycles through colors.
  - **STROBE:** Flashes a single color.
  - **FADE:** Smoothly transitions between colors.
  - **SMOOTH:** A slower, more gradual transition between colors.



Image: Three light units displaying different colors (purple, yellow, and red), highlighting the product's color-changing feature.

## Placement

Due to its waterproof design, the light can be placed in various locations:

- **Indoor:** As indirect lighting for plants, table decorations, or in rooms.
- **Outdoor:** In gardens, on balconies, or in water features like ponds or vases.



Image: A single light unit emitting a pink glow, showcasing its use as a decorative element.

## MAINTENANCE

- **Cleaning:** Wipe the light unit with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries in both the light unit and remote control as needed. Follow the installation steps in the Setup section.
- **Storage:** Store the light in a cool, dry place when not in use. Remove batteries if storing for an extended period.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Dead or incorrectly installed batteries in the light unit.	Check battery polarity and replace with fresh AAA batteries. Ensure the battery compartment is securely closed.

Problem	Possible Cause	Solution
Remote control is not working.	Dead or incorrectly installed CR2 battery in the remote. Obstruction between remote and light.	Replace the CR2 battery in the remote. Ensure a clear line of sight to the light unit.
Light flickers or dims unexpectedly.	Low battery power.	Replace the AAA batteries in the light unit.
Water inside the light unit.	Battery compartment not sealed properly. Damaged sealing ring.	Immediately remove batteries. Allow the unit to dry completely. Ensure the sealing ring is clean, undamaged, and correctly seated before re-sealing. If damage persists, discontinue use.

## SPECIFICATIONS

- **Model Number:** 09267
- **Dimensions (L x W x H):** 7 x 7 x 3 cm
- **Weight:** Approximately 150 grams
- **Power Source (Light Unit):** 3 x AAA 1.5V batteries (not included)
- **Power Source (Remote Control):** 1 x CR2 battery (included)
- **Number of LEDs:** 10
- **Features:** 15 colors, 4 programs (Flash, Strobe, Fade, Smooth), Waterproof, Remote Control
- **Material:** Durable Plastic (Note: Product specification listed 'Glass' but visual inspection suggests plastic for waterproof functionality)
- **Usage:** Indoor and Outdoor

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact EASYmaxx customer service directly. Keep your proof of purchase for any warranty claims.