

[Manuals.plus](#) /

› [Monster](#) /

› Monster Adidas Limited Edition Over-Ear Headphones User Manual (Model 724091)

## Monster 724091

# Monster Adidas Limited Edition Over-Ear Headphones User Manual

Model: 724091

## INTRODUCTION

---

This manual provides essential instructions for the setup, operation, and maintenance of your Monster Adidas Limited Edition Over-Ear Headphones. Please read this manual thoroughly before using your headphones to ensure proper function and longevity.

## PACKAGE CONTENTS

---

Verify that all items are present in your package:

- Monster Adidas Limited Edition Over-Ear Headphones
- ControlTalk Cable (with in-line microphone and music controls)
- User Manual (this document)

## SETUP

---

### 1. Unfolding the Headphones

Your headphones feature a folding design for portability. Gently unfold the earcups until they are in the listening position. Ensure the headband is fully extended and locked into place for a secure fit.



Image: The Monster Adidas Over-Ear Headphones shown in their compact, folded configuration, ideal for storage and travel.

## 2. Connecting the Audio Cable

1. Locate the 3.5mm audio input jack on the bottom of the left earcup.
2. Insert one end of the ControlTalk cable into the headphone jack until it clicks securely.
3. Insert the other end of the ControlTalk cable into the 3.5mm audio output jack of your device (e.g., smartphone, tablet, laptop).



Image: A detailed view of the headphone's earcup, highlighting the 3.5mm audio input port where the ControlTalk cable connects.

## OPERATING INSTRUCTIONS

---

### Wearing the Headphones

Adjust the headband to ensure the earcups fully cover your ears. The ergonomic over-ear design and soft ear cushions provide comfort and contribute to effective noise isolation.



Image: The Monster Adidas Over-Ear Headphones displayed from a front-angled perspective, showcasing the yellow earcups and green-striped headband.

## Using ControlTalk Cable (for Apple Devices)

The ControlTalk cable is designed for seamless control with Apple devices. Its in-line remote and microphone allow for hands-free communication and music management.

- **Play/Pause Music:** Press the center button once.
- **Skip Track Forward:** Press the center button twice quickly.
- **Skip Track Backward:** Press the center button three times quickly.
- **Answer/End Call:** Press the center button once during an incoming call or active call.
- **Decline Call:** Press and hold the center button during an incoming call.

- **Activate Voice Control (Siri):** Press and hold the center button.

*Note: Functionality may vary slightly with non-Apple devices.*

## MAINTENANCE

### Cleaning

- Use a soft, dry cloth to clean the exterior surfaces of the headphones.
- Do not use liquid cleaners or aerosols directly on the headphones.
- Gently wipe ear cushions with a slightly damp cloth if necessary, then dry immediately.

### Storage

- When not in use, fold the headphones to their compact position to prevent damage.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid placing heavy objects on top of the headphones.

## TROUBLESHOOTING

| Problem                            | Possible Cause                                                                               | Solution                                                                                                               |
|------------------------------------|----------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|
| No sound                           | Cable not fully connected; device volume too low; incorrect audio output selected on device. | Ensure cable is securely plugged into both headphones and device. Increase device volume. Check device audio settings. |
| Poor sound quality                 | Damaged cable; dirty audio jack; low-quality audio source.                                   | Try a different audio cable. Clean audio jacks. Use a high-quality audio source.                                       |
| Microphone not working             | Cable not fully connected; device microphone settings.                                       | Ensure ControlTalk cable is fully inserted. Check microphone privacy settings on your device.                          |
| ControlTalk buttons not responding | Incompatibility with device; cable not fully connected.                                      | Verify device compatibility (optimized for Apple devices). Ensure cable is securely connected.                         |

## SPECIFICATIONS

- **Model Name:** 724091
- **Connectivity Technology:** Wired
- **Headphones Jack:** 3.5 mm Jack
- **Ear Placement:** Over Ear
- **Form Factor:** Over Ear
- **Noise Control:** Sound Isolation
- **Control Type:** Media Control (via ControlTalk cable)
- **Cable Feature:** Retractable (ControlTalk cable)
- **Frequency Range:** 20 Hz - 20,000 Hz
- **Compatible Devices:** Laptops, Desktops, Tablets, Telephones, Smart Speakers, Apple Devices

- **Special Features:** Foldable, Lightweight, iOS-phone-control
- **Product Dimensions:** 9.84 x 7.87 x 3.94 inches
- **Item Weight:** 1.87 pounds
- **UPC:** 050644724091

## WARRANTY INFORMATION

Monster products are designed and manufactured to the highest quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your purchase or visit the official Monster website. Please retain your proof of purchase for any warranty claims.

## CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact Monster customer support. You can find contact information on the official Monster website or through your retailer.

*Please have your product model number (724091) and proof of purchase ready when contacting support.*

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B00M40DY8Y>

More documents and user manuals: <https://manuals.plus/>