

## InnovaGoods IG104704

# InnovaGoods CuboQ IG104704 Power Bank with Speaker 3500 mAh

User Manual

## 1. IMPORTANT SAFETY INFORMATION

---

Please read these instructions carefully before using the device and retain them for future reference. Incorrect use may result in damage to the product or personal injury.

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.
- Keep the device away from water and other liquids.
- Do not attempt to disassemble, repair, or modify the device. This will void the warranty.
- Use only the provided or certified compatible charging cables.
- Keep out of reach of children.
- Dispose of the device responsibly according to local regulations for electronic waste.

## 2. PACKAGE CONTENTS

---

Ensure all items are present and in good condition upon unpacking.

- 1 x InnovaGoods CuboQ IG104704 Power Bank with Speaker
- 1 x USB to Micro USB Charging Cable
- 1 x Audio Cable (3.5mm jack)
- 1 x User Manual

## 3. PRODUCT OVERVIEW

---

The InnovaGoods CuboQ IG104704 is a portable power bank with an integrated speaker, designed to charge your mobile devices and play audio on the go. It features a compact, cylindrical design.



Image showing the InnovaGoods CuboQ IG104704 Power Bank with Speaker, highlighting its cylindrical design and port locations.

### Key Features:

- Portable Li-ion power bank with USB output.
- Integrated audio speaker.
- LED charge indicator.
- Protection against overcharge, discharge, and short-circuits.

## 4. SETUP

### 4.1 Initial Charging of the Power Bank

1. Connect the Micro USB end of the provided charging cable to the Micro USB input port on the power bank.
2. Connect the USB-A end of the charging cable to a USB power source (e.g., wall adapter, computer USB port).
3. The LED indicator will illuminate to show charging status. Allow the power bank to fully charge before first use.
4. Once fully charged, disconnect the cable.

## 5. OPERATING INSTRUCTIONS

### 5.1 Charging External Devices

1. Ensure the power bank is sufficiently charged.
2. Connect your device's charging cable (e.g., USB-A to Lightning, USB-A to USB-C, or USB-A to Micro USB) to the USB output port on the power bank.
3. Connect the other end of the cable to your smartphone, tablet, or other compatible device.
4. The power bank will automatically begin charging your device. The LED indicator may show activity.
5. Disconnect your device once charging is complete.

## 5.2 Using the Integrated Speaker

1. Connect one end of the provided audio cable (3.5mm jack) to the audio input port on the power bank.
2. Connect the other end of the audio cable to the headphone jack of your audio source device (e.g., smartphone, MP3 player, tablet).
3. Ensure your audio source device is playing music or audio.
4. Adjust the volume on your audio source device. The power bank speaker will play the audio.
5. To turn off the speaker, disconnect the audio cable.

## 6. MAINTENANCE

---

- Clean the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the power bank in a cool, dry place when not in use.
- If storing for extended periods, charge the power bank at least once every three months to maintain battery health.

## 7. TROUBLESHOOTING

---

### 7.1 Power Bank Not Charging

- Ensure the charging cable is securely connected to both the power bank and the power source.
- Try a different USB power source or wall adapter.
- Check if the charging cable is damaged; try a different cable if available.

### 7.2 Device Not Charging from Power Bank

- Ensure the power bank is charged.
- Verify that your device's charging cable is properly connected to both the power bank and your device.
- Try a different charging cable for your device.
- Some devices may require more power than the power bank can provide; check your device's power requirements.

### 7.3 Speaker Not Producing Sound

- Ensure the audio cable is securely connected to both the power bank and your audio source device.
- Check the volume level on your audio source device; increase it if necessary.
- Verify that your audio source device is playing audio.
- Try a different audio cable.

## 8. SPECIFICATIONS

---

<b>Model Number</b>	IG104704
<b>Capacity</b>	3500 mAh
<b>Power</b>	2 W
<b>Frequency Range</b>	200-20000 Hz

<b>Audio Output</b>	90 dB +/- 3
<b>Impedance</b>	4 ohms
<b>USB Input</b>	5 V / 1000 mA
<b>USB Output</b>	5 V / 1000 mA
<b>Approximate Dimensions</b>	14 cm (height) x 3 cm (diameter)
<b>Approximate Weight</b>	155 g
<b>Connectivity Technology</b>	USB
<b>Compatible Devices</b>	Smartphones, MP3 players, tablets, etc.

## 9. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For detailed warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer.

For technical support or customer service inquiries, please contact InnovaGoods customer support through their official website or the contact information provided by your retailer.