

[Manuals.plus](#) /

> [Rabbit](#) /

> Rabbit Automatic Electric Corkscrew Wine Bottle Opener (Metallic Red) - Model W6310 User Manual

Rabbit W6310

Rabbit Automatic Electric Corkscrew Wine Bottle Opener - Model W6310 User Manual

Your guide to effortless wine opening.

INTRODUCTION

Thank you for choosing the Rabbit Automatic Electric Corkscrew Wine Bottle Opener. This innovative device is designed to simplify the wine opening process, making it quick and effortless. Its sleek design and automatic operation ensure a smooth experience every time. This manual provides detailed instructions to help you get the most out of your new wine opener.

- Works on both natural and synthetic corks.
- Automatically removes and ejects corks without the need for buttons.
- Features a built-in foil cutter for convenience.
- Rechargeable via micro USB, with a single charge opening 30+ bottles.

PRODUCT OVERVIEW

The Rabbit Automatic Electric Corkscrew features a modern, ergonomic design that fits comfortably in your hand. Its compact form factor makes it easy to store and a stylish addition to any kitchen or bar.



The Rabbit Automatic Electric Corkscrew in Metallic Red, showcasing its sleek and compact design.



Automatic Electric Corkscrew

With its sleek design and unparalleled ease of use, uncorking your favorite wines becomes a delightful ritual. Perfect for romantic dinners or cozy evenings at home, this sophisticated tool ensures every bottle opens smoothly, allowing you to savor each enchanting moment. Elevate your wine experience and create lasting memories with the effortless elegance of the Rabbit Automatic Electric Corkscrew.



A hand demonstrating the ergonomic grip of the corkscrew, positioned above a wine bottle.

SETUP AND CHARGING

Charging the Device

Before first use, fully charge your Rabbit Automatic Electric Corkscrew. A single charge can open over 30 bottles of wine.

1. Remove the top cap of the corkscrew to reveal the micro-USB charging port.
2. Connect the included micro-USB cable to the port and plug the other end into a compatible USB power adapter (not included) or a computer USB port.
3. The indicator light will illuminate during charging and turn off when fully charged.
4. Replace the top cap after charging.

**No buttons
required to open
wine bottles**



The micro-USB charging port is conveniently located under the top cap.

Using the Built-in Foil Cutter

The top cap of your corkscrew doubles as a foil cutter, allowing you to easily remove the wine bottle's foil seal.

1. Twist off the top cap from the corkscrew.
2. Place the foil cutter (the cap) on top of the wine bottle, ensuring it covers the foil seal.

3. Grip the bottle firmly and twist the foil cutter around the bottle neck to cut the foil.
4. Remove the cut foil cap and discard it.

Works on all cork types



The top cap of the corkscrew functions as a convenient foil cutter.

OPERATING INSTRUCTIONS

The Rabbit Automatic Electric Corkscrew is designed for simple, one-touch operation. No buttons are required for cork removal.

1. Ensure the foil has been completely removed from the wine bottle.
2. Place the electric corkscrew vertically on top of the wine bottle, centering it over the cork.
3. Apply gentle downward pressure. The corkscrew will automatically activate, inserting itself into the cork and then pulling it out of the bottle.
4. Once the cork is fully removed from the bottle, lift the corkscrew away. The cork will automatically eject from the corkscrew.



The corkscrew automatically engages and removes the cork with a simple press.

Official product video demonstrating the automatic operation of the Rabbit Electric Corkscrew, showing how it removes and ejects corks.

CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your Rabbit Automatic Electric Corkscrew, follow these simple care instructions:

- **Cleaning:** Wipe the exterior of the corkscrew with a damp cloth. Do not immerse the device in water or other liquids.
- **Storage:** Store the corkscrew in a dry place when not in use.
- **Charging:** Recharge the device when the performance starts to diminish, or periodically if not used frequently, to maintain battery health.

TROUBLESHOOTING COMMON ISSUES

If you encounter any problems with your Rabbit Automatic Electric Corkscrew, refer to the following solutions:

Problem	Possible Cause	Solution
Corkscrew does not activate or stops during operation.	Low battery or improper placement.	Ensure the device is fully charged. Place the corkscrew firmly and vertically on the bottle.
Cork is not fully removed or gets stuck.	Insufficient downward pressure or cork type.	Apply consistent, gentle downward pressure. For very tight corks, ensure the device is fully charged for maximum power. If the cork is stuck in the mechanism, use the manual eject button (if available, under the top cap) or gently dislodge it.
Foil cutter does not cut cleanly.	Insufficient pressure on the foil.	Ensure the foil cutter is pressed firmly against the bottle neck while twisting.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	W6310
Material	Plastic
Color	Metallic Red
Finish Type	Painted
Item Weight	9.92 ounces
Product Dimensions (L x W)	2"L x 2"W
UPC	022578105871
Included Components	Automatic Electric Corkscrew Wine Bottle Opener

WARRANTY AND CUSTOMER SUPPORT

This product comes with a manufacturer's warranty. For specific details regarding warranty coverage, please refer to the warranty card included in your product packaging or visit the official Rabbit website.

For any questions, technical assistance, or support, please contact Rabbit customer service through their official website or the contact information provided with your purchase.

© 2026 Rabbit. All rights reserved.