

Amazon Basics WT0352G

Amazon Basics Lightweight Mini Tripod Instruction Manual

MODEL: WT0352G

INTRODUCTION

Thank you for choosing the Amazon Basics Lightweight Mini Tripod. This compact and versatile accessory is designed to provide stable support for your small digital cameras, GoPro devices, webcams, and smartphones (with an adapter, not included). Its portable design makes it ideal for travel and various shooting scenarios.

Key Features

- Adjustable-height metal legs with rubber feet for stability.
- Mini ball head for 360-degree rotation and 90-degree tilt.
- Small and lightweight design for easy portability.
- Extends from 4.76 inches to 7.5 inches.
- Recommended maximum load weight: 1.1 lbs (0.5 kg).

SETUP INSTRUCTIONS

1. Unfolding the Tripod

To prepare the tripod for use, gently pull the three legs outwards until they are fully extended and stable. The legs are designed to provide a wide base for optimal balance.





Image: The mini tripod with its legs folded for compact storage.



Image: The mini tripod with its three metal legs extended, ready for use.

2. Attaching Your Device

Locate the 1/4-inch screw on the top of the tripod's ball head. Align your camera, webcam, or smartphone adapter (not included) with this screw and rotate your device clockwise until it is securely fastened. Ensure the device is centered and stable.



Image: A close-up view of the tripod's ball head, showing the universal 1/4-inch screw for device attachment.



Image: The mini tripod supporting a webcam on a desk, demonstrating its use for video calls or streaming.



Image: A small digital camera mounted on the mini tripod, showcasing its compatibility with compact cameras.



Image: A GoPro camera attached to the mini tripod, illustrating its use for action cameras.

PLEASE NOTE: MOBILE HOLDER NOT INCLUDED



Image: A smartphone mounted on the mini tripod using a separate adapter, highlighting its versatility for mobile photography.

OPERATING YOUR MINI TRIPOD

1. Adjusting the Ball Head

The mini tripod features a ball head that allows for flexible positioning. Loosen the small black knob on the side of the ball head to freely rotate your device 360 degrees or tilt it up to 90 degrees. This enables you to achieve various shooting angles.

2. Securing the Position

Once you have achieved your desired angle, tighten the black knob firmly to lock the ball head in place. This will prevent your device from shifting during use.

CARE AND MAINTENANCE

- Keep the tripod clean by wiping it with a soft, dry cloth.
- Avoid exposing the tripod to extreme temperatures or moisture.
- Do not overtighten the screws or knobs, as this may cause damage.

- Store the tripod in a cool, dry place when not in use.

TROUBLESHOOTING

Device is unstable:


- Ensure the device is properly screwed onto the 1/4-inch mount.
- Verify that the ball head knob is securely tightened.
- Check that the tripod legs are fully extended and placed on a flat, stable surface.
- Confirm your device's weight does not exceed the recommended maximum load of 1.1 lbs (0.5 kg).

Legs do not extend/retract smoothly:

- Inspect the leg joints for any obstructions or debris.
- Clean the leg sections with a soft cloth.

PRODUCT SPECIFICATIONS

Feature	Specification
Product Dimensions	6.93 x 5.79 x 7.09 inches
Item Weight	3.89 ounces
Model Number	WT0352G
Material	Stainless Steel
Color	Black
Maximum Height	7.5 Inches
Weight Limit	1.1 Pounds (0.5 kg)
Tripod Head Type	Ball Head

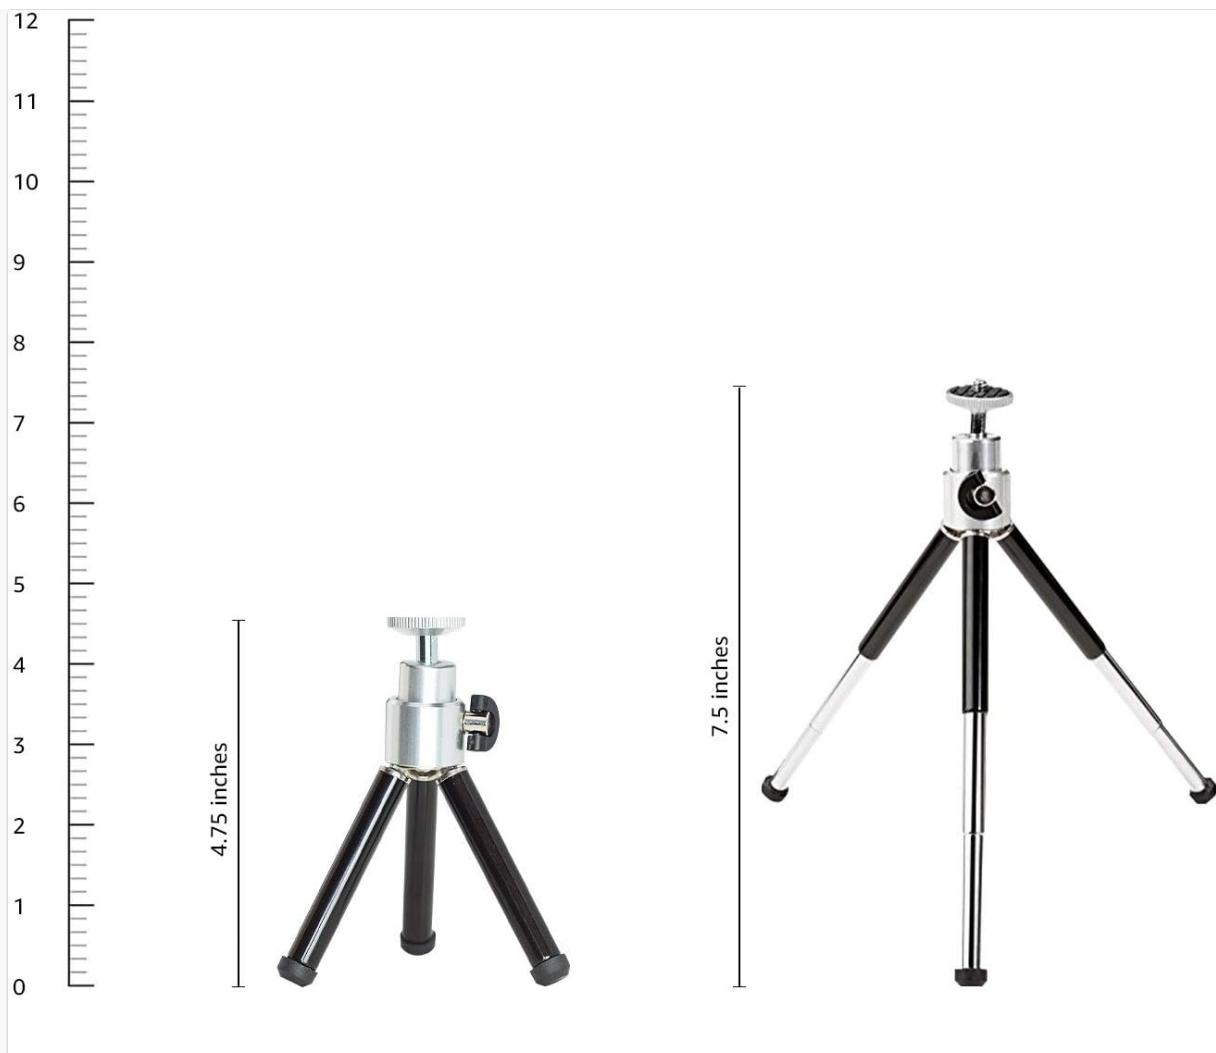

All dimensions are in Inches

Image: A visual representation of the mini tripod's dimensions, illustrating its compact size when folded (4.75 inches) and extended (7.5 inches).

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Amazon Basics support page. You can also find additional resources and contact information on the [Amazon Basics Store](#).