

Beyution NS-RC05A-13

Beyution Insignia Combo DVD+TV Remote Control User Manual

Models: NS-RC05A-13, NS-RC04A-12

1. INTRODUCTION

This manual provides instructions for the Beyution Insignia Combo DVD+TV Remote Control, compatible with various Insignia brand combo DVD+TV LCD LED television models. This remote control is designed for immediate use without requiring any programming.

2. SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Ensure batteries are inserted with correct polarity (+ and -).
- Remove batteries if the remote control will not be used for an extended period.
- Keep batteries out of reach of children.

3. PACKAGE CONTENTS

The package typically includes:

- 1 x Beyution Insignia Combo DVD+TV Remote Control (Model NS-RC05A-13 or NS-RC04A-12)

Note: Batteries are not included and must be purchased separately.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

4.2 Initial Use

This remote control requires no programming. Once batteries are installed, it is ready for use with compatible Insignia combo DVD+TV models.

4.3 Logo Protection Sticker

A protective sticker (e.g., 'RC-017') may be applied over the brand logo on the remote control. This sticker can be removed to reveal the Insignia brand logo underneath.



Image 1: Front view of the Beyution Insignia Combo DVD+TV Remote Control. This image displays the remote's layout, including the power button, number pad, input selection, volume, channel, navigation, and playback controls.

5. OPERATING THE REMOTE

The remote control features a standard layout for TV and DVD functions. Refer to the image below for button identification.



Image 2: Angled view of the Beyution Insignia Combo DVD+TV Remote Control. This perspective highlights the ergonomic design and the arrangement of buttons from the top down.

5.1 Button Functions

Button	Function
POWER	Turns the TV/DVD combo unit on or off.
INPUT	Cycles through available input sources (e.g., TV, DVD, HDMI, Video).
0-9 (Number Pad)	Direct channel selection or numerical input.
RECALL	Switches between the current and previously viewed channel.
TV / DVD / HDMI / VIDEO	Dedicated buttons for selecting specific input sources.
VOL +/-	Adjusts the volume level.
MUTE	Mutes or unmutes the audio.
CH ^/v	Changes the TV channel up or down.
TV-MENU	Accesses the main TV menu.
EXIT	Exits current menu or on-screen display.
Directional Pad (Up, Down, Left, Right)	Navigates through menus and options.
OK	Confirms a selection in menus.

Button	Function
HOME	Returns to the home screen or main menu.
INFO*	Displays program information.
CCD / MTS/SAP / FAVORITE / ZOOM	Specialized functions for Closed Captioning, Multi-channel Television Sound/Secondary Audio Program, Favorite channels, and Zoom.
PICTURE / AUDIO / SLEEP / CH-LIST	Buttons for picture settings, audio settings, sleep timer, and channel list.
MENU / SETUP / TITLE / SUBTITLE	DVD menu access, setup options, DVD title selection, and subtitle control.
Playback Controls (Rewind, Play, Fast Forward, Stop, Pause, Skip Back, Skip Forward)	Controls for DVD playback.
DVD	Activates DVD mode or specific DVD functions.

6. COMPATIBILITY

This remote control is compatible with various Insignia brand combo DVD+TV LCD LED television models, including but not limited to:

- NS-32LD120A13
- NS-24LD100A13
- NS-29LD120A13
- NS-19ED200NA14
- NS-28ED200NA14
- NS-19LD120A13
- NS-LTDVD19-09
- NS-LTDVD26-09
- NS-LTDVD32-09
- NS-LDVD19Q-10A
- NS-LDVD26Q-10A
- NS-LDVD32Q-10A
- NS-28DD310NA15
- NS-24ED200NA14
- NS-32DD200NA14
- NS-20ED310NA15
- NS-24ED310NA15
- NS-32DD310NA15

7. MAINTENANCE

7.1 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

7.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.

7.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

8. TROUBLESHOOTING

8.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly and are not depleted. Replace with fresh batteries if necessary.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV/DVD combo unit's infrared sensor. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of the remote control.
- **TV/DVD Power:** Confirm that the TV/DVD combo unit is powered on.

8.2 Specific Buttons Not Working

- **Clean Buttons:** Dirt or debris might be interfering with button contacts. Gently clean around the affected buttons.
- **Battery Check:** Even if some buttons work, low battery power can affect others. Replace batteries.

9. SPECIFICATIONS

Feature	Detail
Brand	Beyution
Item Model Number	INSIGNIA COMB REMOTE NS-RC05A-13
Product Dimensions	7 x 5 x 2 inches
Item Weight	3 ounces
Color	Black
Max Number of Supported Devices	1 (TV/DVD Combo)
Compatible Devices	Insignia Television (Combo DVD+TV models)
Special Feature	Ergonomic design

10. SUPPORT INFORMATION

For any questions or assistance regarding your Beyution Insignia Combo DVD+TV Remote Control, please contact the seller directly through the Amazon message system. Responses are typically provided within 24 hours.

© 2025 Beyution. All rights reserved.