

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chicco](#) /

› [Chicco Easy Relax B.Bouncer Model 07079089420000 User Manual](#)

Chicco 07079089420000

Chicco Easy Relax B.Bouncer User Manual

Model: 07079089420000

INTRODUCTION

Welcome to the user manual for your Chicco Easy Relax B.Bouncer. This document provides important information for the safe and proper use, assembly, and maintenance of your bouncer. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

Important Safeguards

- Always use the restraint system.
- Never leave the child unattended.
- Do not use this bouncer once your child can sit up unaided.
- This bouncer is not intended for prolonged periods of sleep. Should your child need to sleep, then it should be placed in a suitable cot or bed.
- It is dangerous to place this bouncer on an elevated surface, such as a table.
- Maximum weight recommendation: 9 kg.
- Age suitability: Newborn and above (0-18 months).
- Ensure all locking devices are engaged before use.
- Do not use if any components are broken or missing.
- Keep away from open flames and other strong heat sources.

Warning Labels

Familiarize yourself with all warning labels affixed to the product.

PACKAGE CONTENTS

Ensure all parts are present before assembly. The package should contain:

- Bouncer frame (metal and plastic components)
- Fabric seat cover with harness
- Instruction manual (this document)

If any parts are missing or damaged, do not use the product and contact customer service.

SETUP AND ASSEMBLY

Follow these steps to assemble your Chicco Easy Relax B.Bouncer.

Step 1: Unfolding the Frame

Carefully remove the bouncer frame from its packaging. Locate the locking mechanisms on the side of the frame. Release them to unfold the frame into its open position. Ensure the frame clicks securely into place.



Image: The bouncer frame in its unfolded, ready-to-use position, showing the side profile with the seat attached.

Step 2: Attaching the Fabric Seat

The fabric seat cover is typically pre-attached. If not, slide the fabric loops over the designated points on the frame. Ensure the seat is taut and securely fastened.

Step 3: Adjusting the Backrest

The backrest can be adjusted to multiple positions for your child's comfort. Locate the adjustment mechanism, usually at the rear or sides of the seat. Press the buttons or levers to recline or raise the backrest to the desired angle.



Image: The Chicco Easy Relax B.Bouncer shown in a reclined position, illustrating one of the adjustable backrest settings.



Image: The Chicco Easy Relax B.Bouncer shown in a more upright position, demonstrating another adjustable backrest setting.

OPERATING INSTRUCTIONS

Placing Your Child in the Bouncer

1. Ensure the bouncer is on a flat, stable surface.
2. Adjust the backrest to a comfortable position for your child.
3. Unfasten the harness straps.
4. Gently place your child into the bouncer.
5. Fasten the harness straps securely around your child. Ensure the straps are snug but not too tight.

Carrying the Bouncer

The bouncer features practical strap handles for easy portability.

1. Ensure your child is securely fastened in the bouncer.
2. Grasp both strap handles firmly.

3. Lift the bouncer carefully, keeping it level.
4. Always maintain a firm grip and avoid sudden movements.



Image: A person demonstrating how to carry the Chicco Easy Relax B.Bouncer using the integrated strap handles, highlighting its portability.

MAINTENANCE AND CARE

Cleaning the Fabric

The fabric seat cover can be removed for cleaning. Refer to the care label on the fabric for specific washing instructions. Typically, machine wash on a delicate cycle with cold water and mild detergent. Do not bleach. Air dry.

Cleaning the Frame

Wipe the metal and plastic components of the frame with a damp cloth and mild soap. Dry thoroughly. Do not use abrasive cleaners or solvents.

Storage

When not in use, the bouncer can be folded for compact storage.

1. Remove your child from the bouncer.
2. Adjust the backrest to its most upright position.
3. Locate and release the locking mechanisms on the frame.
4. Fold the frame inward until it is compact.



Image: The Chicco Easy Relax B.Bouncer shown in its folded configuration, demonstrating its compact design for storage or transport.

TROUBLESHOOTING

Bouncer does not fold/unfold easily.

Ensure all locking mechanisms are properly disengaged/engaged. Check for any obstructions in the folding joints.

Harness straps are difficult to adjust.

Ensure the straps are not twisted. Refer to the harness adjustment instructions.

Bouncer feels unstable.

Verify that the frame is fully unfolded and all locking devices are securely engaged. Ensure the bouncer is placed on a flat, level surface.

SPECIFICATIONS

Feature	Detail
Model Number	07079089420000
Dimensions (Unfolded)	62 x 45 x 60 cm
Dimensions (Folded)	93 x 25.5 cm
Product Weight	3.5 kg
Baby Carrying Capacity	Up to 9 kg
Age Suitability	Newborn and above (0-18 months)
Material	Foam, Metal, Plastic
Batteries Required	No

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Chicco website or contact your local retailer. Keep your proof of purchase for any warranty claims.

Chicco Easy Relax B.Bouncer User Manual | Model: 07079089420000

© 2024 Chicco. All rights reserved.