

Casio CBA-10, CFX-40, DBC-61, DBC-62, DBC-63NS, DBC-80, DBX-102

Casio Replacement Watch Band User Manual

For Models: CBA-10, CFX-40, DBC-61, DBC-62, DBC-63NS, DBC-80, DBX-102

INTRODUCTION

This manual provides instructions for the installation, maintenance, and care of your genuine Casio replacement watch band. This band is designed to restore the original look and functionality of your compatible Casio watch.

COMPATIBILITY

This replacement watch band is specifically designed for the following Casio watch models:

- CBA-10
- CFX-40
- DBC-61
- DBC-62
- DBC-63NS
- DBC-80
- DBX-102

To verify your watch model, please check the model number located on the back of your Casio watch.

PACKAGE CONTENTS

Your package should contain the following item:

- 1 x Genuine Casio Replacement Watch Band (Black)

Note: This package includes only the watch strap/band. No other parts or accessories, such as spring bars or tools, are included.

INSTALLATION INSTRUCTIONS

Replacing your watch band requires careful handling. If you are unsure, it is recommended to seek assistance from a

professional watch repair service.

Tools Required (Not Included):

- Spring bar tool or a small, flat-head screwdriver
- Soft cloth to protect your watch

Steps:

1. **Prepare Your Workspace:** Lay your watch face down on a soft, clean cloth to prevent scratches.
2. **Remove the Old Band:**
 - Locate the spring bars that connect the old watch band to the watch lugs.
 - Using a spring bar tool or a small screwdriver, gently push in one end of the spring bar.
 - Carefully pull the band away from the watch lug until the spring bar detaches.
 - Repeat for the other side of the band and for the second half of the watch band.
3. **Install the New Band:**
 - Insert one end of a spring bar into the hole on one side of the watch lug.
 - Place the new watch band into position.
 - Using the spring bar tool, compress the other end of the spring bar and guide it into the corresponding hole on the opposite side of the watch lug.
 - Gently tug on the band to ensure it is securely seated and the spring bars are properly engaged.
 - Repeat this process for the other half of the watch band.
4. **Verify Installation:** Once both halves of the new band are installed, gently pull on each side to confirm they are firmly attached to the watch.



Image: The genuine Casio replacement watch band, black in color, featuring a tang buckle closure. This image illustrates the product as it appears out of the package, ready for installation.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your Casio replacement watch band, follow these care guidelines:

- **Cleaning:** Wipe the band regularly with a soft, damp cloth to remove dirt and sweat. For stubborn grime, a mild soap solution can be used, followed by rinsing with clean water and thorough drying.
- **Avoid Harsh Chemicals:** Do not expose the band to strong chemicals, solvents, or abrasive cleaners, as these can damage the resin material.
- **Storage:** When not in use, store your watch in a cool, dry place away from direct sunlight to prevent material degradation.
- **Water Exposure:** While the resin material is generally water-resistant, prolonged exposure to saltwater or chlorinated water should be followed by rinsing with fresh water and drying.

SPECIFICATIONS

Material	Resin
Clasp Type	Tang Buckle
Color	Black
Compatibility	Casio Models: CBA-10, CFX-40, DBC-61, DBC-62, DBC-63NS, DBC-80, DBX-102

TROUBLESHOOTING

If you encounter issues during installation or use, refer to the following common solutions:

- **Band does not fit:** Double-check your watch's model number against the compatibility list. Ensure you are using the correct spring bars for your watch (original spring bars are often reused).
- **Difficulty inserting spring bars:** Ensure the spring bar is properly aligned with the lug holes. Use a spring bar tool to compress the bar sufficiently. Do not force the spring bar, as this can damage the watch lugs or the band.
- **Band feels loose after installation:** Gently tug on the band to confirm both ends of the spring bars are fully seated in the lug holes. A clicking sound often indicates proper seating.

WARRANTY AND SUPPORT

This genuine Casio replacement watch band is manufactured to high standards. For specific warranty information, please refer to the original product packaging or contact your retailer. For further assistance or inquiries, please reach out to the authorized Casio service center or your product supplier.

For more information about Casio products, you may visit the official Casio website:www.casio.com

