

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Yamaha](#) /

› [Yamaha HTR-2067 5.1 Channel AV Receiver Instruction Manual](#)

Yamaha HTR-2067

Yamaha HTR-2067 5.1 Channel AV Receiver Instruction Manual

Model: HTR-2067

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Yamaha HTR-2067 5.1 Channel AV Receiver. Please read this manual thoroughly before using the unit to ensure proper setup and performance. Keep this manual in a safe place for future reference.

SAFETY INFORMATION

- **Power Source:** Connect the unit only to an AC outlet of the voltage specified on the rear panel.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings.
- **Water and Moisture:** Do not expose the unit to rain or moisture. Do not place objects filled with liquids on the unit.
- **Foreign Objects:** Do not insert foreign objects into the unit's openings.
- **Servicing:** Do not attempt to service this unit yourself. Refer all servicing to qualified service personnel.
- **Speaker Impedance:** Ensure connected speakers have an impedance of 6 ohms or higher. Refer to the "CAUTION: SEE INSTRUCTION MANUAL FOR CORRECT SETTING" label near the speaker terminals.

SETUP

Rear Panel Overview

The following image illustrates the rear panel of the Yamaha HTR-2067 receiver, highlighting various connection points for audio, video, and speakers.



Figure 1: Rear Panel of Yamaha HTR-2067 AV Receiver

1. Unpacking

Carefully remove the receiver and all accessories from the packaging. Retain the packaging materials for future transport or storage.

2. Connecting Speakers

Connect your speakers to the corresponding terminals on the rear panel. Ensure correct polarity (+ to + and - to -) for each speaker. The HTR-2067 supports a 5.1 channel setup.

- **Front Speakers (L/R):** Connect to the "FRONT" terminals.
- **Center Speaker:** Connect to the "CENTER" terminal.
- **Surround Speakers (L/R):** Connect to the "SURROUND" terminals.
- **Subwoofer:** Connect a powered subwoofer to the "SUBWOOFER PRE OUT" RCA jack.

Refer to the speaker impedance warning on the rear panel, which states "SPEAKER IMPEDANCE 6Ω MIN / SPEAKER".

3. Connecting Audio/Video Devices

Use the appropriate cables to connect your source devices (e.g., Blu-ray player, game console, TV) to the receiver.

- **HDMI Connections:**
 - **HDMI OUT (ARC):** Connect to your TV's HDMI input (preferably one supporting ARC for audio return).
 - **HDMI 1 (BD/DVD), HDMI 2, HDMI 3, HDMI 4:** Connect your video source devices here.
- **Digital Audio Connections:**
 - **OPTICAL (AUDIO 1 (TV)):** For optical digital audio from a TV or other device.
 - **COAXIAL (AUDIO 2):** For coaxial digital audio from a CD player or other device.
- **Analog Audio Connections:**
 - **AUDIO 3 (CD), AUDIO 4, AUDIO 5:** For analog audio devices using RCA cables.

4. Connecting Antennas

For FM radio reception, connect the supplied FM antenna to the "ANTENNA FM 75Ω" terminal on the rear panel.

5. Power Connection

After all other connections are made, plug the power cord into an AC wall outlet.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button on the front panel or remote control to turn the receiver on or off.

2. Input Selection

Select the desired input source using the input selector buttons on the front panel or the remote control. For example, press **BD/DVD** for a Blu-ray player connected to HDMI 1.

The **SCENE** buttons (BD/DVD, TV, CD, Radio) provide one-touch power-on and input selection, along with pre-set sound programs.

3. Volume Adjustment

Adjust the master volume using the large knob on the front panel or the **VOLUME +/-** buttons on the remote control.

4. Sound Modes (CINEMA DSP)

The HTR-2067 features CINEMA DSP with 17 DSP programs. Use the **PROGRAM** buttons on the remote control to cycle through different sound fields and enhance your listening experience.

5. ECO Mode

Activate the ECO mode to reduce power consumption by approximately 20%. This setting can be toggled via the remote control or system menu.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use chemical cleaners or abrasive materials.
- **Ventilation:** Periodically check that the ventilation openings are not obstructed by dust or debris.
- **Power Cord:** Inspect the power cord regularly for any damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord disconnected; unit in standby mode.	Ensure power cord is securely plugged in; press POWER button.
No sound	Incorrect input selected; speakers not connected; volume too low; mute activated.	Select correct input; check speaker connections; increase volume; deactivate mute.
No video	Incorrect input selected; HDMI cable loose or faulty; TV input incorrect.	Select correct input; check HDMI connections; ensure TV is on correct input.
Poor radio reception	Antenna not connected or poorly positioned.	Connect FM antenna; adjust antenna position for better reception.

If the problem persists, consult a qualified service technician.

SPECIFICATIONS

Feature	Detail
Brand	Yamaha
Model	HTR-2067
Channels	5.1 Channel Surround Sound
4K Pass-through	Yes (4K 24/30p)
DSP Programs	CINEMA DSP (17 programs)
ECO Mode	Yes (approx. 20% less power consumption)
Connectivity	HDMI, Optical, Coaxial, Analog RCA, FM Antenna
Speaker Impedance	6 ohms minimum
Item Weight	8.72 kg
Dimensions (approx.)	55.7 x 41.4 x 22.4 cm (Package Dimensions)

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Yamaha website. Keep your purchase receipt as proof of purchase.

For technical assistance or service inquiries, contact your authorized Yamaha dealer or service center.

