

Manuals.plus /

- › HP /
- › HP Envy 5660 Wireless All-in-One Photo Printer User Manual

HP F8B04A#B1H

HP Envy 5660 Wireless All-in-One Photo Printer User Manual

Model: F8B04A#B1H

[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. PRODUCT OVERVIEW

The HP Envy 5660 Wireless All-in-One Photo Printer is designed for versatile home use, enabling easy printing of photos and documents from various devices including smartphones, tablets, and Internet-connected PCs. It offers wireless network connectivity for lab-quality photos and laser-quality text, alongside efficient scanning and copying capabilities. The integrated touchscreen provides direct access to web content and simplifies task management, making creative projects and daily printing affordable and convenient.



Figure 1.1: Front view of the HP Envy 5660 All-in-One Printer, showcasing its compact design and touchscreen display.

2. SETUP GUIDE

2.1 Unboxing and Initial Placement

Carefully remove the printer from its packaging. Ensure all protective tapes and packing materials are removed from the exterior and interior of the printer. Place the printer on a stable, flat surface with adequate space for paper trays and ventilation. Connect the power cord to the printer and then to a wall outlet.



Figure 2.1: The HP Envy 5660 printer with its paper output tray extended, demonstrating its readiness for printing. A photo is shown being printed.

2.2 Installing Ink Cartridges

Open the ink cartridge access door. Wait for the print carriage to move to the center. Remove the new ink cartridges from their packaging. Insert the black cartridge into the right slot and the tri-color cartridge into the left slot until they click into place. Close the ink cartridge access door.



Figure 2.2: Top-down view of the HP Envy 5660 printer with the top cover open, revealing the ink cartridge slots and internal mechanisms. This view is useful for ink cartridge installation and paper jam clearance.

2.3 Loading Paper

Pull out the main input tray. Adjust the paper guides to fit the paper size. Load a stack of plain white paper into the tray, ensuring it is aligned properly. Push the input tray back into the printer until it locks into place. The printer's touchscreen will prompt you to confirm the paper type and size.



Figure 2.3: The HP Envy 5660 printer with its paper input tray pulled out, showing a stack of paper loaded and ready for printing. This image highlights the paper loading process.

2.4 Wireless Network Connection

On the printer's touchscreen, navigate to the Wireless Setup Wizard. Select your Wi-Fi network from the list and enter the network password. Once connected, the wireless indicator light on the printer will turn solid blue. You can now print wirelessly from your devices.

3. OPERATING INSTRUCTIONS

3.1 Printing Documents

From your computer or mobile device, open the document you wish to print. Select the print option and choose the HP Envy 5660 from the list of available printers. Adjust print settings such as paper size, orientation, and number of copies as needed. Confirm the print job to send it to the printer.

3.2 Copying Documents

Lift the scanner lid and place the document face-down on the scanner glass, aligning it with the guide. Close the scanner lid. On the printer's touchscreen, select "Copy." Choose between color or black-and-white copy and adjust the number of copies. Press "Start" to begin copying.



Figure 3.2: Side view of the HP Envy 5660 printer, illustrating the rear panel with connectivity ports such as USB and power input.

3.3 Scanning Documents

Place the document on the scanner glass as described for copying. On the printer's touchscreen, select "Scan." Choose your desired scan destination (e.g., computer, email, memory card). Follow the on-screen prompts to complete the scan. You can also initiate scans from your computer using HP printer software.

4. MAINTENANCE

4.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, a message will appear on the printer's touchscreen. Open the ink cartridge access door. Press down on the old cartridge to release it and pull it out. Unpack the new cartridge, remove the protective tape, and insert it into the correct slot until it clicks. Close the access door.

4.2 Cleaning the Printer

Regularly clean the exterior of the printer with a soft, damp, lint-free cloth. For the scanner glass, use a glass cleaner applied to a cloth (not directly to the glass) to avoid streaks. Periodically run the printhead cleaning utility from the printer's maintenance menu to ensure optimal print quality.

5. TROUBLESHOOTING COMMON ISSUES

5.1 Paper Jams

If a paper jam occurs, the printer's touchscreen will display an error message and provide instructions. Open the rear access door or the top cover to locate and carefully remove any jammed paper. Ensure no torn pieces remain inside. Close all doors and covers firmly.

5.2 Print Quality Issues

For streaky or faded prints, first check ink levels and replace any low cartridges. If the issue persists, run the printhead cleaning and alignment utilities from the printer's maintenance menu. Ensure you are using appropriate paper for your print settings.

5.3 Connectivity Problems

If the printer loses its wireless connection, check the Wi-Fi indicator light. If it's off or blinking, restart your router and the printer. Re-run the Wireless Setup Wizard from the touchscreen. For USB connections, ensure the cable is securely connected to both the printer and your computer.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	F8B04A
Machine Functions	Copy, Print, Scan
Printer Type	Inkjet
Connectivity Technology	Wi-Fi, USB
Maximum Print Speed (Black)	22 ppm
Maximum Print Speed (Color)	21 ppm
Max Input Sheet Capacity	140
Duplex Printing	Yes
Display Type	LCD Touchscreen
Product Dimensions	16.14 x 17.87 x 6.34 inches
Item Weight	15.04 pounds
Included Components	HP 62 Black Ink Cartridge, Power Cord, HP Envy 5660 Wireless E-All-In-One Printer, HP 62 Tricolor Ink Cartridge (C/M/Y), Software CD-ROM Product Description, Owner's Manual

7. WARRANTY AND SUPPORT

7.1 Warranty Information

For detailed warranty information, please refer to the official HP website or the warranty card included with your product. Keep your purchase receipt as proof of purchase for warranty claims.

7.2 Customer Support

For further assistance, technical support, or to access updated drivers and software, visit the official HP support website.

You can also find additional resources and FAQs at hp.com/support.

A PDF version of the User Manual is available for download: [User Manual \(PDF\)](#).