

[manuals.plus](#) /› [RadioShack](#) /› [RadioShack Digital AM/FM Pocket Radio \(Model FBA_1201475\) User Manual](#)

RadioShack FBA_1201475

RadioShack Digital AM/FM Pocket Radio

Model: FBA_1201475

User Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your RadioShack Digital AM/FM Pocket Radio. Please read this manual thoroughly before using the device to ensure proper function and to maximize your listening experience.

2. FEATURES

- **Digital AM/FM Tuner:** Provides clear reception and precise station tuning.
- **Preset Stations:** Store and quickly access your favorite AM and FM radio channels.
- **Backlit Display:** Enhances visibility in low-light conditions.
- **Portable Design:** Lightweight and compact for easy carrying.
- **Lock Function:** Prevents accidental button presses during activity.
- **Alarm Clock:** Set an alarm to manage your time effectively.
- **Sleep Mode:** Automatically turns off the radio after a set period.

Portable Radio & Alarm Clock

Check out what's happening anywhere, anytime.



Image 2.1: Front view of the RadioShack Digital AM/FM Pocket Radio, highlighting its digital display and control buttons.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x RadioShack Digital AM/FM Pocket Radio
- 1 x User Manual

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the radio.
2. Slide the cover downwards or in the direction indicated by the arrow to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring correct polarity (+ and -) as marked inside.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Infinite Play Time

Minimal power consumption from 2 AAA batteries.
No worries about charging problem.



*Batteries not included



Image 4.1: Illustration of battery installation in the rear compartment of the radio.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To turn the radio **ON**, press and hold the **POWER** button.
- To turn the radio **OFF**, press and hold the **POWER** button again.

5.2 Band Selection (AM/FM)

- Press the **FM/AM** button to switch between FM and AM bands. The selected band will be displayed on the screen.

5.3 Tuning Stations

- Use the **TUNING UP (▲)** or **TUNING DOWN (▼)** buttons to manually scan for stations.
- Press and hold the **TUNING UP (▲)** or **TUNING DOWN (▼)** buttons for automatic station search. The radio will stop at the next strong signal.

5.4 Volume Control

- Adjust the volume using the dedicated **VOLUME UP (+)** and **VOLUME DOWN (-)** buttons, typically located

on the side or front panel.

5.5 Storing and Recalling Presets

- **To Store:** Tune to your desired station. Press the **MEM** button, then use the **M+** or **M-** buttons to select a preset number. Press **MEM** again to confirm.
- **To Recall:** Press the **M+** or **M-** buttons to cycle through your stored preset stations.

5.6 Lock Function

- Locate the **LOCK** switch, usually on the side of the radio.
- Slide the switch to the **LOCK** position to disable all buttons and prevent accidental changes.
- Slide the switch back to the **UNLOCKED** position to resume normal operation.

5.7 Alarm Clock Function

- Refer to the specific instructions on setting the alarm time and alarm sound (radio or buzzer) in the included quick start guide, as button functions may vary.

5.8 Sleep Mode

- The sleep mode allows the radio to turn off automatically after a set duration. Consult the quick start guide for instructions on activating and setting the sleep timer.

6. MAINTENANCE

6.1 Cleaning

- Wipe the radio with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

6.2 Battery Replacement

- Replace batteries when the display dims or audio quality deteriorates. Follow the battery installation steps in Section 4.1.
- Remove batteries if the radio will not be used for an extended period to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Radio does not turn on.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity.
Poor reception.	Weak signal, antenna not extended, or interference.	Extend the telescopic antenna fully. Try repositioning the radio. Move away from electronic devices that may cause interference.
Buttons are unresponsive.	Lock function is activated.	Slide the LOCK switch to the UNLOCKED position.
Display is dim or blank.	Low battery power.	Replace batteries.

8. SPECIFICATIONS

- **Model:** FBA_1201475

- **Frequency Range:**
 - FM: 87.5 - 108 MHz
 - AM: 520 - 1710 KHz

- **Power Supply:** 2 x AAA batteries (not included)
- **Dimensions:** Approximately 4.2 x 2.4 x 0.6 inches (10.7 x 6.1 x 1.5 cm)
- **Net Weight:** Approximately 60g (2.1 oz)



Image 8.1: Dimensions of the RadioShack Digital AM/FM Pocket Radio.

Compact & Light

From the patio to the park and woods, grab all the fun in hand and explore more.



Image 8.2: The radio's compact and lightweight design for portability.

9. WARRANTY INFORMATION

This RadioShack product is covered by a **90-day parts warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or neglect. Please retain your proof of purchase for warranty claims.

10. SUPPORT

For further assistance or inquiries regarding your RadioShack Digital AM/FM Pocket Radio, please refer to the official RadioShack support channels or visit their website. Keep this manual handy for future reference.