

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Janome](#) /

› [Janome 5 Spool Thread Stand Instruction Manual for MC12000 & MC15000](#)

Janome TRTBB1768

Janome 5 Spool Thread Stand Instruction Manual

Model: TRTBB1768 | Brand: Janome

INTRODUCTION

This instruction manual provides detailed guidance for the setup, operation, and maintenance of your Janome 5 Spool Thread Stand. Designed for seamless integration with compatible Janome sewing and embroidery machines, this accessory enhances your sewing experience by providing a stable and efficient thread delivery system, especially when working with multiple thread colors or larger spools.

PRODUCT OVERVIEW

The Janome 5 Spool Thread Stand is engineered to simplify multi-color embroidery and general sewing tasks. Its five-pin design allows for easy attachment to your machine's handle, ensuring a stable setup for various thread types and sizes. This stand is particularly beneficial for managing thread tension and preventing tangles, leading to smoother and more consistent stitching.

Key Features:

- Five-pin design for multiple thread spools.
- Attaches easily to the machine handle for stability.
- Facilitates trouble-free embroidery with multiple colors.
- Optimizes thread delivery for various thread types.

Compatible Janome Models:

Horizon Memory Craft 9400QCP, Horizon Memory Craft 9410QCP, Horizon Memory Craft 9450QCP, Horizon Memory Craft 9480QCP, Horizon Memory Craft 12000, Horizon Memory Craft 14000, Horizon Memory Craft 15000, Horizon Quilt Maker Memory Craft 15000, MC200E, MC230E, MC400E, MC500E, MC550E, MC6650, MC9850, MC9900, Skyline S3, Skyline S5, Skyline S6, Skyline S7, Skyline S9.

PACKAGE CONTENTS

Your Janome 5 Spool Thread Stand package should include the following components:

- Main thread stand base with five spool pins.
- Thread guide bar.

- Assembly hardware (screws, etc.).
- Instruction sheet.

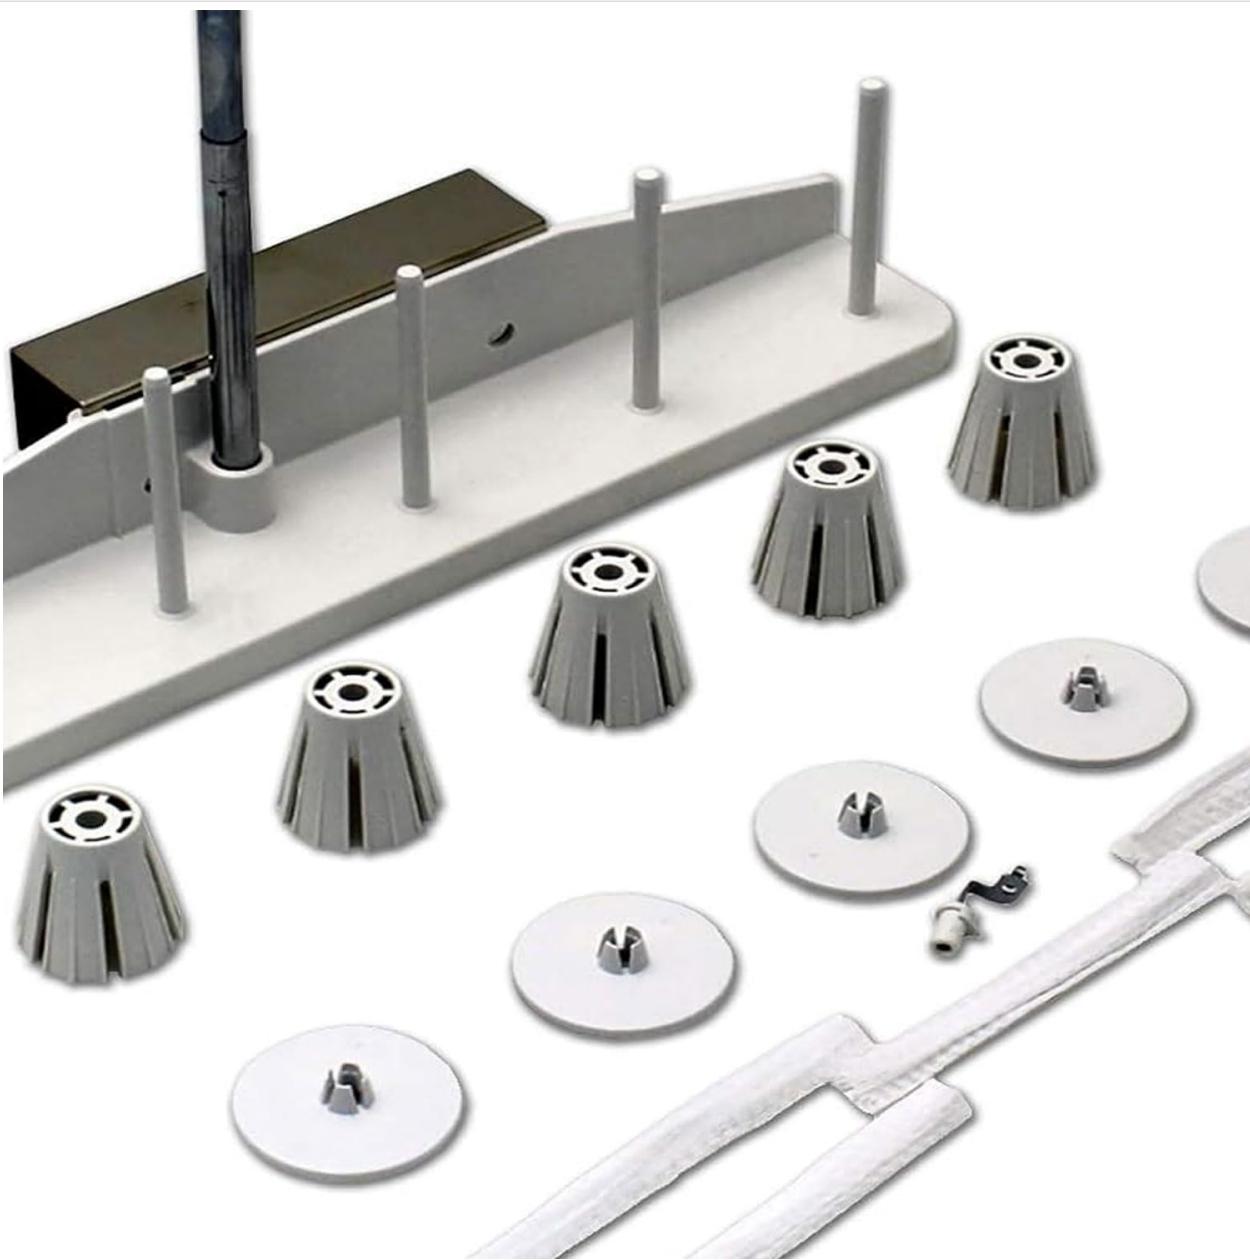


Image: All components of the Janome 5 Spool Thread Stand laid out, including the base, thread guide, and individual spool pins.

SETUP INSTRUCTIONS

Follow these steps to correctly assemble and attach your Janome 5 Spool Thread Stand to your sewing machine:

1. **Assemble the Base:** Insert the individual spool pins into the designated holes on the thread stand base. Ensure they are firmly seated.
2. **Attach the Thread Guide Post:** Secure the main thread guide post to the central mounting point on the base using the provided screw and screwdriver.
3. **Install the Multi-Thread Guide:** Attach the multi-thread guide bar to the top of the thread guide post. This bar typically slides into place and may have a securing mechanism.
4. **Mount to Machine:** The thread stand is designed to attach to the handle of your Janome machine. Align the attachment points on the stand with your machine's handle and secure it firmly. Refer to your sewing machine's manual for specific handle attachment details if needed.



Image: The fully assembled Janome 5 Spool Thread Stand, ready for use.

Video Guide:

Your browser does not support the video tag.

Video: A demonstration of how to assemble a similar spool stand. While not identical to the Janome 5-spool model, it illustrates the general assembly process for thread stands.

OPERATING INSTRUCTIONS

Using your Janome 5 Spool Thread Stand is straightforward and designed to optimize your sewing workflow:

- 1. Place Thread Spools:** Position your desired thread spools onto the five pins of the stand. For larger cones, ensure they are seated securely at the base of the pins.
- 2. Thread Through Guides:** Guide the thread from each spool up through the corresponding hooks or guides on the multi-thread guide bar. This ensures proper tension and prevents tangling.
- 3. Thread Your Machine:** Once the thread is routed through the stand's guides, thread your sewing machine as you normally would, following your machine's specific threading path. The thread stand provides a smooth, consistent feed to your machine's tension discs.

4. **Multi-Color Embroidery:** For embroidery projects requiring multiple colors, load all necessary spools onto the stand. This allows for quick and easy color changes without re-threading the entire machine from a single spool.

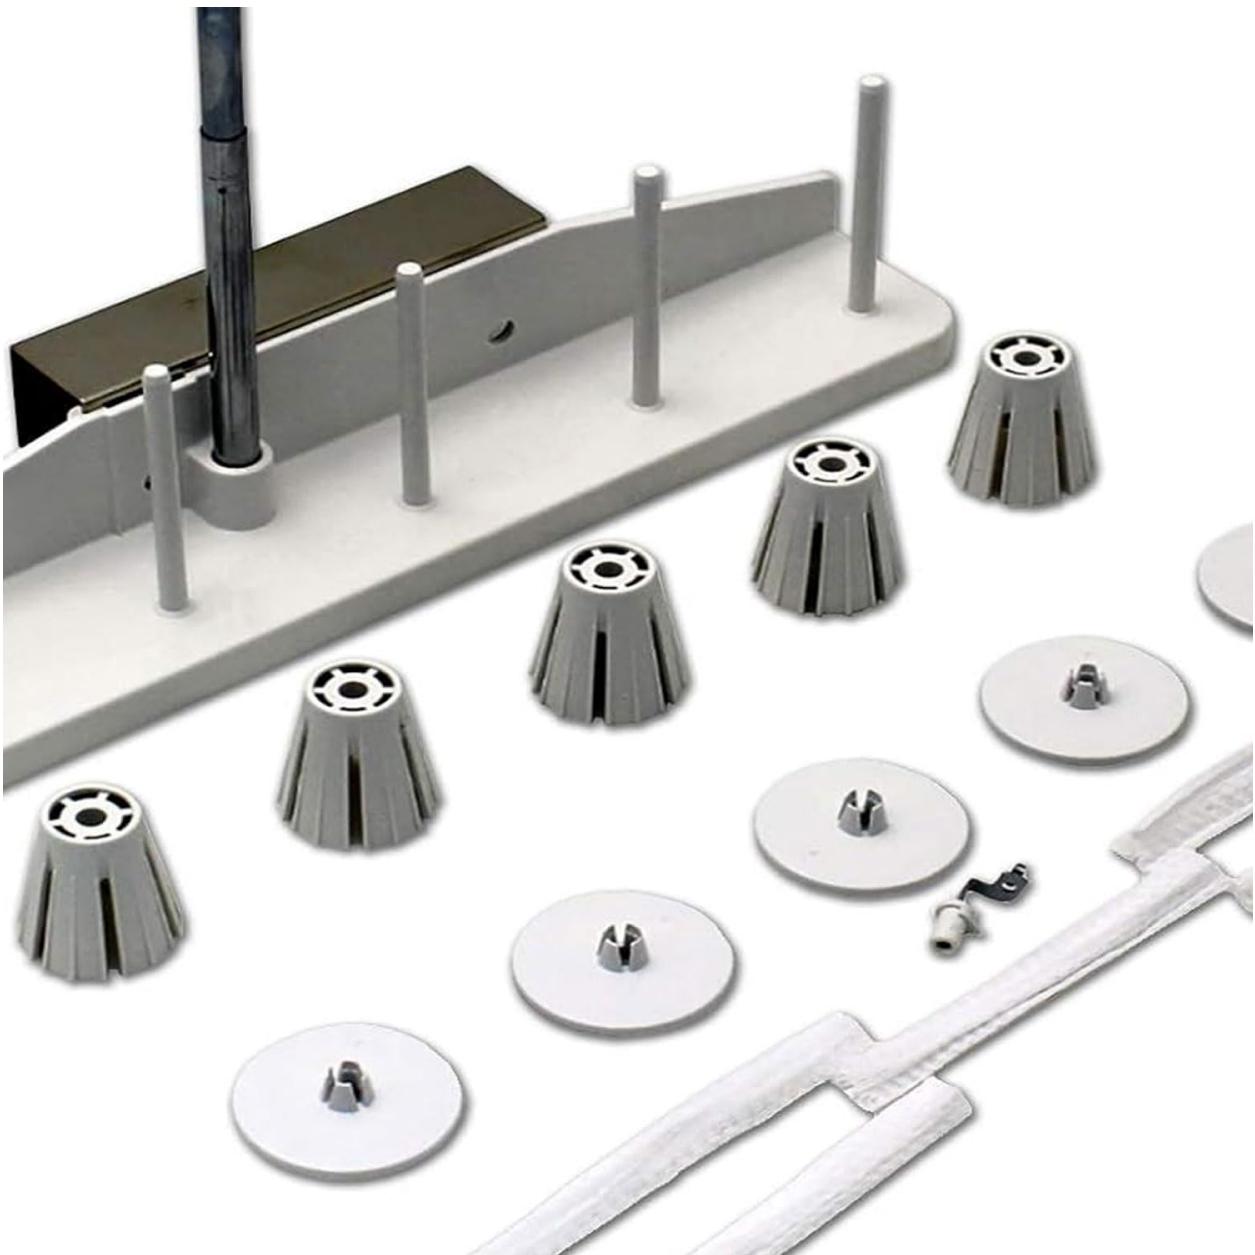


Image: A close-up view of thread spools placed on the stand, with thread guided through the upper hooks.

Product Demonstration:

Your browser does not support the video tag.

Video: A user demonstrating the Janome 5 Spool Thread Stand in action, highlighting its benefits for managing thread during sewing.

MAINTENANCE

To ensure the longevity and optimal performance of your Janome 5 Spool Thread Stand, follow these simple maintenance guidelines:

- **Cleaning:** Periodically wipe down the stand with a soft, dry cloth to remove dust and lint. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the thread stand in a clean, dry place. If disassembling for storage, ensure all components are kept together to prevent loss.
- **Inspection:** Regularly check the thread guide hooks and pins for any signs of wear or damage. Replace any damaged

parts to maintain smooth thread flow.

TROUBLESHOOTING

If you encounter any issues while using your thread stand, consider the following:

- **Thread Snapping/Breakage:**

- Ensure the thread is correctly routed through all guides on the stand and your sewing machine.
- Check for any burrs or rough spots on the thread guides that might be snagging the thread.
- Verify that the thread is not tangled on the spool or around the pins.

- **Inconsistent Tension:**

- Confirm the thread stand is stable and not wobbling during operation.
- Ensure the thread is feeding smoothly from the spool and through the guides without excessive drag.
- Adjust your sewing machine's tension settings as needed, as the thread stand primarily aids in smooth delivery, not tension adjustment itself.

- **Stand Instability:**

- Ensure the stand is properly attached to your machine's handle and all screws are tightened.
- Place the machine and stand on a flat, stable surface.

SPECIFICATIONS

Brand:	Janome
Model Number:	TRTBB1768
UPC:	721802495787
Product Dimensions:	12.6 x 7.2 x 3.6 inches
Item Weight:	15.8 ounces (0.99 Pounds)
Material:	Metal, Plastic
Unit Count:	5.0 Count (Spool Pins)

WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or replacement parts for your Janome 5 Spool Thread Stand, please refer to the official Janome website or contact Janome customer service directly. Keep your purchase receipt for warranty claims.

You can visit the official Janome Store for more products and support: [Janome Store on Amazon](#).