

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Groupe SEB](#) /

> [Rowenta RO2522WA City Space Cyclonic Bagged Vacuum Cleaner User Manual](#)

Groupe SEB RO2522WA

Rowenta RO2522WA City Space Cyclonic Bagged Vacuum Cleaner User Manual

Model: RO2522WA

Brand: Groupe SEB

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Rowenta RO2522WA vacuum cleaner. Retain this manual for future reference.

- Always ensure the power supply voltage matches the rating label on the appliance.
- Do not use the vacuum cleaner to pick up water or other liquids, hot ashes, sharp objects, or flammable materials.
- Never operate the appliance without the dust bag and filters properly installed.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the vacuum cleaner from the electrical outlet when not in use and before performing any maintenance or cleaning.
- Do not pull the power cord to unplug the appliance; grasp the plug itself.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT OVERVIEW

The Rowenta RO2522WA City Space Cyclonic is a compact and efficient bagged vacuum cleaner designed for various surfaces. Familiarize yourself with its main components before assembly and operation.



Image: The Rowenta RO2522WA City Space Cyclonic vacuum cleaner, fully assembled with its main body, flexible hose, telescopic tube, and standard floor nozzle. An additional crevice tool is visible on the right.

Main Components:

- Main Unit (Motor housing, dust bag compartment, filters)
- Flexible Hose

- Telescopic Metal Tube
- Floor Nozzle (for various surfaces)
- Crevice Tool (for narrow spaces)
- Upholstery Brush (integrated or separate, depending on model variant)

SETUP

Follow these steps to assemble your vacuum cleaner before first use.

1. **Attach the Flexible Hose:** Insert the hose connector into the suction inlet on the main unit until it clicks securely into place. To detach, press the release buttons and pull.
2. **Assemble the Telescopic Tube:** Connect the handle end of the flexible hose to the wider end of the telescopic metal tube. Extend the telescopic tube to your desired length by pressing the adjustment button and pulling/pushing.
3. **Attach the Floor Nozzle:** Connect the floor nozzle to the narrower end of the telescopic tube. Ensure it is firmly attached.
4. **Check Dust Bag Installation:** Open the dust bag compartment (usually located at the front or top of the main unit). Ensure a new dust bag is correctly inserted and sealed. Close the compartment cover securely.
5. **Power Connection:** Unwind the power cord and plug it into a suitable electrical outlet.





Image: A side view of the Rowenta RO2522WA vacuum cleaner, highlighting the connection point for the flexible hose into the main unit's suction inlet.

OPERATING INSTRUCTIONS

Learn how to effectively use your Rowenta RO2522WA vacuum cleaner for optimal cleaning results.

1. **Power On/Off:** Press the ON/OFF button (usually a large foot-operated button) located on the main unit to start or stop the vacuum cleaner.
2. **Adjust Suction Power:** Some models feature a manual air flow regulator on the hose handle. Slide or rotate this control to adjust the suction power for different surfaces. Close for maximum suction, open for reduced suction on delicate fabrics or rugs.
3. **Using the Floor Nozzle:** The universal floor nozzle can be adjusted for hard floors or carpets. Typically, a switch on the nozzle allows you to extend brushes for hard floors or retract them for carpets.
4. **Using Accessories:**
 - **Crevice Tool:** Attach directly to the hose handle or telescopic tube for cleaning corners, edges, and tight spaces.
 - **Upholstery Brush:** Use for cleaning sofas, curtains, and other fabric surfaces.
5. **Automatic Cord Rewind:** After use, unplug the vacuum cleaner. Press the cord rewind button (often located near the power cord outlet) to automatically retract the power cord. Guide the cord to prevent tangling.



Image: A top-down view of the Rowenta RO2522WA vacuum cleaner, illustrating the main unit's design, including the power button and the transparent cover for the dust bag compartment.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

1. Emptying and Replacing the Dust Bag

- The dust bag should be replaced when the dust bag full indicator (if present) illuminates, or when suction power noticeably decreases.
- Unplug the vacuum cleaner from the power outlet.
- Open the dust bag compartment cover.
- Carefully remove the full dust bag, ensuring the opening is sealed to prevent dust leakage. Dispose of the bag responsibly.
- Insert a new, genuine Rowenta dust bag, ensuring it is correctly seated in the holder and the seal is properly aligned.
- Close the dust bag compartment cover firmly until it clicks.

2. Cleaning Filters

Your vacuum cleaner is equipped with a motor protection filter and an exhaust filter (e.g., HEPA filter). These should be cleaned or replaced periodically.

- **Motor Protection Filter:** This filter is usually located between the dust bag compartment and the motor. Check it regularly and tap out any accumulated dust. If washable, rinse under cold water and allow to air dry completely before reinserting. Replace if heavily soiled or damaged.
- **Exhaust Filter (e.g., HEPA Filter):** This filter is typically located at the rear or side of the vacuum

cleaner. Refer to the markings on the filter for cleaning instructions. Some are washable, others require replacement. Ensure it is completely dry before reinstallation.

- Always ensure filters are dry before reassembling the vacuum cleaner to prevent damage.

3. General Care

- Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Check the floor nozzle and accessories for blockages (e.g., hair, threads) and remove them.
- Store the vacuum cleaner in a dry place, away from direct sunlight and extreme temperatures.



Image: A person carrying the Rowenta RO2522WA vacuum cleaner using its integrated top handle, demonstrating its portability and compact design for easy storage.



Image: The Rowenta RO2522WA vacuum cleaner neatly stored inside a lower kitchen cabinet, showcasing its compact size suitable for discreet storage.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum cleaner does not start.	No power supply; plug not inserted; power button not pressed.	Check power cord and outlet; ensure plug is fully inserted; press the ON/OFF button.
Reduced suction power.	Dust bag full; filters clogged; hose/tube/nozzle blocked; air flow regulator open.	Replace dust bag; clean/replace filters; check for and remove blockages; close air flow regulator on handle.
Unusual noise during operation.	Foreign object in hose/nozzle; motor filter incorrectly installed; motor issue.	Check and remove any foreign objects; ensure motor filter is correctly seated. If noise persists, contact customer support.
Dust escaping from the vacuum cleaner.	Dust bag incorrectly installed or damaged; filters missing or incorrectly installed.	Check dust bag installation and integrity; ensure all filters are correctly in place.

If the problem persists after attempting these solutions, please contact Rowenta customer support.

SPECIFICATIONS

Technical data for the Rowenta RO2522WA City Space Cyclonic Vacuum Cleaner.

Feature	Detail
Brand	Rowenta (Groupe SEB)
Model Number	RO2522WA
Type	Bagged Cylinder Vacuum Cleaner
Color	Black, Green
Product Dimensions	28 x 47 x 28 cm
Item Weight	3.7 kg
Dust Bag Capacity	1.2 Liters
Power/Wattage	750 Watts
Voltage	220 Volts
Automatic Shut-off	No
Energy Efficiency Class	A to G
Annual Energy Consumption	100 Kilowatt-hours per year
Sound Level	77 Decibels
Filter Type	Cartridge
Surface Recommendation	Carpet, Hard Floors
Power Source	Corded Electric

WARRANTY AND SUPPORT

Your Rowenta RO2522WA vacuum cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration.

For technical assistance, spare parts, or further inquiries, please visit the official Rowenta website or contact their customer service department. Contact details can typically be found in your product documentation or on the Rowenta website.

Online Resources:

- Official Rowenta Website: www.rowenta.com
- Product Support Page (if available): Check the Rowenta website for a dedicated support section for your model.

VIDEO RESOURCES

No official product videos from the seller were available for embedding in this manual. Please refer to the Rowenta official website or authorized channels for any available video guides or demonstrations.

© 2023 Groupe SEB. All rights reserved. Information in this manual is subject to change without notice.