

[Manuals.plus](#) /

› [Pentel](#) /

› Pentel EnerGel RTX Retractable Gel Pens User Manual

Pentel BL77BP6A

Pentel EnerGel RTX Retractable Gel Pens User Manual

Model: BL77BP6A

INTRODUCTION

The Pentel EnerGel RTX Retractable Gel Pen is designed to provide a smooth and consistent writing experience. Featuring fast-drying liquid gel ink, this pen is ideal for various writing tasks, including notes, documents, and creative projects. Its quick-drying formula helps prevent smears, smudges, and globs, making it particularly suitable for left-handed writers. The pen incorporates a durable metal tip and a comfortable latex-free grip for extended use.





Image: A pack containing six Pentel EnerGel RTX retractable gel pens. Each pen features a black barrel, silver accents, and a clear section indicating the liquid gel ink. The packaging highlights "EnerGel RTX Liquid Gel Pen," "Medium 0.7mm," "Black Ink," "Smoothest Writing Ink," and "Quick Dry No Smear."

SETUP

The Pentel EnerGel RTX pen is ready for immediate use upon removal from its packaging. No assembly or initial setup is required.

- Remove the pen from its packaging.
- Ensure the tip is free of any protective covering (though typically none is present for this model).
- Click the top button to extend the pen tip.

OPERATING INSTRUCTIONS

Using your EnerGel RTX pen is straightforward:

1. **Extend the Tip:** Press the push-button mechanism at the top of the pen until the tip extends and locks into place.
2. **Writing:** Hold the pen comfortably using the latex-free grip. Apply light pressure to the paper as you write. The liquid gel ink flows smoothly, providing clear and consistent lines.
3. **Retract the Tip:** When finished writing, press the side clip or the push-button again (depending on the specific mechanism) to retract the pen tip into the barrel. This protects the tip and prevents accidental marks.



Image: A hand holding a Pentel EnerGel RTX pen, demonstrating its use on a grid-lined notebook. The image emphasizes the pen's smooth writing and its suitability for left-handed users, with text stating "GREAT FOR LEFT HANDED WRITERS" and "NO SMEARS, NO SMUDGES, NO GLOBS."

MAINTENANCE

To ensure the longevity and optimal performance of your Pentel EnerGel RTX pen:

- **Refilling:** The EnerGel RTX pen is refillable. When the ink runs out, replace the ink cartridge with a genuine Pentel

EnerGel refill (any size/color EnerGel refill is compatible). To refill, unscrew the barrel, remove the old cartridge, insert the new one, and screw the barrel back together.

- **Storage:** Store pens with the tip retracted to prevent drying out or accidental marking. Avoid storing in extreme temperatures.
- **Cleaning:** If the pen barrel or grip becomes dirty, wipe it gently with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.



Image: An illustration showing multiple Pentel EnerGel pens with different tip sizes (0.3mm, 0.5mm, 0.7mm, 1.0mm) and separate ink refills. The image highlights that the pens are "REFILLABLE" with "ANY SIZE/COLOR EnerGel REFILL."

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Ink not flowing smoothly or skipping.	Ink cartridge is empty or nearly empty; tip is clogged; pen has been stored improperly.	Replace the ink cartridge. Gently tap the pen tip on a piece of scrap paper to dislodge any clogs. Store the pen horizontally or tip-down.
Pen tip does not retract or extend properly.	Mechanism is jammed or damaged.	Ensure no foreign objects are obstructing the mechanism. If the mechanism is damaged, the pen may need to be replaced.
Ink smears after writing.	Ink has not had sufficient time to dry; writing on highly non-absorbent paper.	Allow a few seconds for the ink to dry, especially on glossy surfaces. EnerGel ink is fast-drying, but extreme conditions or certain paper types may require more time.

SPECIFICATIONS

- Brand:** Pentel
- Model Number:** BL77BP6A
- Ink Type:** Liquid Gel Ink
- Point Type:** Medium
- Line Size:** 0.7mm
- Ink Color:** Black (for this specific model)
- Closure Type:** Retractable
- Grip Type:** Latex-free Ribbed Grip
- Material Type:** Metal (tip)
- Item Weight:** Approximately 2.88 ounces (for a pack of 6)
- Product Dimensions:** Approximately 7.4 x 4 x 0.8 inches (for a pack)
- Refillable:** Yes, with Pentel EnerGel refills

WARRANTY AND SUPPORT

Pentel products are manufactured to high-quality standards. For specific warranty information or support inquiries regarding your EnerGel RTX pen, please refer to the official Pentel website or contact their customer service directly. Keep your purchase receipt as proof of purchase. You can visit the official Pentel store for more information:[Pentel Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question