

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Fuji Xerox](#) /

> [Fuji Xerox CT350871 Drum/Toner Cartridge Instruction Manual for DocuPrint 3010, 3000, and 3100](#)

Fuji Xerox CT350871

Fuji Xerox CT350871 Drum/Toner Cartridge Instruction Manual

For DocuPrint 3010, DocuPrint 3000, and DocuPrint 3100 Printers

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your Fuji Xerox CT350871 Drum/Toner Cartridge. Please read this manual thoroughly before installation and retain it for future reference. Proper installation and maintenance ensure optimal print quality and extend the life of your printer.

2. PRODUCT OVERVIEW

The Fuji Xerox CT350871 is an integrated drum and toner cartridge designed for specific Fuji Xerox DocuPrint laser printers. This genuine consumable ensures consistent, high-quality output for your printing needs.

- **Model Number:** CT350871
- **Brand:** Fuji Xerox
- **Compatible Printers:** DocuPrint 3010, DocuPrint 3000, DocuPrint 3100
- **Estimated Page Yield:** Approximately 6,000 pages (based on ISO/IEC 19752 standards)



An image showing the Fuji Xerox CT350871 drum and toner cartridge, a black rectangular unit with labels and connection

points. This unit is designed for easy installation into compatible DocuPrint printers.

3. SETUP AND INSTALLATION

Follow these steps to correctly install the CT350871 Drum/Toner Cartridge into your printer.

1. **Power Off the Printer:** Ensure the printer is turned off and unplugged from the power outlet to prevent electrical hazards.
2. **Open the Front Cover:** Locate and open the front cover of your DocuPrint printer. Refer to your printer's manual for specific instructions if needed.
3. **Remove the Old Cartridge (if applicable):** Carefully pull out the used drum/toner cartridge assembly. Place it in a protective bag for proper recycling.
4. **Unpack the New Cartridge:** Remove the new CT350871 cartridge from its packaging. Avoid exposing it to direct sunlight or strong artificial light for extended periods.
5. **Remove Protective Materials:** Gently remove any orange or colored protective tapes, seals, or covers from the cartridge as indicated by the labels. **Do not touch the green drum surface.**
6. **Insert the New Cartridge:** Align the new cartridge with the guides inside the printer and push it firmly until it clicks into place. Ensure it is seated securely.
7. **Close the Front Cover:** Close the printer's front cover.
8. **Power On the Printer:** Plug the printer back in and turn on the power. The printer will initialize and recognize the new cartridge.

Caution: Always handle the cartridge by its designated handles. Avoid touching the drum surface with your fingers or any objects, as this can cause print quality issues.

4. OPERATING INSTRUCTIONS

Once the CT350871 Drum/Toner Cartridge is correctly installed, your printer is ready for operation. The cartridge functions automatically as part of the printing process. No specific user interaction with the cartridge is required during normal printing operations.

- Ensure your printer drivers are up to date for optimal performance.
- Monitor your printer's status panel or software for low toner warnings.

5. MAINTENANCE

Proper handling and storage of the CT350871 cartridge contribute to its longevity and print quality.

- **Storage:** Store unused cartridges in their original, unopened packaging in a cool, dry place away from direct sunlight, extreme temperatures, and humidity.
- **Handling:** When replacing, hold the cartridge firmly. Do not shake or tilt excessively, especially if it's a used cartridge, as toner powder may spill.
- **Replacement:** Replace the cartridge when print quality degrades significantly (e.g., faded prints, streaks) or when the printer indicates that the drum or toner life has ended.
- **Disposal:** Follow local regulations for recycling or disposing of used toner and drum cartridges. Many manufacturers offer recycling programs.

6. TROUBLESHOOTING

If you encounter issues after installing the CT350871 cartridge, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Faded or Light Prints	Low toner level, incorrect printer settings.	Check printer status for toner level. Ensure print density settings are appropriate. Replace cartridge if toner is low.
Streaks or Lines on Prints	Damaged drum surface, toner residue.	Inspect the drum surface for scratches (avoid touching). Perform a printer cleaning cycle if available. Replace cartridge if drum is damaged.
Printer Not Recognizing Cartridge	Improper installation, faulty cartridge.	Remove and re-install the cartridge, ensuring it clicks into place. Power cycle the printer. If the issue persists, contact support.
Error Message Related to Drum/Toner	Cartridge not installed correctly, end of life.	Refer to your printer's display or manual for the specific error code. Re-install the cartridge or replace it if it has reached its end of life.

For persistent issues, consult your printer's user manual or contact Fuji Xerox customer support.

7. SPECIFICATIONS

Feature	Detail
Manufacturer	Fuji Xerox
Model Number	CT350871
Product Type	Drum/Toner Cartridge
Compatible Printers	DocuPrint 3010, DocuPrint 3000, DocuPrint 3100
Page Yield	Approx. 6,000 pages
Component	Laser Printer Consumable

8. WARRANTY AND SUPPORT

For information regarding warranty coverage for your Fuji Xerox CT350871 Drum/Toner Cartridge, please refer to the warranty documentation included with your purchase or visit the official Fuji Xerox website. For technical assistance or further inquiries, please contact Fuji Xerox customer support directly.

Fuji Xerox Customer Support: Please visit the official Fuji Xerox website for contact details specific to your region.

Related Documents - CT350871

	<p>Fuji Xerox DocuPrint M355 df User Guide</p> <p>Comprehensive user guide for the Fuji Xerox DocuPrint M355 df multifunction printer. Covers setup, operation, print, copy, scan, fax functions, software installation, troubleshooting, and maintenance.</p>
	<p>Fuji Xerox DocuPrint CM315 z User Guide: Setup, Operation, and Features</p> <p>Comprehensive user guide for the Fuji Xerox DocuPrint CM315 z printer, detailing setup, operation, printing, copying, scanning, faxing, maintenance, and troubleshooting for optimal performance.</p>
	<p>DocuPrint CP405 d User Guide</p> <p>Comprehensive user guide for the Fuji Xerox DocuPrint CP405 d printer, covering installation, operation, maintenance, troubleshooting, and software setup.</p>
	<p>Fuji Xerox GX Print Server Security Update Guide (2025-10)</p> <p>Fuji Xerox GX Print Server Microsoft Windows</p>
	<p>Security Update Guide for Fuji Xerox GX Print Servers (2025-09)</p> <p>This guide provides instructions for applying critical security updates to Fuji Xerox GX Print Server models, addressing vulnerabilities announced by Microsoft for Windows. It details the download and installation procedures for specific Windows updates (KB5065687, KB5065427) required for products like the Iridesse Production Press, B9 Series, Versant, and PrimeLink printers.</p>
	<p>Fuji Xerox GX Print Server Security Update Guide (2025-10)</p> <p>Microsoft Windows® Fuji Xerox GX Print Server . KB5066584</p> <p>KB5066836</p>

