

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SMEG](#) /

› [SMEG TSF02RDEU 50's Style Toaster Instruction Manual](#)

## SMEG TSF02RDEU

# SMEG TSF02RDEU 50's Style Toaster Instruction Manual

Model: TSF02RDEU

## 1. IMPORTANT SAFETY INFORMATION

---

Please read these instructions carefully before using the appliance. Keep this manual for future reference.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

## 2. PRODUCT OVERVIEW

---

The SMEG TSF02RDEU is a 50's style toaster designed for efficient and even toasting. It features two extra-wide slots, multiple browning levels, and special functions for defrosting and reheating.



Image 2.1: Front view of the SMEG TSF02RDEU toaster, showcasing its retro design and red finish.

### Key Components:

- **Toasting Slots:** Two extra-wide slots (36 mm width) to accommodate various bread types.
- **Toasting Lever:** Activates the toasting cycle and lowers/raises bread.
- **Browning Control Knob:** Allows selection of desired browning level.
- **Function Buttons:** Includes Defrost, Reheat, and Stop functions.
- **Removable Crumb Tray:** For easy cleaning and maintenance.

## 3. SETUP AND FIRST USE

---

### Unpacking:

- Remove all packaging materials from the toaster.

- Check that the appliance is free from any damage. Do not use if damaged.
- Ensure all accessories are present.

## Placement:

- Place the toaster on a stable, flat, heat-resistant surface.
- Ensure there is adequate ventilation around the toaster, keeping it away from walls, curtains, and other flammable materials.
- Do not place the toaster near water or other liquids.

## Initial Cleaning:

- Wipe the exterior of the toaster with a damp cloth.
- Ensure the crumb tray is clean and properly inserted.

## First Use (Seasoning):

Before toasting food, operate the toaster without bread for a few cycles at a medium browning setting. This will burn off any manufacturing residues and eliminate initial odors. Ensure the area is well-ventilated during this process.

## 4. OPERATING INSTRUCTIONS

---

### Toasting Bread:

1. **Plug In:** Connect the toaster to a suitable power outlet (220 Volts).
2. **Insert Bread:** Place slices of bread into the toasting slots. The toaster is designed for automatic bread removal.
3. **Select Browning Level:** Use the browning control knob to select your desired level of toast. Settings typically range from 1 (lightest) to 6 (darkest).
4. **Start Toasting:** Push the toasting lever down until it locks into place. The indicator light will illuminate, and the toasting cycle will begin.
5. **Automatic Ejection:** Once the selected browning level is reached, the toast will automatically pop up.



Image 4.1: Close-up of the toaster's control panel, including the toasting lever, browning control knob, and function buttons.

### Special Functions:

- **Defrost Function (\*):** Press the defrost button after lowering the bread. This function thaws and toasts frozen bread in one cycle. The indicator light will illuminate.

- **Reheat Function (SSS):** Press the reheat button after lowering the bread. This function warms already toasted bread without further browning. The indicator light will illuminate.
- **Cancel/Stop Function (STOP):** Press the STOP button at any time to interrupt the toasting cycle and eject the bread. The indicator light will turn off.



Image 4.2: The SMEG TSF02RDEU toaster shown with optional accessories like sandwich racks and a bun warmer (accessories sold separately).

## 5. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your toaster.

### Before Cleaning:

- Always unplug the toaster from the power outlet.
- Allow the toaster to cool completely before handling or cleaning.

### Crumb Tray:

- The toaster features a removable crumb tray for easy cleaning.
- Pull out the crumb tray from the bottom of the toaster.
- Empty crumbs into a waste bin.
- Wipe the tray with a damp cloth and dry thoroughly before reinserting.
- Ensure the crumb tray is fully inserted before using the toaster.

### Exterior Cleaning:

- Wipe the exterior surfaces with a soft, damp cloth.

- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
- Never immerse the toaster in water or any other liquid.

## Storage:

When not in use, store the toaster in a clean, dry place. Ensure the power cord is neatly wrapped and not kinked.

## 6. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; circuit breaker tripped.	Ensure the toaster is securely plugged in. Test the outlet with another appliance. Check your household circuit breaker.
Bread does not lower or stay down.	Toaster not plugged in; browning control not set; internal mechanism jammed.	Ensure the toaster is plugged in. Select a browning level. Check for any obstructions in the slots.
Toast is too light or too dark.	Browning control set incorrectly.	Adjust the browning control knob to a higher setting for darker toast or a lower setting for lighter toast.
Smoke coming from toaster.	Crumbs accumulated in the bottom; food stuck in slots; first use residue.	Immediately unplug the toaster. Empty the crumb tray. Remove any stuck food (only when unplugged and cool). Ensure good ventilation during first use.
Bread stuck in toaster.	Bread too thick or irregularly shaped.	Unplug the toaster and allow it to cool. Carefully remove the bread using non-metallic tongs.

If the problem persists after trying these solutions, please contact customer support.

## 7. SPECIFICATIONS

Technical specifications for the SMEG TSF02RDEU Toaster:

<b>Brand</b>	SMEG
<b>Model Number</b>	TSF02RDEU
<b>Color</b>	Red
<b>Dimensions (L x W x H)</b>	39.4 x 20.8 x 21.5 cm
<b>Weight</b>	3.1 Kilograms

<b>Power</b>	1500 Watts
<b>Voltage</b>	220 Volts
<b>Material</b>	Plastic
<b>Number of Slots</b>	2
<b>Slot Width</b>	36 mm
<b>Special Features</b>	Adjustable browning color, Defrost function, Reheat function, Anti-slip feet, Removable crumb tray

## **8. WARRANTY AND SUPPORT**

---

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official SMEG website.

Keep your proof of purchase for warranty claims.