

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

RCA DRC98101S

RCA DRC98101S Portable DVD Player User Manual

Model: DRC98101S

INTRODUCTION

This manual provides comprehensive instructions for the operation and maintenance of your RCA DRC98101S Portable DVD Player. Designed for on-the-go entertainment, this device allows you to watch movies and view photos with ease. Please read this manual thoroughly before using the product to ensure proper function and longevity.

The RCA DRC98101S features a 10-inch swivel screen for versatile viewing angles, plays DVDs and CDs, and supports JPEG picture files. It includes both home and car power adapters and is equipped with a built-in rechargeable battery for extended use.

SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

PACKAGE CONTENTS

Please check the box for the following items:

- RCA DRC98101S Portable DVD Player
- AC Power Adapter (for home use)
- Car Power Adapter (for vehicle use)
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components of your portable DVD player.



Figure 1: RCA DRC98101S Portable DVD Player in open position, showing the 10-inch swivel screen and base unit. The screen displays an image of children seated in a car, indicating its use for travel entertainment.



Figure 2: RCA DRC98101S Portable DVD Player with the screen folded flat against the base, showing a family photo on the display. This illustrates the compact form factor when not in use or when viewing still images.

Main Components:

- **10-inch LCD Swivel Screen:** High-resolution display that can rotate for optimal viewing angles.
- **DVD/CD Disc Tray:** Located on the base unit for inserting media.
- **Control Buttons:** Play/Pause, Stop, Fast Forward, Rewind, Menu, Volume, etc. (Exact layout may vary, refer to device for specific button locations).
- **Power Input:** Port for connecting AC or car power adapters.
- **Headphone Jack:** For private listening.
- **USB Port (if applicable):** For playing media from USB drives (check device for presence).
- **SD Card Slot (if applicable):** For playing media from SD cards (check device for presence).
- **Built-in Speakers:** For audio playback without headphones.

SETUP

Charging the Battery:

1. Connect the AC power adapter to the DC IN port on the DVD player.
2. Plug the AC power adapter into a standard wall outlet.
3. The charging indicator light (if present) will illuminate. Allow several hours for a full charge before first use.
4. Alternatively, use the car power adapter to charge the unit in your vehicle's 12V power outlet.

Initial Power On:

1. Ensure the unit is charged or connected to a power source.
2. Press and hold the POWER button until the screen illuminates.

3. Adjust the screen to your desired viewing angle using the swivel mechanism.

OPERATING INSTRUCTIONS

Playing a DVD/CD:

1. Open the disc tray cover.
2. Carefully place a DVD or CD onto the spindle with the label side facing up.
3. Gently close the disc tray cover until it clicks into place.
4. The player will automatically detect the disc and begin playback or display the disc menu.
5. Use the control buttons (Play/Pause, Stop, Fast Forward, Rewind, Next/Previous Track) to navigate playback.
6. Adjust volume using the Volume controls.

Viewing JPEG Pictures:

1. Insert a CD containing JPEG picture files into the disc tray.
2. The player should recognize the disc and present options for viewing.
3. Navigate through your picture files using the directional buttons and select to view.

System Settings:

Access the system menu to adjust settings such as display brightness, aspect ratio, audio output, and parental controls. Refer to the on-screen menu for specific options and navigation.

MAINTENANCE

Cleaning the Unit:

- Before cleaning, ensure the unit is powered off and unplugged from any power source.
- Wipe the exterior of the unit with a soft, dry, lint-free cloth.
- For stubborn marks, slightly dampen the cloth with water. Do not use abrasive cleaners, waxes, or solvents.
- For the screen, use a soft, clean cloth specifically designed for LCD screens. Do not press hard on the screen.

Disc Care:

- Handle discs by their edges to avoid fingerprints on the playing surface.
- Keep discs in their cases when not in use to prevent scratches and dust accumulation.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.

TROUBLESHOOTING

If you encounter issues with your RCA DRC98101S, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery depleted; Power adapter not connected properly.	Charge the battery; Ensure power adapter is securely connected to the unit and power outlet.
Disc not playing	Disc inserted incorrectly; Disc is dirty or scratched; Incompatible disc format.	Reinsert disc correctly; Clean the disc; Ensure disc is a standard DVD or CD.
No sound	Volume too low; Headphones connected; Mute function activated.	Increase volume; Disconnect headphones; Deactivate mute.

Problem	Possible Cause	Solution
Picture distorted or no picture	Disc issue; Screen settings.	Clean or replace disc; Adjust display settings in the system menu.

SPECIFICATIONS

Model Number	DRC98101S / LYSB00MLYFDPK-ELECTRNCS
Brand	RCA
Screen Size	10 Inches
Display Type	LCD
Media Type Supported	DVD, CD, JPEG
Color	Black
Item Weight	2 pounds
Product Dimensions	9.3 x 9.3 x 3.9 inches
Special Features	Portable, Rechargeable Battery, Swivel Screen

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact RCA customer support.

For technical support, service, or replacement parts, please visit the official RCA website or contact their customer service line. Keep your purchase receipt as proof of purchase for warranty claims.

Note: This product may be refurbished. Refurbished products are tested and certified to work properly and may have minor blemishes or light scratches. The refurbishing process includes functionality testing, basic cleaning, inspection, and repackaging.