

Remington S6505

Remington S6505 PRO Sleek & Curl Hair Styler Instruction Manual

Model: S6505

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the Remington S6505 PRO Sleek & Curl hair styler. Failure to follow these instructions may result in electric shock, fire, or injury.

- **Burn Hazard:** The surfaces of this appliance become extremely hot during use. Avoid direct contact with skin, especially the scalp, ears, and neck. Always use the styler with caution.
- **Electric Shock Risk:** To reduce the risk of electric shock, do not use this appliance near bathtubs, sinks, or other water sources. Do not immerse the appliance in water or any other liquid. If the appliance falls into water, unplug it immediately and do not reach into the water.
- **Fire Risk:** Unplug the appliance immediately after use and when not in use. Do not leave the appliance unattended when plugged in. Ensure the appliance is placed on a heat-resistant surface when hot.
- **Children:** Keep this appliance out of reach of children. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Cord Care:** Do not wrap the cord around the appliance. Do not pull, twist, or bend the cord excessively. Inspect the cord regularly for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

2. PRODUCT OVERVIEW

The Remington S6505 PRO Sleek & Curl is a versatile hair styling tool designed for both straightening and curling hair. It features advanced ceramic tourmaline titanium plates for smooth styling and a rounded design to facilitate easy curl creation.



Figure 1: The Remington S6505 PRO Sleek & Curl hair styler, showcasing its sleek black design and digital display.



Figure 2: The product packaging for the Remington S6505 PRO Sleek & Curl, highlighting its features and styling capabilities.

3. SETUP AND FIRST USE

- Unpacking:** Carefully remove the hair styler and all accessories from the packaging. Retain the packaging for future storage or transport if desired.
- Initial Inspection:** Inspect the appliance for any signs of damage. Do not use if the styler or power cord appears damaged.
- Power Connection:** Ensure your hands are dry. Plug the power cord into a standard electrical outlet (120-240V AC). The appliance is multi-voltage, making it suitable for travel.
- Plate Lock:** The styler features a plate lock for compact storage. To unlock, slide the lock switch located near the hinge.

4. OPERATING INSTRUCTIONS

4.1. Turning On/Off and Temperature Control

- Power On:** Press and hold the power button () for a few seconds until the digital display illuminates.

2. **Temperature Adjustment:** Use the '+' and '-' buttons to select your desired temperature. The digital display will show the current temperature. The styler heats up quickly. The maximum temperature setting is 230 degrees Celsius.
3. **Temperature Lock:** To prevent accidental temperature changes during styling, press the '-' button and hold it for 2 seconds. A 'padlock' symbol will appear on the display. To unlock, press and hold the '-' button again for 2 seconds.
4. **Power Off:** Press and hold the power button () until the display turns off. Always unplug the appliance after use.
5. **Auto Shut-off:** For safety, the styler will automatically switch off after 60 minutes of inactivity.



Figure 3: Digital display showing the temperature setting, which can be adjusted using the '+' and '-' buttons.

4.2. Hair Preparation

- Ensure hair is clean, dry, and tangle-free before styling.
- Apply a heat protectant spray to protect your hair from heat damage.
- Divide hair into manageable sections using clips.

4.3. Straightening Hair

- Take a small section of hair (approximately 2 inches wide).
- Place the section of hair between the styling plates, close to the roots.
- Gently clamp the plates together and glide the styler slowly and smoothly down the length of the hair, from roots to ends.
- Repeat this process on all sections of hair until desired straightness is achieved.



Figure 4: Close-up view of the advanced ceramic tourmaline titanium plates, designed for smooth gliding and even heat distribution.

4.4. Curling Hair

The unique rounded design of the Remington S6505 allows for easy creation of curls and waves.

- Take a small section of hair.
- Open the styler and place the hair section between the plates, close to the roots.
- Close the plates and rotate the styler 180 degrees (half turn) away from your face.
- Keeping the styler in this position, slowly glide it down the hair section to the ends. The rounded barrel will help form the curl.
- Release the hair and allow the curl to cool before touching or styling further to set the shape.
- Repeat for all sections of hair.

5. MAINTENANCE AND STORAGE

5.1. Cleaning

- Always ensure the styler is unplugged and completely cool before cleaning.
- Wipe the exterior surfaces and styling plates with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals.
- Ensure no water enters the appliance.

5.2. Storage

- After use, allow the styler to cool down completely.
- Engage the plate lock by sliding the switch to the locked position for compact storage.
- Store the appliance in a dry, safe place, away from children.
- Do not wrap the power cord tightly around the appliance, as this can damage the cord.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Styler does not turn on.	Not plugged in correctly, power outlet issue, or appliance fault.	Ensure the power cord is securely plugged into a working electrical outlet. Try a different outlet. If the issue persists, contact customer support.
Styler is not heating up.	Temperature not set, auto shut-off activated, or internal fault.	Check the digital display to ensure a temperature is selected. If the styler has been inactive for 60 minutes, it may have auto-shut off; turn it back on.
Temperature display is locked.	Temperature lock feature is active.	Press and hold the '-' button for 2 seconds to unlock the temperature setting.

If you encounter problems not listed here, or if the suggested solutions do not resolve the issue, please contact Remington customer support.

7. SPECIFICATIONS

- **Model Number:** S6505
- **Brand:** Remington
- **Product Dimensions:** 14.61 x 3.43 x 0.01 cm
- **Item Weight:** 366 Grams
- **Material:** Ceramic Tourmaline Titanium (Plates)
- **Heater Surface Material:** Stainless Steel
- **Max. Temperature Setting:** 230 Degrees Celsius
- **Power Source:** Corded Electric
- **Product Benefits:** Curling, Straightening
- **Shape:** Rounded Barrel (for versatile styling)
- **First Available:** August 21, 2014

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Remington website. Warranty terms and conditions may vary by region.

If you require further assistance, have questions about your product, or need to report a fault, please contact Remington customer support through their official website or the contact information provided in your product packaging.

Online Support: www.remingtonproducts.com

