

## Midea WHS-65LSS1

# Midea WHS-65LSS1 1.6 cu.ft. Compact Refrigerator User Manual

Model: WHS-65LSS1

## 1. INTRODUCTION

Thank you for choosing the Midea WHS-65LSS1 Compact Refrigerator. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions thoroughly before use and retain them for future reference.

### Key Features:

- **Compact Design:** Ideal for small spaces such as dorm rooms, offices, or bedrooms.
- **Energy Efficient:** Energy Star certified with low daily power consumption.
- **Adjustable Temperature:** 6-level temperature control for customized cooling.
- **Reversible Door:** Allows for flexible placement by changing the door swing direction.
- **Quiet Operation:** Advanced compressor technology for minimal noise.

## 2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Ensure the refrigerator is properly grounded.
- Do not operate the appliance with a damaged cord or plug.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Keep ventilation openings clear of obstruction.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the refrigerator for any damage. Keep packaging materials out of reach of children.

### 3.2 Placement

Place the refrigerator on a flat, stable surface away from direct sunlight and heat sources (e.g., stove, heater). Allow at least 4 inches (10 cm) of space around the back and sides for proper ventilation. This compact unit is suitable for various environments including offices, bedrooms, dorms, living rooms, and garages.



Image: The Midea WHS-65LSS1 compact refrigerator positioned in a room, demonstrating its suitability for various living spaces.

### 3.3 Leveling the Refrigerator

Your refrigerator has adjustable leveling legs. Turn the legs clockwise to raise the unit and counter-clockwise to lower it. Ensure the refrigerator is level to optimize performance and prevent vibrations.



Image: Illustration of the adjustable leveling legs, indicating how to adjust them for stability.

### 3.4 Reversible Door Installation

The door can be reversed to open from either the left or right side, offering flexibility for placement. Refer to the detailed diagram below for instructions on how to reverse the door hinge. This process typically involves removing the top hinge, transferring the door, and reattaching the hinges on the opposite side.



Image: A visual guide demonstrating the steps to reverse the refrigerator door's opening direction.

### 3.5 Power Connection

Plug the refrigerator into a dedicated, grounded 115V AC outlet. Do not use extension cords or adapter plugs. Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

## 4. OPERATING INSTRUCTIONS

### 4.1 Temperature Control

The refrigerator features a 6-level temperature control knob located inside the unit. Rotate the knob to select the desired cooling level. Setting '1' represents the warmest temperature, while '6' represents the coldest. Adjust the setting based on ambient temperature and food load. A setting of '3' or '4' is generally recommended for normal use.



Image: The interior of the refrigerator highlighting the adjustable thermostat control for temperature regulation.

## 4.2 Food Storage Guidelines

Organize food items to allow for proper air circulation. The refrigerator includes a wire shelf and door racks for efficient storage. The small internal freezer compartment is suitable for ice trays or small frozen items.



Image: An open view of the refrigerator's interior, displaying organized food and drinks on shelves and door racks.

## 5. MAINTENANCE

### 5.1 Cleaning

Always unplug the refrigerator before cleaning. Clean the interior and exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners or solvents. The wire shelf is removable for easier cleaning.



Image: A hand demonstrating the removal of the wire shelf from the refrigerator's interior for cleaning purposes.

5.2 Defrosting

This refrigerator features manual defrost. Frost will accumulate on the inner walls of the freezer compartment. When the frost layer becomes about 0.2 inches (5 mm) thick, defrost the unit. To defrost, unplug the refrigerator, remove all food, and leave the door open. Place a towel at the bottom to absorb melted ice. Do not use sharp objects to remove frost.

6. TROUBLESHOOTING

Review the following common issues and solutions before contacting customer service:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; temperature control set to '0' or 'off'.	Check power connection; reset circuit breaker; adjust temperature control.
Temperature is not cold enough.	Door opened too frequently; warm food placed inside; poor ventilation; temperature control set too warm.	Minimize door openings; allow hot food to cool before storing; ensure adequate clearance around unit; adjust temperature control to a colder setting.
Excessive noise.	Refrigerator not level; loose parts; normal compressor operation.	Adjust leveling legs; check for loose items inside; some operational sounds are normal.
Water on floor.	Drain pan overflowing; door not sealed properly.	Empty and clean drain pan; check door gasket for proper seal.

7. SPECIFICATIONS

The following table outlines the technical specifications for the Midea WHS-65LSS1 Compact Refrigerator:

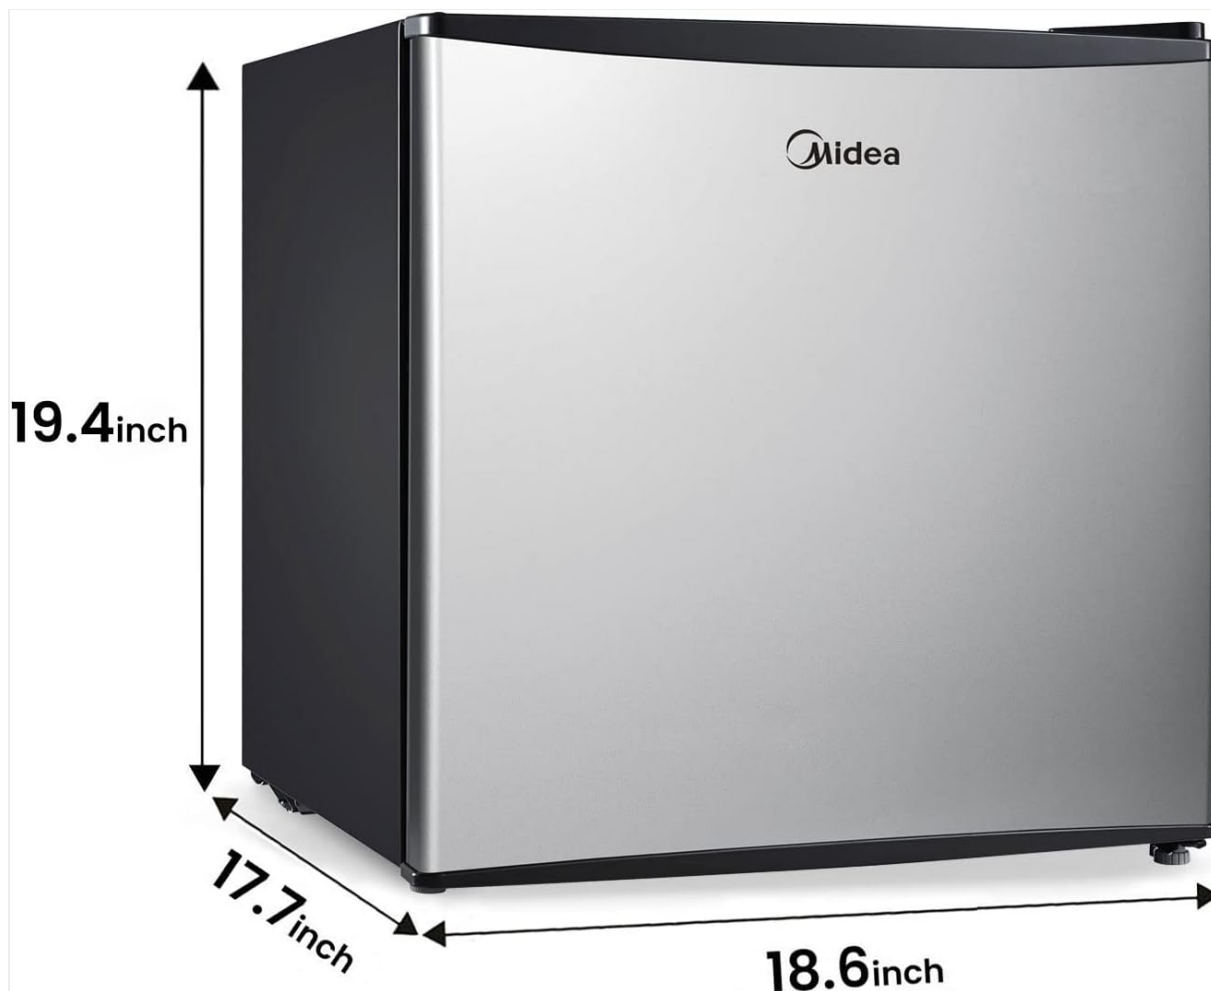


Image: Dimensional drawing of the Midea WHS-65LSS1 refrigerator, detailing its width, depth, and height.

Feature	Specification
Model	WHS-65LSS1
Capacity	1.6 Cubic Feet
Dimensions (W x D x H)	18.58 x 17.72 x 19.37 inches
Item Weight	35.3 Pounds
Voltage	115 Volts
Annual Energy Consumption	75 Watts
Defrost System	Manual
Door Hinge	Reversible
Shelf Type	Wire
Color	Silver

## 8. WARRANTY AND SUPPORT

### 8.1 Limited Warranty

Midea warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is valid only for the original purchaser and is not

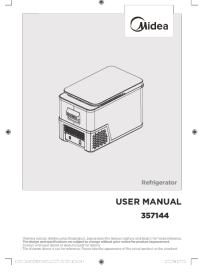
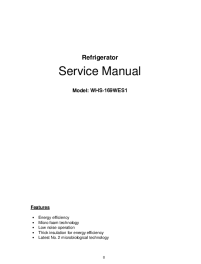
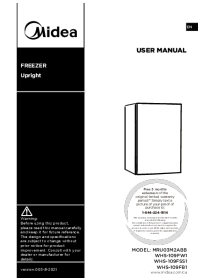

transferable. It does not cover damage resulting from accident, misuse, abuse, alteration, or improper installation.

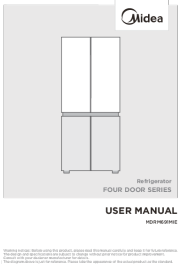
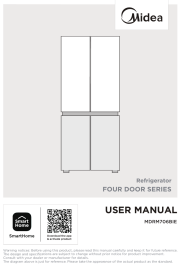
## 8.2 Customer Support

For technical assistance, warranty claims, or to inquire about replacement parts, please contact Midea customer service. Have your model number (WHS-65LSS1) and proof of purchase ready when contacting support.

**Midea Customer Service:** Please refer to the contact information provided on the Midea official website or your purchase documentation.

## Related Documents - WHS-65LSS1

	<p><a href="#">Midea 357144 Refrigerator User Manual - Operation, Safety, and Specifications</a></p> <p>Comprehensive user manual for the Midea 357144 refrigerator, covering safety instructions, product features, specifications, operation, cleaning, maintenance, troubleshooting, and disposal. Includes details on DC power usage for vehicles and camping.</p>
	<p><a href="#">WHS-169WES1 Refrigerator Service Manual</a></p> <p>This service manual provides detailed information for the Midea WHS-169WES1 refrigerator, including specifications, safety guidelines, troubleshooting procedures, and maintenance tips.</p>
	<p><a href="#">Midea Upright Freezer User Manual</a></p> <p>User manual for Midea upright freezers, covering important safeguards, installation, operation, troubleshooting, and care instructions for models MRU03M2ABB, WHS-109FW1, WHS-109FSS1, and WHS-109FB1.</p>
	<p><a href="#">Midea MDRD142FGE Single Door Refrigerator User Manual</a></p> <p>This user manual provides essential guidance for the safe and efficient operation, installation, and maintenance of the Midea MDRD142FGE Single Door Refrigerator. It covers product specifications, overview, operating instructions, cleaning, troubleshooting, and energy-saving tips.</p>

 <p>The image shows the front cover of the Midea Four Door Series Refrigerator User Manual. It features the Midea logo at the top left, a line drawing of a four-door refrigerator in the center, and the text 'Refrigerator FOUR DOOR SERIES' and 'USER MANUAL' at the bottom. There is also a small QR code and some fine print at the bottom left.</p>	<p><a href="#">Midea Four Door Series Refrigerator User Manual</a></p> <p>User manual for the Midea Four Door Series Refrigerator, model MDRM691MIE. This manual provides detailed information on installation, operation, maintenance, and troubleshooting.</p>
 <p>The image shows the front cover of the Midea MDRM706BIE Four Door Series Refrigerator User Manual. It features the Midea logo at the top left, a line drawing of a four-door refrigerator in the center, and the text 'Refrigerator FOUR DOOR SERIES' and 'USER MANUAL' at the bottom. There is also a small QR code and some fine print at the bottom left.</p>	<p><a href="#">Midea MDRM706BIE Four Door Series Refrigerator User Manual</a></p> <p>Comprehensive user manual for the Midea MDRM706BIE Four Door Series refrigerator, covering installation, operation, maintenance, troubleshooting, and technical specifications. Includes guidance on energy saving, storage, and care.</p>