

Bosch MUZ5CC2

Bosch MUZ5CC2 Cube Cutter Accessory User Manual

For Bosch MUM5 Food Processors

1. INTRODUCTION

This user manual provides essential information for the safe and efficient use of your Bosch MUZ5CC2 Cube Cutter accessory. This accessory is designed to work with Bosch MUM5 food processors, enabling you to precisely cut various ingredients into uniform cubes. Please read these instructions carefully before first use and keep them for future reference.

Key Features:

- Efficiently cuts vegetables, fruits, meat, and cheese into equal cubes.
- Two selectable cube sizes: 0.9 cm x 0.9 cm and 1.3 cm x 1.3 cm.
- Ideal for processing large quantities, such as for salads or party preparations.
- Durable stainless steel blade for consistent results.
- Dishwasher-safe components for easy cleaning.

2. SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent injury or damage to the appliance:

- **Sharp Blades:** The cutting blades are extremely sharp. Handle them with extreme care during assembly, disassembly, cleaning, and storage. Always hold blades by the plastic parts.
- **Unplug Before Handling:** Always unplug the food processor from the power supply before attaching, removing, or cleaning the cube cutter accessory.
- **Children and Supervision:** Keep the accessory and its components out of reach of children. Close supervision is necessary when the appliance is used near children.
- **Proper Use:** Use the accessory only for its intended purpose as described in this manual. Do not attempt to process excessively hard or frozen foods, as this may damage the blades or the appliance.
- **Inspect for Damage:** Before each use, inspect all parts for any signs of damage. Do not use if any

part is cracked, broken, or otherwise damaged.

- **Never Use Hands:** Never use your fingers or other utensils to push food into the feed chute while the appliance is operating. Always use the provided food pusher.

3. COMPONENTS OVERVIEW

Familiarize yourself with the various parts of your Bosch MUZ5CC2 Cube Cutter accessory:



Image: Exploded view showing all components of the Bosch MUZ5CC2 Cube Cutter accessory, including the main housing, lid, feed chute, two different sized cutting grids, and the food pusher.

1. Main Housing/Bowl
2. Lid with Feed Chute
3. Food Pusher
4. Blade Holder
5. Small Cube Cutting Grid (0.9 cm x 0.9 cm)
6. Large Cube Cutting Grid (1.3 cm x 1.3 cm)
7. Drive Shaft (integrated with food processor)

4. SETUP AND ASSEMBLY

Follow these steps to correctly assemble the cube cutter accessory onto your Bosch MUM5 food processor:



Image: The Bosch MUZ5CC2 Cube Cutter accessory fully assembled, showing the transparent main housing, lid with feed chute, and the cutting grid visible at the bottom.

1. **Ensure Power is Off:** Make sure your Bosch MUM5 food processor is unplugged from the power outlet.
2. **Attach Main Housing:** Place the main housing/bowl of the cube cutter onto the designated attachment point of your food processor. Rotate it until it locks securely into position.
3. **Insert Blade Holder:** Carefully place the blade holder onto the drive shaft inside the main housing. Ensure it sits firmly.

4. **Select Cutting Grid:** Choose either the small (0.9 cm) or large (1.3 cm) cube cutting grid. Carefully align the chosen grid with the blade holder and press it down until it clicks into place. *Handle grids by their edges to avoid contact with sharp parts.*
5. **Secure the Lid:** Place the lid with the feed chute onto the main housing. Rotate it clockwise until it locks securely. The food processor will not operate if the lid is not correctly locked.
6. **Insert Food Pusher:** Place the food pusher into the feed chute.

5. OPERATING INSTRUCTIONS

Once assembled, you can begin using your cube cutter. Always ensure the food processor is on a stable, flat surface.

Preparing Ingredients:

- Ingredients should be firm but not excessively hard or frozen.
- Cut larger ingredients into pieces that fit comfortably into the feed chute (approximately 5 cm x 5 cm).
- Remove any hard cores, seeds, or tough skins that could damage the blades.



Image: A close-up view of the stainless steel cutting grid, showing the precise square openings for dicing ingredients.

Dicing Process:

1. **Plug In:** Plug the food processor into a suitable power outlet.
2. **Select Speed:** Turn on your food processor and select a medium to high speed setting. Refer to your

food processor's manual for recommended speeds for accessories.

3. **Feed Ingredients:** Place prepared ingredients into the feed chute. Use the food pusher to gently guide the ingredients down towards the rotating blades. *Never force ingredients or use your hands.*
4. **Collect Cubes:** The diced ingredients will collect in the main housing/bowl.
5. **Monitor Capacity:** Do not overfill the main housing. Stop processing and empty the bowl when it reaches its maximum capacity to prevent jamming.
6. **Finish:** Once all ingredients are processed, turn off the food processor and unplug it before disassembling.



Image: A detailed view of the food pusher, designed to safely guide ingredients through the feed chute and onto the cutting grid.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your cube cutter accessory.

Disassembly for Cleaning:

1. Ensure the food processor is unplugged.
2. Remove the food pusher.
3. Unlock and remove the lid.
4. Carefully remove the cutting grid, holding it by its plastic frame.
5. Remove the blade holder.

6. Unlock and remove the main housing/bowl from the food processor.

Cleaning Instructions:

- All removable parts (main housing, lid, food pusher, blade holder, cutting grids) are dishwasher safe. Place them on the top rack of your dishwasher.
- For hand washing, use warm soapy water and a soft brush to remove any food residue. Pay special attention to the cutting grids, using a brush to clean between the blades.
- Rinse all parts thoroughly with clean water.
- Dry all components completely before reassembly or storage to prevent water spots or corrosion.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the plastic or metal surfaces.

Storage:

Store the clean and dry accessory in a safe place, away from children, preferably in its original packaging or a dedicated storage container to protect the blades.

7. TROUBLESHOOTING

If you encounter issues with your cube cutter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Accessory does not attach securely.	Incorrect alignment or obstruction.	Ensure the main housing is correctly aligned with the food processor's attachment point and rotated until it locks. Check for any food debris preventing proper seating.
Food processor does not start.	Lid not securely locked.	Ensure the lid is fully rotated and locked into place. Most food processors have a safety interlock.
Ingredients are not dicing properly or are jamming.	Ingredients are too large, too soft, too hard, or bowl is overfilled.	Cut ingredients to appropriate size. Ensure ingredients are firm. Do not force food. Empty the bowl if it is full.
Loud noise or vibration during operation.	Improper assembly or damaged part.	Turn off and unplug. Reassemble all parts carefully, ensuring they are securely locked. Inspect for any visible damage to blades or housing. If noise persists, discontinue use and contact support.

8. SPECIFICATIONS

Specification	Detail
Brand	Bosch
Model Number	MUZ5CC2
Product Dimensions (L x W x H)	25.5 x 23.5 x 21.5 cm (10.04 x 9.25 x 8.46 inches)
Item Weight	998 g (2.2 lbs)

Specification	Detail
Material	Stainless Steel (blades), Transparent Plastic (housing)
Cube Sizes	0.9 cm x 0.9 cm and 1.3 cm x 1.3 cm
Compatibility	Bosch MUM5 Food Processors
Care Instructions	Dishwasher Safe
Country of Origin	Germany

9. WARRANTY AND SUPPORT

Bosch provides a 1-year availability for spare parts for this accessory. For warranty claims, technical support, or further assistance, please contact your retailer or visit the official Bosch website.

You can find more information and support on the official Bosch store page [Bosch Official Store](#)
