

Bosch BBZ41FGALL

Bosch PowerProtect Type G ALL BBZ41FGALL Vacuum Cleaner Bags

Instruction Manual

1. INTRODUCTION

The Bosch PowerProtect Type G ALL BBZ41FGALL vacuum cleaner bags are designed to provide efficient dust filtration and extended service life for compatible Bosch vacuum cleaners. These bags are engineered to maintain high suction power even as they fill, ensuring consistent cleaning performance.

Key features include:

- **99.9% Fine Dust Filtering:** Captures a high percentage of fine dust particles for improved air quality.
- **50% Longer Service Life:** High dust retention capacity reduces the frequency of bag changes.
- **Motor Protection:** The design and material help protect the vacuum cleaner's motor from dust.
- **Hygienic Closure:** Ensures clean and easy disposal of the full bag.



Image 1.1: Packaging of Bosch PowerProtect Type G ALL BBZ41FGALL vacuum cleaner bags, highlighting key features.

2. COMPATIBILITY

These PowerProtect Type G ALL bags are suitable for all current Bosch vacuum cleaner series that use Type G ALL bags. This includes a wide range of models, ensuring broad compatibility.

Important Note: These bags are **not** suitable for Bosch vacuum cleaner series BSG8... and BSN1....

Please verify your vacuum cleaner's model number and required bag type before installation.

3. SETUP AND INSTALLATION

Follow these steps to correctly install a new vacuum cleaner bag:

1. **Open the Vacuum Cleaner:** Locate and open the dust compartment cover on your Bosch vacuum cleaner. Refer to your vacuum cleaner's specific manual for exact instructions on opening the compartment.
2. **Remove the Old Bag:** Carefully remove the full dust bag. The PowerProtect bags feature a hygienic closure mechanism; slide the closure tab to seal the opening before removal to prevent dust leakage.
3. **Insert the New Bag:** Unfold a new Bosch PowerProtect Type G ALL bag. Align the bag's cardboard collar with the bag holder inside the vacuum cleaner's dust compartment. Push the collar firmly into the holder until it clicks securely into place. Ensure the bag is fully extended within the compartment without being creased or folded.
4. **Close the Compartment:** Close the dust compartment cover, ensuring it latches securely. Do not force the cover if it does not close easily; recheck the bag's positioning.



Image 3.1: Diagram showing the proper placement of the vacuum cleaner bag within the compartment, with arrows indicating airflow.

4. OPERATING PRINCIPLES

The Bosch PowerProtect Type G ALL bags are designed for optimal performance throughout their lifespan. The multi-layer filtration system effectively captures 99.9% of fine dust, allergens, and other particles,

contributing to cleaner exhaust air.

The advanced material structure allows for high dust retention capacity, meaning the bag can hold a significant amount of dust before suction power is noticeably affected. This design ensures that cleaning results remain convincing on both low and higher wattage devices.

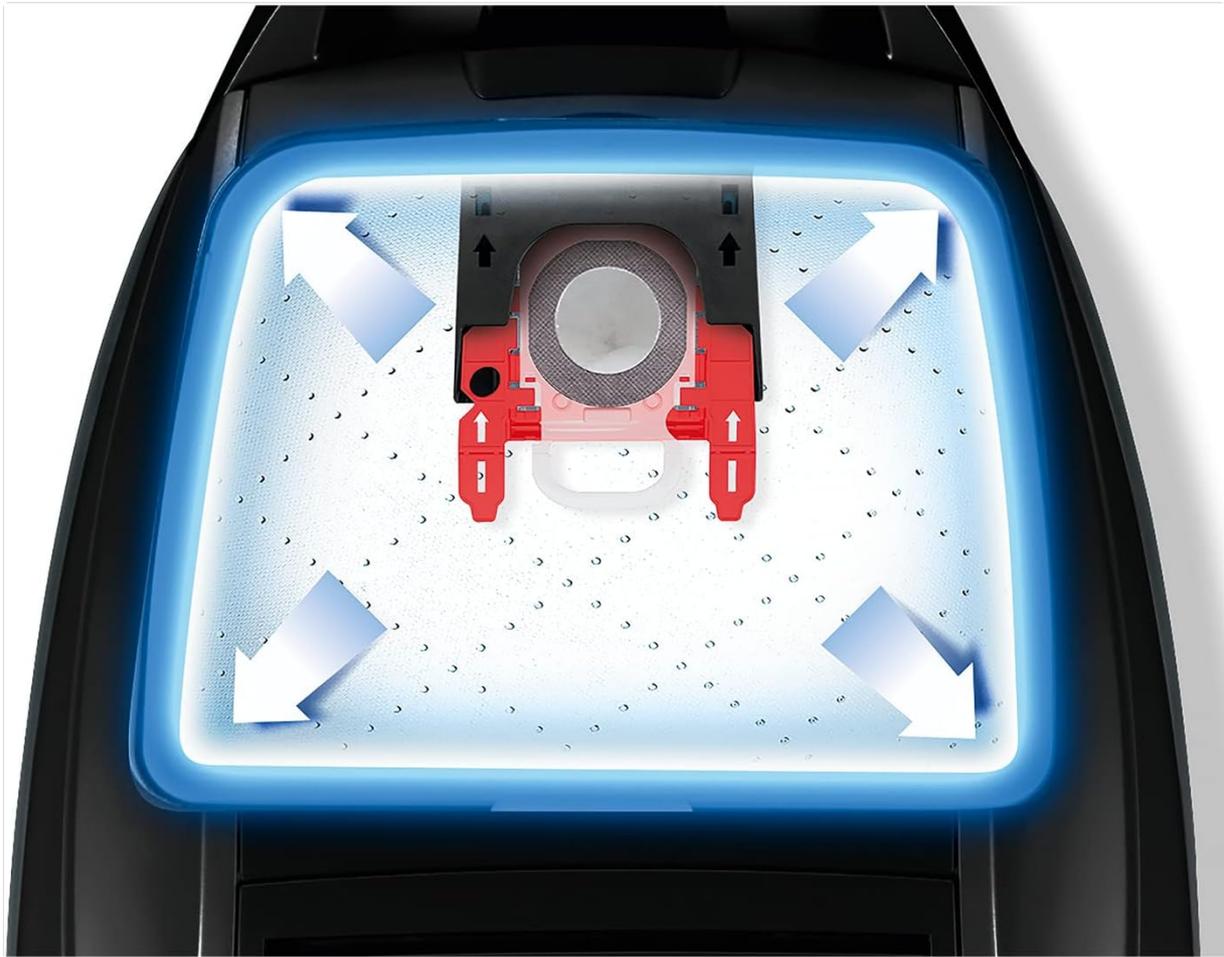


Image 4.1: Illustration of the multi-layer filtration technology used in the PowerProtect bags, showing how fine dust is captured.



Image 4.2: Visual representation of efficient airflow and cleaning performance on a carpet surface, demonstrating effective dust collection.

5. MAINTENANCE

Regular replacement of the vacuum cleaner bag is crucial for maintaining optimal performance and hygiene. It is recommended to change the bag when the 'bag full' indicator on your vacuum cleaner activates, or when you notice a decrease in suction power.

Thanks to the hygienic closure, disposing of a full bag is clean and simple. After removing the bag from the vacuum cleaner, ensure the closure tab is fully sealed to contain all dust and debris. Dispose of the bag in household waste according to local regulations.

The high dust retention capacity and precise fit of these bags also contribute to the longevity of your vacuum cleaner by providing efficient motor protection, preventing fine dust from reaching and damaging internal components.

6. TROUBLESHOOTING

If you experience issues with your vacuum cleaner's performance, consider the following common troubleshooting steps related to the dust bag:

- **Reduced Suction Power:** Check if the dust bag is full. Even if the indicator light is not on, a partially full bag can reduce suction. Replace the bag if it appears full.
- **Unusual Odors:** A full or old dust bag can sometimes cause odors. Replace the bag.
- **Dust Leakage:** Ensure the dust bag is correctly installed and the hygienic closure is fully sealed upon removal. Check for any tears or damage to the bag.
- **Vacuum Cleaner Not Starting:** Some vacuum cleaners have safety features that prevent operation if the dust compartment is not properly closed or if a bag is not installed. Ensure the bag is correctly seated and the compartment cover is latched.

For issues unrelated to the dust bag, please refer to your vacuum cleaner's specific instruction manual.

7. SPECIFICATIONS

Brand	Bosch
Model Info	BBZ41FGALL
Item Weight	3.52 ounces
Product Dimensions	3.15 x 4.72 x 8.46 inches
Capacity	5 Liters
Material Type	Paper
Included Components	4 x filter bags (as per product description)

8. WARRANTY AND SUPPORT

For warranty information regarding your Bosch PowerProtect Type G ALL BBZ41FGALL vacuum cleaner bags, please refer to the packaging or contact Bosch customer support directly. Keep your proof of purchase for any warranty claims.

If you require further assistance or have questions not covered in this manual, please visit the official Bosch website or contact their customer service department for expert support.