

Manuals.plus /

> [GE](#) /

> GE WD24X10062 Dishwasher Drain Hose Instruction Manual

GE WD24X10062

GE WD24X10062 Dishwasher Drain Hose Instruction Manual

Model: WD24X10062 | Brand: GE Appliances

INTRODUCTION

This manual provides essential information for the installation, maintenance, and safe operation of your GE Appliances WD24X10062 Dishwasher Drain Hose. This genuine OEM (Original Equipment Manufacturer) part is designed to carry drain water from your dishwasher to the drain system. Please read these instructions thoroughly before proceeding with installation to ensure proper function and safety.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury to persons, read all instructions before installing this part.

- Always disconnect the appliance from all utilities (power, water) before attempting any installation or repair.
- Wear appropriate personal protective equipment, such as gloves and safety glasses, during installation.
- Ensure all connections are secure and leak-free to prevent water damage.
- If you are unsure about any step, consult a qualified technician.
- This drain hose is designed for specific GE Appliances dishwasher models. Verify compatibility before installation.

PARTS INCLUDED

The GE Appliances WD24X10062 Dishwasher Drain Hose package includes:

- One (1) GE Appliances WD24X10062 Dishwasher Drain Hose.

Note: Hose clamps or other connection hardware may be required and are typically not included with the drain hose.



Image: The GE WD24X10062 Dishwasher Drain Hose, showing its corrugated design and end fittings.

SETUP AND INSTALLATION

Before beginning, ensure you have the necessary tools, which may include pliers, screwdrivers, and hose clamps.

1. **Disconnect Power and Water:** Locate your dishwasher's power supply and turn off the circuit breaker. Turn off the water supply valve to the dishwasher.
2. **Access the Drain Hose:** Carefully pull the dishwasher out from its cabinet enclosure to access the rear connections.
3. **Remove Old Drain Hose:**
 - Locate the existing drain hose connection at the dishwasher's drain pump or waste tee.
 - Loosen any hose clamps securing the old hose.
 - Carefully detach the old drain hose. Be prepared for residual water to drain out.
4. **Install New Drain Hose:**

- Attach one end of the new GE WD24X10062 drain hose to the dishwasher's drain pump outlet.
- Secure the connection with a hose clamp (not included) to prevent leaks. Ensure the clamp is tightened sufficiently but do not overtighten.
- Route the other end of the drain hose to your drain connection point (e.g., garbage disposal inlet, sink drain air gap, or standpipe). Ensure the hose is routed without kinks or sharp bends that could impede water flow.
- Connect the drain hose to the drain connection point and secure it with a hose clamp.

5. **Verify Connections:** Double-check all connections to ensure they are tight and properly sealed.

6. **Restore Utilities and Test:** Push the dishwasher back into its enclosure. Restore the water supply and turn on the circuit breaker. Run a short wash cycle and carefully inspect all drain hose connections for any signs of leaks.





Image: Close-up view of the flexible corrugated plastic tube with fittings on each end, ready for connection.

Be Sure, Check First

Confirm part number
with appliance manufacturer.



good things, for life.



GE APPLIANCES

Part # WD24X10062
Drain Hose
Genuine OEM Replacement Parts

Image: A graphic emphasizing the importance of confirming the part number WD24X10062 with the appliance manufacturer for compatibility.

OPERATION

Once properly installed, the GE WD24X10062 Dishwasher Drain Hose operates passively as part of your dishwasher's drainage system. No direct user interaction is required for its operation. Ensure the hose remains free of kinks and blockages for efficient water drainage during dishwasher cycles.

MAINTENANCE

Regular maintenance of your drain hose can help prevent issues and extend its lifespan:

- **Inspect Periodically:** Every few months, visually inspect the entire length of the drain hose for any signs of wear, cracks, leaks, or kinks.
- **Check Connections:** Ensure that the hose clamps at both ends remain tight and secure.
- **Clear Blockages:** If you notice slow drainage or water backing up, the hose may be partially blocked. Disconnect

the hose (after disconnecting power and water) and check for food debris or other obstructions. Clean as necessary.

- **Avoid Harsh Chemicals:** Do not use harsh chemical drain cleaners, as these can damage the plastic material of the hose.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dishwasher not draining	Kinked or blocked drain hose.	Check the hose for kinks. Disconnect power and water, then remove and inspect the hose for blockages. Clear any obstructions.
Water leaking from hose connections	Loose hose clamps or damaged hose ends.	Ensure hose clamps are securely tightened. If the hose ends are damaged, the hose may need replacement.
Unpleasant odor from drain area	Food debris buildup inside the hose.	Disconnect power and water. Remove the hose and clean it thoroughly with warm, soapy water.

If troubleshooting steps do not resolve the issue, contact GE Appliances customer support or a qualified service technician.

SPECIFICATIONS

- **Model Number:** WD24X10062
- **Brand:** GE Appliances
- **Material:** Flexible Corrugated Plastic
- **Color:** White
- **Length:** Approximately 57.5 inches (146 cm)
- **Width:** Approximately 1.12 inches (2.8 cm)
- **Item Weight:** Approximately 4.6 ounces (130 grams)
- **Compatibility:** Designed for various GE Appliances dishwasher models (refer to your dishwasher's owner's manual for specific compatibility).

WD24X10062

Length: 57.5 inches

Width: 1.12 inches

Height: 1.12 inches



good things, for life.



GE APPLIANCES

Image: Visual representation of the GE WD24X10062 drain hose with its key dimensions: Length 57.5 inches, Width 1.12 inches, Height 1.12 inches.

WARRANTY AND SUPPORT

For information regarding the warranty of your GE Appliances WD24X10062 Drain Hose, please refer to the documentation provided with your original dishwasher or visit the official GE Appliances website. For technical support or assistance with installation, please contact GE Appliances customer service.

GE Appliances Customer Service: [Visit GE Appliances Support](#)

© 2024 GE Appliances. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00MNOQBSG>

More documents and user manuals: **<https://manuals.plus/>**