

Manuals.plus /

› KidKraft /

› KidKraft Reversible Wooden Activity Table with 195 Building Bricks Instruction Manual, Model 17506

KidKraft 17506

KidKraft Reversible Wooden Activity Table with 195 Building Bricks Instruction Manual

Model: 17506

INTRODUCTION

This manual provides essential instructions for the assembly, operation, and maintenance of your KidKraft Reversible Wooden Activity Table. Designed for children aged 3 and up, this versatile table features a reversible tabletop with a building brick surface on one side and a smooth play surface on the other, along with integrated storage.



Image: The KidKraft Reversible Wooden Activity Table shown with colorful building bricks arranged on its gray baseplate surface. The table is made of light-colored wood and features an open storage area visible beneath the tabletop.

SAFETY INFORMATION

Please read all safety warnings and instructions before assembly and use. Failure to follow these instructions may result in injury.

- **Adult Assembly Required:** This product contains small parts and requires adult assembly.
- **Choking Hazard:** Small parts and building bricks are included. Not suitable for children under 36 months due to choking hazards.
- **Supervision:** Always supervise children during play.
- **Stability:** Ensure the table is placed on a flat, stable surface. Do not allow children to climb on the table.
- **Pinch Points:** Exercise caution when lifting and lowering the tabletop to prevent pinching fingers. The lid features cutout notches for easier handling.
- **Material Safety:** Crafted from wood, this product meets or exceeds Toy Safety Standard ASTM F963.

PARTS LIST

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact KidKraft customer support.

- Activity Table Frame (Wooden components)
- Reversible Tabletop (One side building brick surface, one side smooth)
- 195 Building Bricks (Assorted colors and sizes)
- Assembly Hardware (Screws, dowels, etc.)

ASSEMBLY INSTRUCTIONS

Assembly typically takes 1 hour or less with adult assistance. A Phillips head screwdriver (not included) may be required.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratching.
2. **Identify Parts:** Refer to the included diagram (if applicable) to identify each wooden component and hardware piece.
3. **Assemble Frame:** Attach the side panels to the end panels using the provided hardware. Ensure all connections are secure but do not overtighten.
4. **Insert Storage Base:** Slide the bottom panel into the designated grooves within the frame to form the storage compartment.
5. **Place Tabletop:** Position the reversible tabletop onto the assembled frame. The cutout notches should face outwards for easy access.
6. **Final Check:** Verify that all parts are correctly assembled and all fasteners are tightened.

Premium wood construction

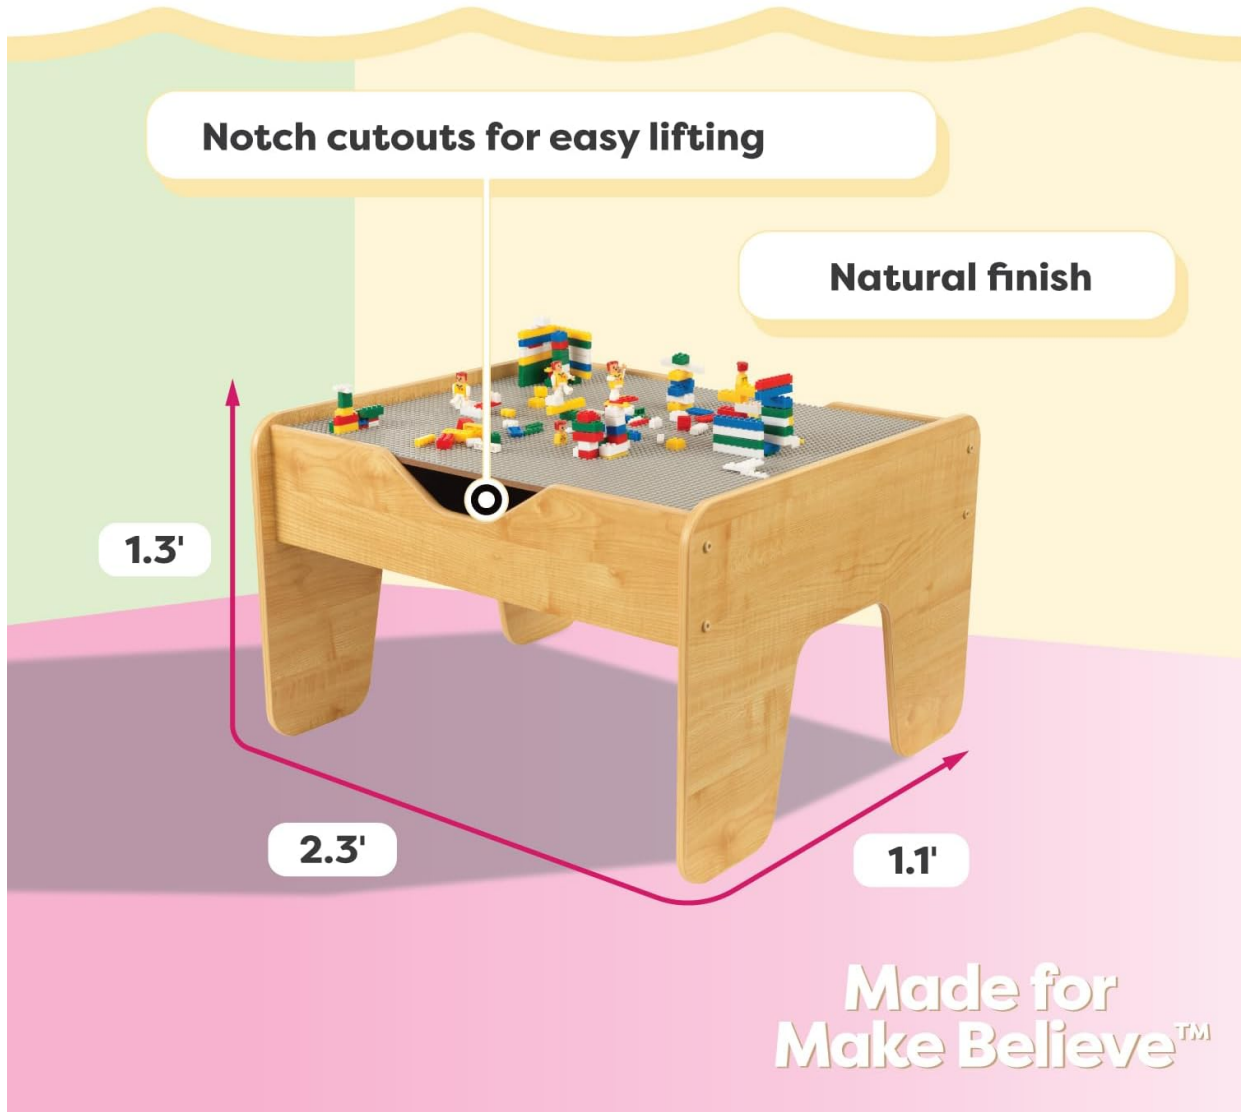


Image: An illustration of the KidKraft Activity Table with key features highlighted, including its approximate dimensions (1.3' height, 2.3' width, 1.1' depth), notch cutouts for easy lifting, and natural finish. Text indicates "Premium wood construction" and "Made for Make Believe™".

OPERATING INSTRUCTIONS

Using the Reversible Tabletop

The tabletop is designed for dual functionality:

- **Building Brick Surface:** One side features a gray baseplate compatible with most major building brick brands, including the 195 bricks provided.
- **Smooth Play Surface:** Flip the tabletop over to reveal a smooth wooden surface suitable for drawing, crafts, puzzles, or other activities.

Smooth, rounded edges



Image: A young child is shown lifting one side of the reversible wooden tabletop, revealing the hidden storage compartment underneath. The text "Reversible top - for bricks or plain" is displayed.

Accessing Hidden Storage

The tabletop lifts off to reveal a spacious storage area underneath, ideal for keeping building bricks, art supplies, or other small toys organized.

- To access, gently lift the tabletop using the cutout notches on the sides.
- To close, carefully place the tabletop back onto the frame, ensuring it is seated evenly.

Hidden storage under lid



Image: A close-up view of the hidden storage compartment beneath the reversible tabletop, which is partially lifted. The compartment is filled with various colorful building bricks. The text "Hidden storage under lid" is displayed.

MAINTENANCE

- **Cleaning:** Wipe the table surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals. Dry immediately.
- **Inspection:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as necessary.
- **Storage:** Store the table in a dry environment away from extreme temperatures and direct sunlight to prevent warping or fading.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Table is wobbly.	Loose fasteners or uneven surface.	Ensure all assembly screws are tightened. Place the table on a level floor.
Tabletop difficult to lift.	Tabletop not aligned correctly or debris in grooves.	Lift using the designated notches. Check for obstructions and ensure proper alignment.
Building bricks do not fit securely.	Using incompatible building brick brands.	The table is designed for standard-sized building bricks. Verify compatibility if using other brands.

SPECIFICATIONS

- **Model Number:** 17506
- **Product Dimensions:** 25 x 23.5 x 16 inches (L x W x H)
- **Item Weight:** 2.2 pounds
- **Recommended Age:** 36 months - 3 years
- **Material:** Wood
- **Includes:** 195 Building Bricks
- **Safety Standard:** Meets or exceeds ASTM F963

WARRANTY AND SUPPORT

For warranty information, replacement parts, or further assistance, please contact KidKraft customer support directly. Refer to the product packaging or the official KidKraft website for the most current contact details.

Manufacturer: KidKraft

Website: www.kidkraft.com