

GE WB48T10063

GE WB48T10063 Oven Rack Instruction Manual

Genuine OEM Replacement Part

1. INTRODUCTION

This manual provides instructions for the proper installation, use, and care of your GE WB48T10063 Oven Rack. This genuine OEM part is designed to provide a stable surface for cookware within your GE oven. Please read these instructions thoroughly before using the product to ensure safe and efficient operation.

2. SAFETY INFORMATION

WARNING:

- Always disconnect the appliance from all utilities (power, gas, etc.) prior to installation or maintenance of the oven rack. Failure to do so may result in electric shock or other personal injury.
- Use caution when handling the oven rack, especially if the oven has been recently used, as it may be hot.
- Ensure the oven rack is properly seated in the oven guides before placing items on it to prevent tipping.
- Always use a dry cloth for cleaning to avoid potential hazards. Do not use abrasive cleaners or sharp objects that could damage the rack's finish.

3. PRODUCT OVERVIEW

The GE WB48T10063 Oven Rack is a high-quality, genuine OEM replacement part manufactured from durable stainless steel. It is designed to fit specific GE oven models, providing a reliable surface for various cooking and baking needs.

Key Features:

- **Genuine OEM Part:** Designed and engineered to exact specifications for optimal performance and fit.
- **Durable Construction:** Made from stainless steel for longevity and resistance to oven temperatures.
- **Stable Support:** Provides a secure platform for cookware inside the oven.
- **Dimensions:** Approximately 16.87 inches (Depth) x 24.12 inches (Width) x 0.62 inches (Height).



Figure 1: Angled view of the GE WB48T10063 Oven Rack.

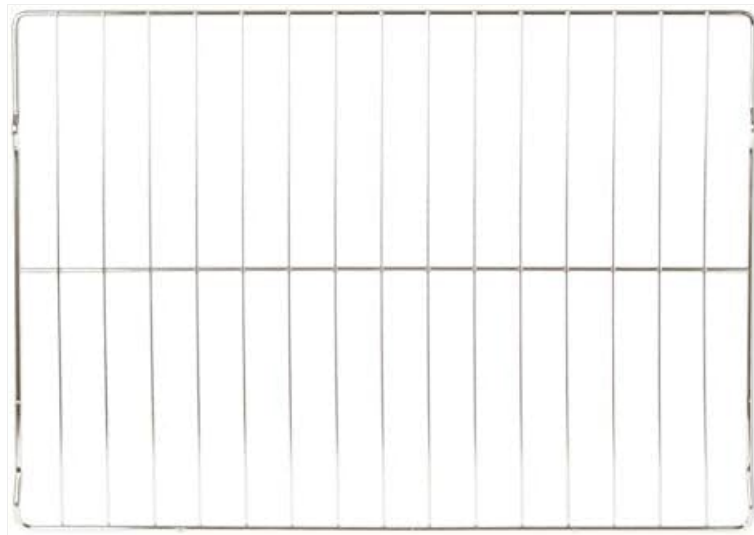


Figure 2: Top-down view of the GE WB48T10063 Oven Rack.



Figure 3: Close-up view of the oven rack's edge, showing its construction.

4. SETUP AND INSTALLATION

The GE WB48T10063 Oven Rack requires no assembly. Installation involves simply placing it into your compatible GE oven.

Installation Steps:

1. **Ensure Safety:** Before handling, ensure the oven is cool and disconnected from all power sources.
2. **Remove Old Rack (if applicable):** Carefully slide out any existing oven rack that is being replaced.
3. **Insert New Rack:** Align the new GE WB48T10063 Oven Rack with the desired rack guides inside your oven. Gently slide the rack into position until it is fully seated and stable.
4. **Verify Placement:** Ensure the rack is level and securely resting on the oven guides before placing any items on it.

5. OPERATING INSTRUCTIONS

The oven rack is designed for cooking, baking, or warming food in an oven. Its use is straightforward once installed.

Usage Guidelines:

- **Rack Placement:** Position the oven rack at the appropriate height for your specific cooking needs. Refer to your oven's user manual for recommended rack positions for different types of food.
- **Loading:** Place cookware evenly on the rack. The rack is designed to support a minimum weight of 10 pounds. Avoid overloading the rack.
- **Heat Distribution:** For optimal heat distribution, avoid covering the entire rack surface with foil unless specifically instructed by your oven's manufacturer.

6. MAINTENANCE

Proper maintenance will extend the life of your oven rack and ensure its continued performance.

Cleaning Instructions:

- **Cool Down:** Always allow the oven and rack to cool completely before cleaning.
- **Wipe with Dry Cloth:** For general cleaning, wipe the rack with a dry cloth to remove crumbs or light residue.
- **Stubborn Stains:** For more stubborn food spills, the rack can be removed from the oven and washed with warm, soapy water. Use a non-abrasive sponge or brush. Rinse thoroughly and dry completely before returning to the oven.

- **Avoid Harsh Chemicals:** Do not use oven cleaners or abrasive cleaning pads on the rack, as these can damage the stainless steel finish.

7. TROUBLESHOOTING

This section addresses common concerns you might encounter with your oven rack.

Common Issues:

- **Rack Does Not Fit:** Verify that your oven model is listed as compatible with the WB48T10063 rack. Double-check the dimensions of your oven's interior and the rack itself (16.87"D x 24.12"W x 0.62"H).
- **Rack Scratches Cookware:** Ensure cookware is placed gently on the rack. Some cookware materials may be more prone to scratching.
- **Rack is Difficult to Slide:** Ensure the oven guides are clean and free of debris. A small amount of cooking oil can be applied to the oven guides (not the rack itself) to improve sliding, but consult your oven's manual first.

8. SPECIFICATIONS

Feature	Detail
Model Number	WB48T10063
Brand	GE
Material	Stainless Steel
Product Dimensions (D x W x H)	16.87" x 24.12" x 0.62"
Item Weight	2.2 Pounds
Weight Capacity	Minimum 10 Pounds
Installation Type	Internal
Assembly Required	No
Recommended Uses	Cooking, baking, or warming food in an oven

9. WARRANTY AND SUPPORT

The manufacturer warranty description for this product is not applicable. As a genuine OEM part, its quality and fit are assured for compatible GE appliances.

For further assistance or inquiries regarding your GE appliance or this oven rack, please refer to your primary GE appliance's user manual or visit the official GE Appliances support website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question