

[Manuals.plus](#) /

› [Speaka](#) /

› SpeaKa Professional SP-4930876 TV Wall Mount Instruction Manual

Speaka SP-4930876

SpeaKa Professional SP-4930876 TV Wall Mount Instruction Manual

Model: SP-4930876

INTRODUCTION

This manual provides detailed instructions for the safe and efficient installation, operation, and maintenance of your SpeaKa Professional SP-4930876 TV Wall Mount. Please read this manual thoroughly before beginning installation and retain it for future reference.

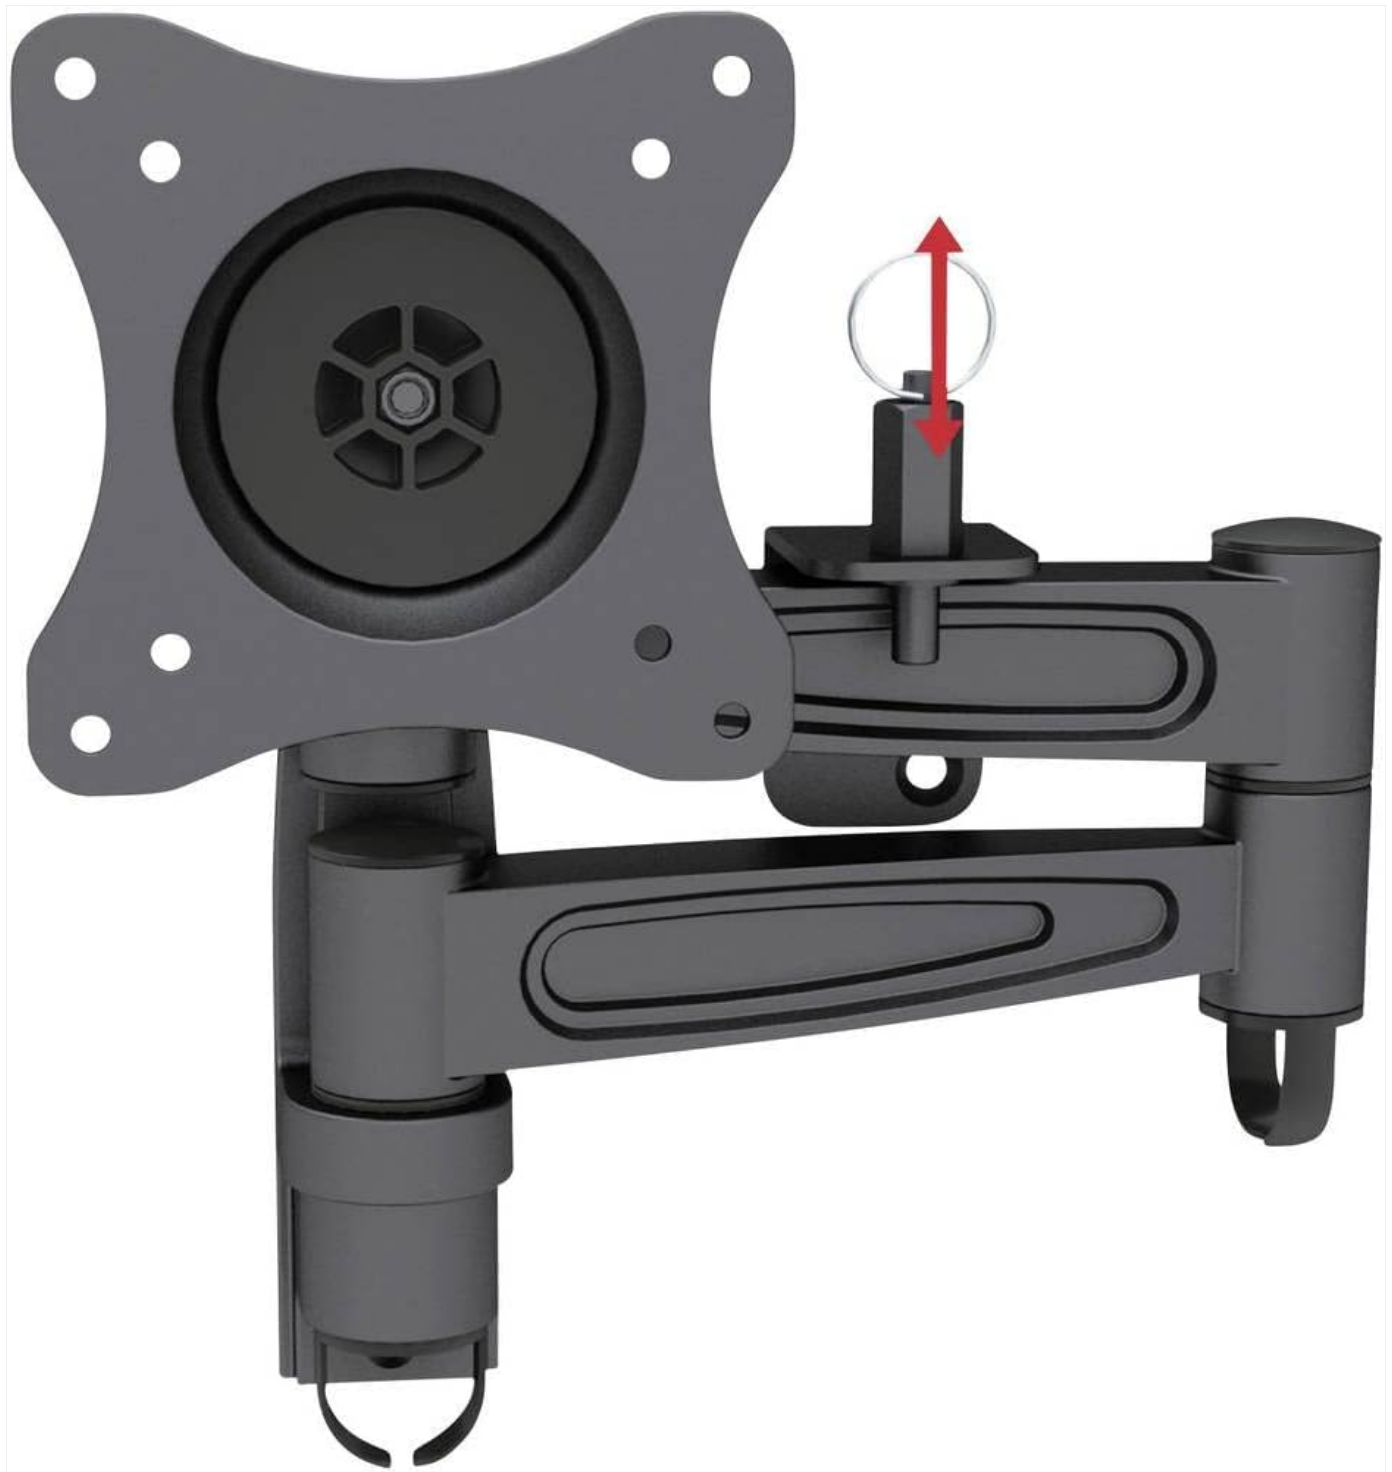


Image: The SpeakKa Professional SP-4930876 TV Wall Mount, shown in its extended position, featuring a black finish and articulating arms for flexible viewing angles.

PRODUCT FEATURES

- **Support Type:** Tilttable, rotatable, and rotating for versatile viewing.
- **VESA Compatibility:** Supports all VESA standards up to 100 x 100 mm.
- **Display Size:** Suitable for displays ranging from 33 cm (13 inches) to 68.5 cm (27 inches).
- **Load Capacity:** Maximum load capacity of 15 kg.
- **Safety Bolt:** Includes a safety bolt for secure and hassle-free mounting, preventing movement once fixed.
- **Telescopic Function:** Adjustable display distance between 8.8 cm and 41 cm.
- **Rotation:** Allows 360° rotation for both portrait and landscape orientations.
- **Cable Management:** Built-in system to conceal power and technical data cables.

SAFETY INFORMATION

Please observe the following safety guidelines to prevent injury or damage:

- Ensure the mounting surface can support the combined weight of the mount and the display.
- Use appropriate tools and hardware for your specific wall type.
- Do not exceed the maximum load capacity of 15 kg.
- Verify all connections are secure before releasing the display.
- Keep children and pets away from the installation area.
- If unsure about any step, consult a qualified professional.

INSTALLATION GUIDE

Follow these steps carefully for proper installation of your TV wall mount.

Step 1: Mount the Wall Plate

1. Choose a suitable location on your wall, ensuring it can support the weight.
2. Use a level to mark the desired position for the wall plate.
3. Drill pilot holes at the marked locations.
4. Insert wall anchors (if required for your wall type).
5. Secure the wall plate to the wall using the provided screws and a wrench.



Image: The SpeaKa Professional TV wall mount in a retracted position, showing the wall plate and articulating arms.

Step 2: Attach the VESA Plate to the TV

1. Identify the VESA mounting holes on the back of your TV. This mount supports 75x75mm and 100x100mm VESA patterns.
2. Align the VESA plate of the mount with the holes on your TV.

3. Secure the VESA plate to the TV using the appropriate screws. Ensure they are tightened firmly but do not overtighten.



Image: Close-up of the VESA plate, illustrating how it attaches to the back of a television, showing the screw points.

Step 3: Connect TV to Wall Mount

1. Carefully lift the TV with the attached VESA plate.
2. Align the VESA plate with the arm of the wall mount.
3. Slide the VESA plate onto the arm until it clicks securely into place.
4. Engage the safety bolt to prevent accidental dislodgement.



Image: Side view of the TV wall mount fully extended, demonstrating its reach and articulation.

Installation Video

For a visual guide on the installation process, please watch the video below:

Your browser does not support the video tag.

Video: An animated guide demonstrating the step-by-step installation of a full-motion TV wall mount, including wall plate attachment, VESA plate assembly, and securing the TV. This video is a general installation guide provided by a seller.

OPERATING INSTRUCTIONS

The SpeaKa Professional TV Wall Mount offers flexible viewing options:

- **Tilt:** Adjust the screen vertically to reduce glare or optimize viewing angle.
- **Swivel/Rotate:** Pivot the screen horizontally to face different areas of the room. The mount allows for 360° rotation, enabling both landscape and portrait orientations.
- **Extend/Retract:** Use the telescopic function to pull the screen away from the wall (up to 41 cm) or push it back (to 8.8 cm) as needed.
- **Locking Mechanism:** Utilize the safety bolt to fix the mount's position, especially useful in moving environments like caravans, to prevent unwanted movement.



Image: A television mounted on a wall inside a caravan, demonstrating a practical application of the wall mount in a compact living space.

MAINTENANCE

To ensure the longevity and proper function of your wall mount:

- Periodically check all screws and bolts to ensure they remain tight.
- Clean the mount with a soft, dry cloth. Avoid abrasive cleaners.
- Inspect the articulating arms for any signs of wear or damage.
- Do not apply excessive force when adjusting the mount.

TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

- **Mount feels unstable:**
 - Ensure all wall mounting screws are securely tightened.
 - Verify the wall material is suitable and anchors are correctly installed.
 - Check that the safety bolt is engaged.
- **Difficulty adjusting the mount:**
 - Ensure no cables are snagged or obstructing movement.
 - Check for any debris in the joints.
 - Do not force movement; if stiff, inspect for obstructions.

- **TV not level:**
 - Re-check the wall plate installation with a level.
 - Some VESA plates allow for minor leveling adjustments; consult the specific design.

SPECIFICATIONS

Feature	Detail
Brand	Speaka
Model Number	SP-4930876
Mounting Type	Wall Mount
Movement Type	Rotate, Tilt, Swivel, Extend/Retract
Compatible Devices	Monitor, Television
Display Size (Area)	13" (33 cm) - 27" (68.5 cm)
Load Capacity (Max)	15 kg
VESA Standards	Up to 100 x 100 mm (including 75x75mm)
Extension Range	8.8 cm to 41 cm
Rotation	360° (portrait/landscape)
Special Features	Safety bolt, Cable management
Product Dimensions	8.8 x 40.8 x 16 cm

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact SpeaKa Professional customer service. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question