

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [KYOCERA](#) /

› [KYOCERA 37028010 Toner Cartridge for KM-1525 and Olympia Omega D 202 Instruction Manual](#)

KYOCERA 37028010

KYOCERA 37028010 Black Toner Cartridge Instruction Manual

Model: 37028010 | Compatible with Kyocera Mita KM-1525 and Olympia Omega D 202

INTRODUCTION

This manual provides essential instructions for the installation, operation, maintenance, and troubleshooting of your KYOCERA 37028010 Black Toner Cartridge. This toner is designed for use with compatible Kyocera Mita KM-1525 and Olympia Omega D 202 printer models, ensuring high-quality black and white printing.

SETUP AND INSTALLATION

Follow these steps to properly install the toner cartridge into your compatible printer.

- Unpack the Cartridge:** Carefully remove the new toner cartridge from its packaging. Avoid touching the drum surface or electrical contacts.
- Shake Gently:** Gently shake the toner cartridge horizontally 5-6 times to distribute the toner evenly inside.
- Remove Protective Seals:** Remove any protective tape, seals, or covers from the cartridge as indicated by the packaging or cartridge itself. Refer to your printer's specific manual for exact instructions on which seals to remove.
- Open Printer Access Door:** Open the front cover or toner access door of your Kyocera Mita KM-1525 or Olympia Omega D 202 printer.
- Remove Old Cartridge:** Grasp the handle of the used toner cartridge and pull it out of the printer. Place it in a protective bag for recycling.
- Insert New Cartridge:** Align the new KYOCERA 37028010 toner cartridge with the guides inside the printer. Push it firmly until it clicks into place.
- Close Printer Door:** Close the printer's front cover or toner access door. The printer will typically perform a short initialization cycle.



Image: The KYOCERA 37028010 Black Toner Cartridge. This image shows the general appearance of the toner cartridge, which is essential for identification during installation.

OPERATING INSTRUCTIONS

Once installed, the KYOCERA 37028010 toner cartridge operates automatically with your compatible printer. Ensure your printer drivers are up-to-date for optimal performance.

- **Printing:** Send print jobs from your computer as usual. The printer will utilize the installed toner to produce documents.
- **Print Quality:** This cartridge is designed to deliver crisp, clear black text and graphics. If print quality degrades, refer to the troubleshooting section.
- **Toner Level Monitoring:** Monitor toner levels through your printer's software utility or control panel. Replace the cartridge when the printer indicates low toner or print quality significantly diminishes.

MAINTENANCE

Proper handling and storage can extend the life of your toner cartridge and ensure consistent print quality.

- **Storage:** Store unused toner cartridges in their original, sealed packaging in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Always handle the cartridge by its designated handles or edges. Avoid touching the drum or electrical contacts.
- **Disposal:** Dispose of used toner cartridges responsibly. Many manufacturers and retailers offer recycling programs. Do not incinerate toner cartridges.

TROUBLESHOOTING

If you encounter issues with your printer after installing the toner, consider the following common problems and solutions:

- **"Low Toner" or "Replace Toner" Message:**
 - Ensure the cartridge is fully seated in its slot.
 - If the message persists after installing a new cartridge, try removing and reinserting it.

- If the cartridge is genuinely low, replace it with a new one.
- **Poor Print Quality (Faded, Streaky, or Blank Pages):**
 - Gently shake the toner cartridge horizontally to redistribute toner.
 - Check if any protective seals or tapes were left on the cartridge during installation.
 - Perform a printer cleaning cycle via your printer's control panel or software.
 - If the issue persists, the cartridge may be nearing its end of life or could be defective.
- **Printer Not Recognizing Cartridge:**
 - Remove the cartridge and check for any obstructions or damage to the electrical contacts on both the cartridge and inside the printer.
 - Wipe the electrical contacts on the cartridge gently with a lint-free cloth.
 - Ensure the cartridge is compatible with your specific printer model (Kyocera Mita KM-1525 or Olympia Omega D 202).

SPECIFICATIONS

Brand	KYOCERA
OEM Reference	37028010
Manufacturer Reference	104774TFC-OK-37028010
Color	Black
Compatible Printer Models	Kyocera Mita KM-1525, Olympia Omega D 202
Product Type	Toner Cartridge

WARRANTY AND SUPPORT

For specific warranty information regarding your KYOCERA 37028010 toner cartridge, please refer to the documentation provided with your purchase or contact the retailer or KYOCERA directly. Warranty terms can vary based on region and seller.

If you require further technical assistance or have questions not covered in this manual, please contact your product supplier or the printer manufacturer's customer support.

