

[Manuals.plus](#) /

› [SCHLAGE](#) /

› Schlage F40 BWE 619 Bowery Privacy Door Knob Instruction Manual

SCHLAGE F40BWE619

Schlage F40 BWE 619 Bowery Privacy Door Knob Instruction Manual

Brand: SCHLAGE | Model: F40BWE619

INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Schlage F40 BWE 619 Bowery Privacy Door Knob. Designed for interior doors requiring a privacy function, this door knob offers durability and ease of use. Please read all instructions carefully before beginning installation or operation.

SETUP AND INSTALLATION

The Schlage F40 BWE 619 Bowery Privacy Door Knob is designed for easy installation, typically requiring only a Phillips head screwdriver. It is suitable for both right and left-handed doors.

Door Preparation

Ensure your door is prepared with the correct dimensions for the lockset. This knob fits standard doors with a 2-3/8" (60mm) or 2-3/4" (70mm) backset, and a door thickness of 1-3/8" (35mm) to 1-3/4" (44mm). The cross bore hole diameter should be 2-1/8" (54mm) and the latch bore diameter 1" (25mm).



Hassle-free fit for standard doors.

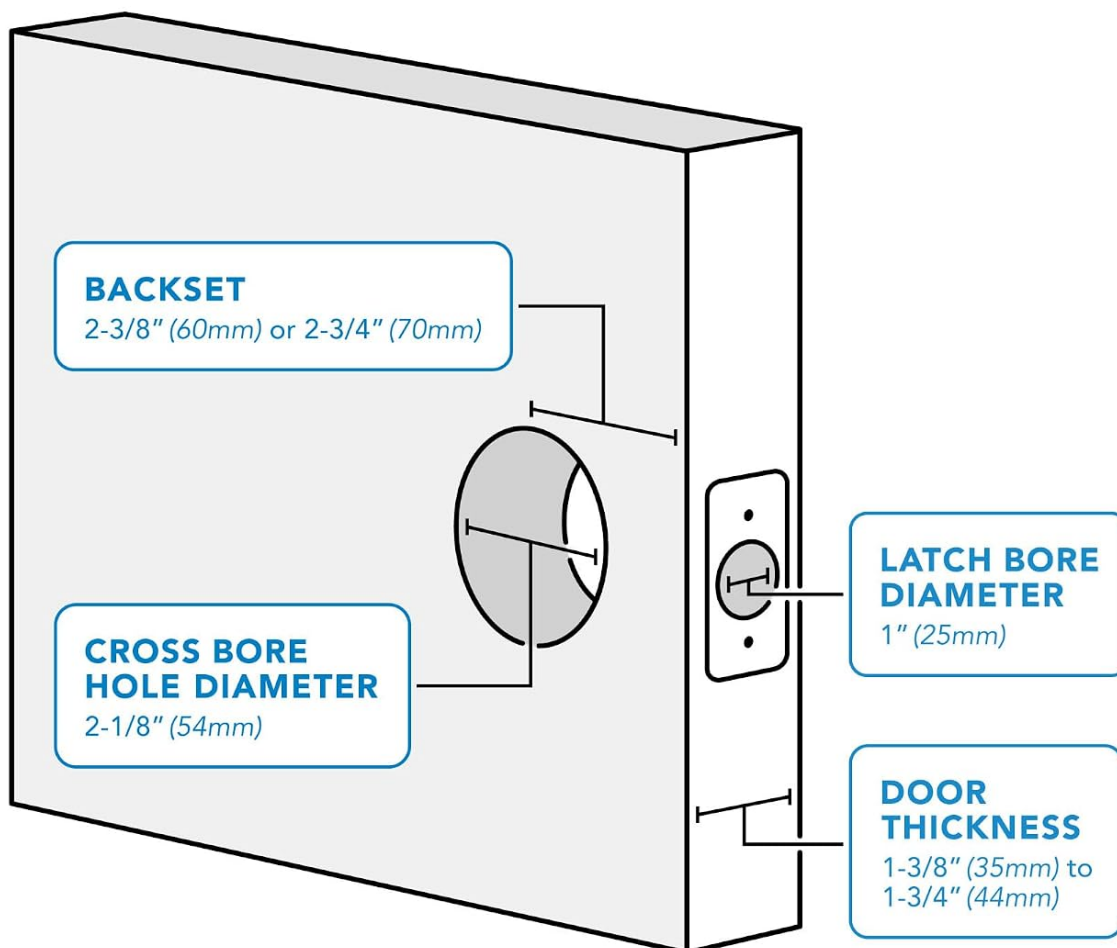


Figure 1: Door preparation dimensions.

Installing the Latch

The universal latch slides into place without tools. The package includes both a radius and a drive-in faceplate for flexibility. Select the appropriate faceplate for your door's existing preparation.



Figure 2: Latch mechanism.

Installing the Knobs

The self-aligning screw holes simplify the process of attaching the interior and exterior knobs. Secure the knobs using the provided screws. Ensure all components are aligned correctly for proper function.



Figure 3: Interior knob with installation screws.

OPERATING INSTRUCTIONS

This privacy door knob is ideal for bedrooms and bathrooms where a locking function is desired.

Locking the Door

To lock the door from the inside, press the push button located on the center of the interior knob.



Bowery knob

SATIN NICKEL FINISH



BED & BATH
PRIVACY



LIMITED
LIFETIME
GUARANTEE



EASY
INSTALL



Trust your home to Schlage.™

Over 100 years of durability and strength.
Precision craftsmanship, quality and style.
A quick and easy upgrade for your home.

Figure 4: Exterior knob with emergency unlock access.

Unlocking the Door

- **From the Inside:** Rotate the interior door handle. The push button will automatically unlock.
- **From the Outside (Emergency):** Insert the included pin key into the small hole on the center of the exterior knob and push firmly. This will disengage the lock.

MAINTENANCE

To maintain the finish and functionality of your Schlage door knob, regularly wipe it with a soft, damp cloth. Avoid using abrasive cleaners or solvents, as these can damage the finish. Periodically check and tighten any loose screws to ensure secure operation.

TROUBLESHOOTING

If you experience issues with your door knob, ensure all screws are tightened and components are correctly aligned. If the lock mechanism is stiff, a small amount of graphite lubricant can be applied to the latch bolt. For persistent issues, refer to the warranty information for support options.

SPECIFICATIONS

Attribute	Value
Material	Metal
Brand	SCHLAGE
Color	Satin Nickel
Style	Classic
Product Dimensions	2.75"L x 2.75"W
Exterior Finish	Nickel
Shape	Round
Finish Types	Satin Nickel
Item Weight	0.92 Pounds
Unit Count	1.0 Count
Number of Items	1
Item Depth	around 1.5 to 2 inches
Material Type	Metal
Handle Material	Metal
Handle Type	Knob
Specific Uses For Product	Bathroom, Bedroom
Additional Features	Durable, Easy to Install, Keyless
Lock Type	Push Button Lock
Hand Orientation	Ambidextrous
Handle Attachment Mechanism	Push Button Lock
Included Components	Installation Hardware, Installation Instructions
Model Number	F40BWE619
UPC	043156450749

WARRANTY INFORMATION

Schlage locks are backed by a limited lifetime mechanical and finish warranty. An additional 3-year electronics warranty applies to electronic components, if any. For complete details regarding your warranty coverage, please refer to the official Schlage warranty documentation or visit the manufacturer's website.

SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Schlage customer service. Contact information can typically be found on the product packaging or the official Schlage website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question