

[Manuals.plus](#) /

› [BISSELL](#) /

› BISSELL 1456E Powerwash Premier Upright Carpet Cleaner User Manual

## BISSELL 1456E

# BISSELL 1456E Powerwash Premier Upright Carpet Cleaner User Manual

Model: 1456E

## 1. INTRODUCTION

---

Thank you for purchasing the BISSELL 1456E Powerwash Premier Upright Carpet Cleaner. This manual provides essential instructions for the safe assembly, operation, maintenance, and troubleshooting of your new carpet cleaner. Please read all instructions carefully before using the appliance to ensure optimal performance and safety.



*Image 1.1: The BISSELL 1456E Powerwash Premier Upright Carpet Cleaner. This image displays the complete unit, highlighting its upright design and integrated hose for versatile cleaning.*

## **2. SAFETY INSTRUCTIONS**

---

Always follow basic safety precautions when using an electrical appliance to reduce the risk of fire, electric shock, or injury. Read all instructions before using your carpet cleaner.

- Always connect to a properly grounded outlet.
- Unplug from outlet when not in use and before cleaning or servicing.
- Do not immerse in water or liquid.
- Do not use with damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use only BISSELL cleaning formulas intended for this machine.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids.

### 3. PACKAGE CONTENTS

---

Verify that all components are present in the packaging:

- BISSELL 1456E Powerwash Premier Upright Carpet Cleaner Unit
- Tough Stain Tool
- Spraying Crevice Tool
- TurboBrush
- User Guide

### 4. ASSEMBLY AND SETUP

---

Follow these steps to assemble your carpet cleaner before first use.

#### 4.1 Attaching the Handle

1. Insert the upper handle assembly into the base unit until it clicks securely into place.
2. Ensure the handle is firmly attached before proceeding.

#### 4.2 Filling the Clean Water Tank

1. Remove the clean water tank from the unit. The tank is typically located at the front of the machine.
2. Unscrew the cap at the bottom of the tank.
3. Fill the tank with hot tap water (not boiling) to the 'Water Fill Line'.
4. Add the recommended amount of BISSELL cleaning formula to the 'Formula Fill Line'.
5. Securely replace the cap and reinsert the tank into the unit until it clicks.



*Image 4.1: A hand demonstrating how to remove and carry the clean water tank. This tank holds the water and cleaning solution for the carpet cleaner.*

### 5. OPERATING INSTRUCTIONS

---

This section details how to effectively use your BISSELL Powerwash Premier for various cleaning tasks.

## 5.1 Pre-Cleaning Preparation

- Vacuum the area thoroughly to remove loose dirt and debris.
- Move furniture out of the area if possible.
- Test a small, inconspicuous area of carpet for colorfastness before full use.

## 5.2 Carpet Cleaning (Upright Mode)

1. Plug the machine into a grounded outlet.
2. Press the power button to turn on the unit. The Heatwave Technology will begin to maintain water temperature.
3. For a wet pass, hold down the spray trigger and make a slow forward and backward pass over the carpet.
4. For a dry pass, release the spray trigger and make a slow forward and backward pass over the same area to suction up dirty water.
5. Repeat passes until the suctioned water appears clean.
6. The 12 rows of Dual Rotating PowerBrushes will agitate and clean the carpet fibers.



*Image 5.1: The BISSELL 1456E in operation, demonstrating its ability to clean carpets effectively. The image shows a clear line between the cleaned and uncleaned carpet area.*



Image 5.2: A close-up view of the Dual Rotating PowerBrushes, which feature 12 rows for deep cleaning and agitation of carpet fibers.

### 5.3 Spot Cleaning with Cleanshot

For heavy-duty spot cleaning, use the Cleanshot feature.

1. Position the machine directly over the stain.
2. Press the 'Cleanshot' button to deliver a concentrated stream of cleaning solution directly onto the spot.
3. Allow the solution to penetrate for a few minutes, then proceed with normal wet and dry passes over the area.



Image 5.3: The Cleanshot feature spraying a concentrated stream of cleaning solution onto a targeted area for effective spot

## 5.4 Above-Floor Cleaning (Hose and Tools)

Attach the hose and specialized tools for cleaning upholstery, stairs, and hard-to-reach areas.

1. Open the accessory hose door on the front of the machine.
2. Insert the hose into the opening until it clicks.
3. Attach the desired tool (Tough Stain Tool, Spraying Crevice Tool, or TurboBrush) to the end of the hose.
4. Press the spray trigger on the tool to apply solution and scrub the surface.
5. Release the trigger and use the tool to suction up the dirty water.



Image 5.4: A hand operating the hose with an attached cleaning tool, suitable for cleaning upholstery or other above-floor surfaces.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and optimal performance of your carpet cleaner.

### 6.1 Emptying and Cleaning the Dirty Water Tank

1. Turn off and unplug the machine.
2. Remove the dirty water tank from the unit.
3. Unlatch the tank lid and pour out the dirty water.
4. Rinse the tank thoroughly with clean water.
5. The Hair & Debris Basket inside the dirty water tank should be emptied and rinsed.
6. Replace the basket and lid, then reinsert the tank into the unit.



Image 6.1: A view of the Hair & Debris Basket located within the dirty water tank, designed to capture hair and other small debris.

## 6.2 Cleaning Brushes and Nozzle

1. Turn off and unplug the machine.
2. The DuraStrength Nozzle is removable for easy maintenance. Detach it from the foot of the machine.
3. Rinse the nozzle under running water to remove any debris or clogs.
4. Inspect the PowerBrushes for any tangled hair or fibers. Use scissors to carefully cut and remove any obstructions.
5. Reattach the nozzle securely.

## 6.3 Storage

Store the cleaner in a dry, protected area. Ensure both clean and dirty water tanks are empty and clean before storage.

## 7. TROUBLESHOOTING

If you encounter any issues with your BISSELL Powerwash Premier, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Machine not turning on	Not plugged in; Blown fuse/tripped breaker	Ensure plug is secure; Check electrical panel
No spray	Clean water tank empty; Tank not seated properly; Pump failure	Refill tank; Re-seat tank; Contact customer support
Reduced suction	Dirty water tank full; Nozzle clogged; Tank not seated properly	Empty dirty water tank; Clean nozzle; Re-seat tank
Brushes not rotating	Belt broken; Debris tangled in brushes	Inspect/replace belt; Clean brushes of debris

## 8. SPECIFICATIONS

Feature	Detail
Model Number	1456E
Power	800 Watts
Operating Voltage	240 Volts
Clean Water Capacity	5.6 Liters
Dirty Water Capacity	3 Liters (approximate, based on feature bullets)
Dimensions (H x W x D)	~113 x 32 x 53 cm
Item Weight	11 kg (approximate)
Cable Length	9 meters
Hose Length	2.7 meters
Technology	Heatwave Technology, Dual Rotating PowerBrushes
Included Tools	Tough Stain Tool, Spraying Crevice Tool, TurboBrush

## 9. WARRANTY AND CUSTOMER SUPPORT

Your BISSELL 1456E Powerwash Premier Upright Carpet Cleaner comes with a **2-year warranty** on the product, covering manufacturing defects from the date of purchase.

For warranty claims, technical assistance, or to purchase replacement parts, please contact BISSELL customer support through their official website or the contact information provided in your purchase documentation.