Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- > Blow /
- > Blow Kidstab 7.2 Tablet User Manual

Blow Kidstab 7.2 (Model 79-005#)

Blow Kidstab 7.2 Tablet User Manual

Model: Kidstab 7.2 (79-005#)

NTRODUCTION

Welcome to the user manual for your new Blow Kidstab 7.2 Tablet. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read this manual thoroughly to ensure proper use and to maximize your tablet's functionality.

The Blow Kidstab 7.2 is designed for ease of use, featuring a 7-inch display and running on Android 9 Pie. It comes with a protective case, making it suitable for children's use.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Blow Kidstab 7.2 Tablet.



Figure 1: Front View of Tablet. This image displays the front of the Blow Kidstab 7.2 Tablet, encased in its blue protective cover. The screen shows the "BLOW Multimedia tablet KIDSTAB 7" branding.



Figure 2: Side View of Tablet. This image illustrates the side of the Blow Kidstab 7.2 Tablet, highlighting the various ports and buttons, including the USB port and headphone jack.



Figure 3: Back View of Tablet. This image shows the rear of the Blow Kidstab 7.2 Tablet, featuring the back camera lens and KIDSTAB branding on the protective case.

SETUP

1. Initial Charging

Before first use, fully charge your tablet. Connect the provided USB cable to the tablet's USB port and the other end to a compatible power adapter (not always included) or a computer's USB port. The charging indicator will typically light up.

- Charging Time: Allow approximately 3-4 hours for a full charge.
- Battery Life: The tablet features a 7000 mAh battery.

2. Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side, refer to Figure 2) until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" to shut down the device.
- To Restart: From the power-off menu, select "Restart" to reboot the device.

3. Initial Configuration

Upon first power-on, you will be guided through the initial setup process:

- 1. Language Selection: Choose your preferred language. The tablet supports English.
- 2. Wi-Fi Connection: Select your Wi-Fi network from the list and enter the password. A stable internet

connection is required for updates and app downloads.

- 3. **Google Account:** Sign in with your Google account or create a new one. This is necessary for accessing the Google Play Store and other Google services.
- 4. Date and Time: Set the correct date and time, or allow the network to set it automatically.
- 5. Security: Set up a screen lock (PIN, pattern, or password) for device security.

OPERATING INSTRUCTIONS

1. Navigation

The tablet uses a touchscreen interface for navigation:

- **Tap:** To open apps, select items, or activate buttons.
- Tap and Hold: To access contextual menus or move icons.
- Swipe: To scroll through lists, switch between home screens, or navigate within apps.
- Pinch: To zoom in or out on images and web pages.

2. Basic Functions

- Home Screen: The central hub for your apps and widgets.
- App Drawer: Swipe up from the bottom of the screen to access all installed applications.
- Notifications Panel: Swipe down from the top of the screen to view notifications and quick settings.
- **Settings:** Access device settings via the gear icon in the App Drawer or Notifications Panel to customize Wi-Fi, display, sound, and more.

3. Connectivity

- Wi-Fi: Connect to wireless networks for internet access. Go to Settings > Network & Internet > Wi-Fi
- **USB Connection:** Connect the tablet to a computer using a USB cable to transfer files. Once connected, swipe down the notification panel on the tablet and select the USB connection mode (e.g., "File transfer").

4. Parental Controls

As a Kidstab device, parental controls are an important feature. You can set up parental controls through Google Family Link or similar applications available on the Google Play Store. These tools allow you to manage screen time, restrict app access, and monitor activity.

- **Google Family Link:** Download from the Google Play Store on both parent and child devices to manage settings remotely.
- App Restrictions: Within tablet settings, you can restrict app installations or usage for specific users.

MAINTENANCE

1. Cleaning

To clean your tablet:

- Use a soft, lint-free cloth to wipe the screen and body.
- For stubborn marks, slightly dampen the cloth with water or a screen cleaner.
- Avoid harsh chemicals, abrasive materials, and excessive moisture.

2. Software Updates

Regularly check for and install software updates to ensure optimal performance and security. Go to Settings > System > System update

3. Battery Care

- Avoid completely draining the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only compatible chargers.

TROUBLESHOOTING

Problem	Solution
Tablet does not power on.	Ensure the tablet is fully charged. Connect it to a charger for at least 30 minutes, then try powering on again.
Wi-Fi connection issues.	Restart your Wi-Fi router. Go to Settings > Network & Internet > Wi-Fi, forget the network, and reconnect. Ensure the password is correct.
Apps are crashing or freezing.	Close and reopen the app. Clear the app's cache (Settings > Apps & notifications > [App Name] > Storage & cache > Clear cache). If the problem persists, uninstall and reinstall the app.
Slow performance.	Close unused apps. Clear cache and temporary files. Consider performing a factory reset if performance issues continue after other troubleshooting steps.

Factory Reset

A factory reset will erase all data on your tablet and restore it to its original factory settings. Back up any important data before proceeding.

- 1. Go to Settings > System > Reset options.
- 2. Select Erase all data (factory reset).
- 3. Confirm your decision. The tablet will restart and begin the reset process.

SPECIFICATIONS

Brand	Blow
Model Name	Kidstab 7.2 (79-005#)
Operating System	Android 9 Pie
Screen Size	7 inches
Processor Cores	4
Wireless Technology	802.11n
Hardware Interface	USB
Dimensions (L x W x H)	24 x 69 x 2.5 cm
Weight	640 grams

Memory Storage Capacity	32 GB
Cellular Technology	3G

SUPPORT

For further assistance, technical support, or warranty information, please refer to the official Blow website or contact their customer service department. Keep your purchase receipt and model number (Kidstab 7.2, Model 79-005#) handy when seeking support.

© 2023 Blow. All rights reserved.

Related Documents - Kidstab 7.2 (Model 79-005#)



BLOW PlatinumTAB10 4G V2 User Manual and Specifications

Comprehensive user manual for the BLOW PlatinumTAB10 4G V2 tablet, covering setup, features, settings, connectivity, app management, multimedia, and technical specifications.



BLOW Carplay 5.0 Video Recorder User Manual

Comprehensive user manual for the BLOW Carplay 5.0 Video Recorder (Model 78-426#), detailing setup, features like Carplay, Android Auto, Bluetooth, recording, and settings.



BLOW CityLIGHT Active Loudspeaker Bluetooth with Microphone User Manual

User manual for the BLOW CityLIGHT active loudspeaker, detailing its features, controls, Bluetooth connectivity, TWS function, and specifications. Includes safety information and connection guides.



BLOW Remote Control User Manual for LG TVs

Comprehensive user manual for the BLOW remote control designed for LG televisions, covering operation, button functions, and pairing instructions.



BLOW iTag Bluetooth Locator User Manual and Features

Comprehensive user manual for the BLOW iTag Bluetooth locator. Learn how to set up, use features like anti-lost, location tracking, photography, and battery replacement. Includes warranty and compliance information.



Návod k obsluze: Kamera BLOW WiFi H-492 2MP se solárním panelem (T864B)

Kompletní návod k obsluze pro kameru BLOW WiFi H-492 2MP se solárním panelem (model T864B). Zjistěte, jak nainstalovat, nastavit a používat vaši novou bezpečnostní kameru.