

## AOC E2261FWH

# AOC E2261FWH 21.5-inch Monitor User Manual

Model: E2261FWH

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your AOC E2261FWH 21.5-inch monitor. Please read this manual thoroughly before using your monitor to ensure proper installation and optimal performance.

The AOC E2261FWH monitor features a 21.5-inch display with a narrow screen border, a 50,000,000:1 Dynamic Contrast Ratio, and Clear Vision technology for enhanced image quality. It is designed for energy efficiency with LED backlighting.

## 1. SETUP

### 1.1 Unpacking

Carefully remove all components from the packaging. Ensure all items listed in the packing list are present. Retain the packaging materials for future transport or storage.

### 1.2 Assembling the Stand

1. Place the monitor face down on a soft, clean surface to prevent scratches.
2. Attach the stand base to the stand neck, securing it with the provided screw.
3. Align the assembled stand with the mounting slot on the back of the monitor and gently push until it clicks into place.

### 1.3 Connecting Cables

Before connecting any cables, ensure both the monitor and your computer are powered off.

- **Power Cable:** Connect one end of the power cable to the monitor's power input and the other end to a grounded electrical outlet.
- **HDMI Cable:** For digital video and audio, connect an HDMI cable from your computer's HDMI output to the monitor's HDMI input.
- **VGA Cable:** For analog video, connect a VGA cable from your computer's VGA output to the monitor's VGA input.



Figure 1: Front view of the AOC E2261FWH monitor, showing the display and stand.



Figure 2: Rear view of the AOC E2261FWH monitor, highlighting the power, HDMI, and VGA input ports.

#### 1.4 Initial Power-On

After connecting all necessary cables, power on your computer, then press the power button on the monitor. The monitor should automatically detect the input signal. If not, you may need to manually select

the input source using the OSD menu.

## 2. OPERATING THE MONITOR

### 2.1 Power On/Off

Press the power button located on the monitor's bezel to turn the monitor on or off. The power indicator light will illuminate when the monitor is on.

### 2.2 On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings. Use the control buttons (usually located on the bottom right or rear of the monitor) to navigate the menu.

- **Menu Button:** Opens the OSD menu.
- **Arrow Buttons:** Navigate through menu options.
- **Enter/Select Button:** Confirms a selection or enters a sub-menu.
- **Exit Button:** Exits the current menu or OSD.

### 2.3 Adjusting Settings

Common adjustable settings include:

- **Brightness/Contrast:** Adjust the overall luminance and difference between light and dark areas.
- **Color Settings:** Modify color temperature, gamma, and individual RGB levels.
- **Input Select:** Manually switch between HDMI and VGA input sources.
- **Clear Vision:** Enable or disable Clear Vision technology to enhance image clarity for standard definition content.
- **Picture Mode:** Select from preset display modes (e.g., Standard, Text, Internet, Game, Movie, Sports).

## 3. MAINTENANCE

### 3.1 Cleaning the Monitor

- Always power off the monitor and unplug the power cord before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild, non-abrasive screen cleaner.
- Do not spray cleaner directly onto the screen. Apply it to the cloth first.
- Avoid using benzene, thinner, ammonia-based cleaners, or abrasive materials, as these can damage the screen or casing.

### 3.2 General Care

- Avoid placing the monitor in direct sunlight or near heat sources.
- Ensure adequate ventilation around the monitor.
- Do not place heavy objects on the monitor or its cables.
- Protect the monitor from excessive dust and moisture.

## 4. TROUBLESHOOTING

If you encounter issues with your monitor, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power	Power cable not connected; Power outlet faulty; Monitor off.	Check power cable connections; Try a different outlet; Press the monitor's power button.
No Signal	Video cable not connected; Incorrect input source selected; Computer not powered on.	Ensure video cable (HDMI/VGA) is securely connected; Select the correct input source via OSD; Power on your computer.
Image is Blurry/Distorted	Incorrect resolution; Loose video cable; Monitor settings.	Set your computer's display resolution to 1920 x 1080; Reconnect the video cable; Adjust OSD settings like phase, clock, brightness, and contrast.
Colors are Incorrect	Color settings in OSD; Faulty video cable.	Adjust color settings in the OSD menu; Try a different video cable.

If the problem persists after trying these solutions, please contact AOC customer support.

## 5. SPECIFICATIONS

Feature	Detail
Brand	AOC
Model	E2261FWH
Screen Size	21.5 Inches
Screen Resolution	1920 x 1080
Aspect Ratio	16:9
Response Time	5 Milliseconds
Dynamic Contrast Ratio	50,000,000:1 (typical)
Input Ports	1 x HDMI, 1 x VGA
Frequency Range (H)	30-83 KHz
Frequency Range (V)	55-76 Hz
Power Consumption	22 Watts (typical)
Item Weight	3.51 kg (approx.)

## 6. WARRANTY AND SUPPORT

### 6.1 Warranty Information

AOC monitors are covered by a limited warranty. For specific warranty terms and conditions applicable to your region, please refer to the warranty card included with your product or visit the official AOC website. Keep your purchase receipt as proof of purchase for warranty claims.

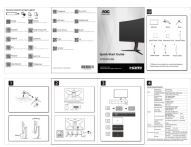
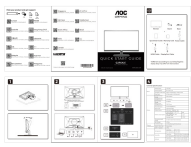
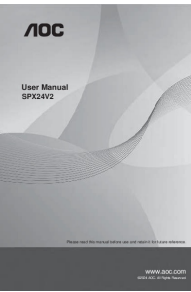

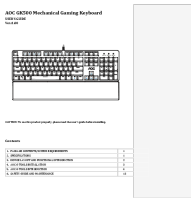
## 6.2 Customer Support

For technical assistance, product inquiries, or service requests, please contact AOC customer support. You can typically find contact information (phone numbers, email, or support portals) on the official AOC website or in the documentation provided with your monitor.

**AOC Official Website:** [www.aoc.com](http://www.aoc.com)

© 2025 AOC. All rights reserved.  
Information in this manual is subject to change without notice.

## Related Documents - E2261FWH

	<p><a href="#">AOC C27G2Z3/BK 27-Inch Monitor Quick Start Guide</a></p> <p>This document provides a quick start guide for the AOC C27G2Z3/BK 27-inch monitor, detailing setup, connectivity, on-screen display controls, and technical specifications.</p>
	<p><a href="#">AOC C27G42E Gaming Monitor: Quick Start Guide &amp; Specifications</a></p> <p>Get started with your AOC C27G42E 27-inch gaming monitor. This guide covers setup, connections, OSD controls, and detailed technical specifications for optimal performance.</p>
	<p><a href="#">AOC SPX24V2 User Manual - Setup, Operation, and Specifications</a></p> <p>Comprehensive user manual for the AOC SPX24V2 display, covering safety, setup, operation, media playback, file management, troubleshooting, and technical specifications. Visit <a href="http://www.aoc.com">www.aoc.com</a> for more information.</p>
	<p><a href="#">AOC 22B2H LED Monitor User Manual and Specifications</a></p> <p>Detailed user manual and technical specifications for the AOC 22B2H 21.5-inch Full HD LED monitor. Learn about setup, OSD menu adjustments, connectivity options (VGA, HDMI), software features (i-Menu, e-Saver, Screen+), and compliance.</p>
	<p><a href="#">AOC GK500 Mechanical Gaming Keyboard User's Guide</a></p> <p>Comprehensive user guide for the AOC GK500 Mechanical Gaming Keyboard. Covers package contents, specifications, device layout, installation and usage of AOC G-Tools software for profile management, button assignment, macro programming, RGB lighting effects (Light FX), and sensitivity settings, along with safety and maintenance guidelines.</p>



### [Instrukcja obsługi AOC Q27G4SRU - Monitor Gamingowy](#)

Szczegółowa instrukcja obsługi dla monitora gamingowego AOC Q27G4SRU, zawierająca informacje o instalacji, konfiguracji, ustawieniach, rozwiązywaniu problemów i specyfikacjach technicznych.