

[Manuals.plus](#) /

› [Midea](#) /

› Midea WHD-113FB1 Double Door Mini Fridge User Manual

Midea WHD-113FB1

Midea WHD-113FB1 Double Door Mini Fridge User Manual

Model: WHD-113FB1 | Brand: Midea

PRODUCT OVERVIEW

Designed to operate with Energy Star efficiency, the Midea 3.1 Cu. Ft. Double Door Compact Refrigerator offers separate fridge and freezer sections with plenty of space for produce, snacks, and frozen treats. Thanks to its adjustable legs and reversible door that opens to the left or right, you can easily fit this compact fridge in any kitchen layout. Organization is made even easier with durable glass shelves, a roomy crisper drawer, and storage racks for soda cans. The mechanical temperature control lets you easily set chilling preferences, while the manual defrost setting enables hassle-free cleaning.

- Adjustable Temperature Ranges: Refrigerator Compartment 32° to 50° F / Freezer Compartment -11.2° to 5°F
- Features Adjustable Legs and a Reversible Door that can Open from Left or Right
- Interior Light. Fresh section: 2.2 cubic feet, freezer section: 0.9 cubic feet
- Separate Fruit and Vegetable Drawer.
- Full 1-Year Warranty



Figure 1: Front view of the Midea WHD-113FB1 Double Door Mini Fridge in black.

SETUP AND INSTALLATION

Initial Placement and Leveling

Ensure the refrigerator is placed on a stable, level surface. If the refrigerator appears to be shaking or tilting, or if the door does not close automatically, it may not be properly leveled. The back feet (casters) are fixed and cannot be adjusted. Only the two bottom feet in the front of the refrigerator can be adjusted.

Your browser does not support the video tag.

Video 1: Midea Compact Fridge with Freezer, For Office, Apartment. This video demonstrates the versatile placement options for the refrigerator in various settings like offices, apartments, kitchens, and living rooms.

To adjust the front feet: If the refrigerator is shaking or tilting left/right, hold the refrigerator with one hand and rotate the uneven bottom leg directly by hand until it touches the ground and the unit is stable. If the refrigerator is tilted forward, adjust the front bottom angle higher. If it is tilted backward, adjust the front bottom angle down.

Your browser does not support the video tag.

Video 2: Troubleshooting Guide for Refrigerator Stability. This video provides detailed instructions on how to adjust the leveling feet to ensure the refrigerator is stable and the door closes properly.

Reversible Door Installation

The refrigerator features a reversible door design, allowing it to open from either the left or right side to accommodate various kitchen layouts. Refer to the detailed user manual PDF for specific instructions on reversing the door.



Figure 2: The refrigerator with both doors open, illustrating the reversible door design for flexible installation.

OPERATING INSTRUCTIONS

Temperature Control

The Midea WHD-113FB1 features mechanical temperature control to easily set chilling preferences. The refrigerator compartment can be set to a range of 32°F to 50°F, while the freezer compartment can be set from -11.2°F to 5°F. Adjust the dial inside the fresh food compartment to your desired setting.

Adjustable Temperature Settings



Fruit



Vegetable



Ice cream



Meat

Figure 3: Interior view highlighting the adjustable temperature settings and various food items stored in the refrigerator.

Storage Capacity and Organization

The fresh food section offers 2.2 cubic feet of storage, and the freezer section provides 0.9 cubic feet. It includes durable glass shelves, a roomy crisper drawer for fruits and vegetables, and storage racks for soda cans in the door.

Spacious Storage for Small Spaces



Figure 4: Interior view with labeled dimensions and cubic feet capacity for both the refrigerator and freezer compartments.

Interior Lighting

The refrigerator is equipped with an interior light to improve visibility, making it easy to find items day or night.

LED-Equipped Mini Fridge

Visibility Day & Night



Figure 5: Interior view highlighting the built-in LED light for nighttime convenience and indicating a low noise level of 45dB.

MAINTENANCE

Manual Defrost

The freezer compartment requires manual defrosting. This setting enables hassle-free cleaning when ice buildup occurs. Ensure the unit is unplugged before beginning the defrost process.

TROUBLESHOOTING

For common issues such as the refrigerator not cooling, unusual noises, or door problems, refer to the comprehensive troubleshooting guide. Many issues can be resolved with simple adjustments or checks.

For a detailed troubleshooting guide, please refer to the official PDF document: [Troubleshooting Guide \(PDF\)](#).

SPECIFICATIONS

Feature	Detail
Brand Name	Midea
Model Info	WHD-113FB1
Item Weight	52.2 pounds
Product Dimensions	19.37 x 18.5 x 32.95 inches
Capacity	3.1 Cubic Feet
Annual Energy Consumption	270 Kilowatt Hours Per Year
Refrigerator Fresh Food Capacity	3.1 Cubic Feet
Freezer Capacity	0.92 Cubic Feet
Installation Type	Freestanding
Color	Black
Defrost System	Manual
Number of Doors	2

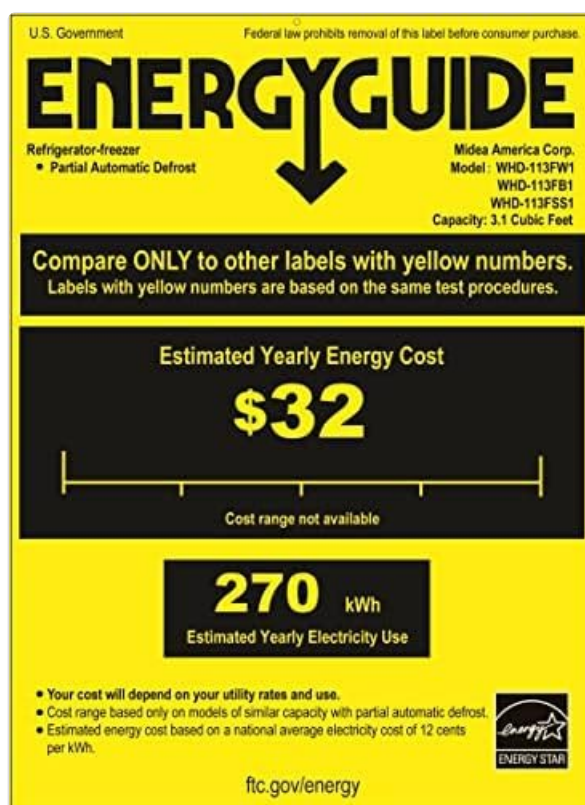


Figure 6: Energy Guide label showing estimated yearly energy cost and electricity use for the Midea WHD-113FB1.

WARRANTY AND SUPPORT

The Midea WHD-113FB1 Double Door Mini Fridge comes with a full 1-Year Warranty. For any product inquiries, technical assistance, or customer support, please refer to the contact information provided in your purchase documentation or visit the official Midea website.

Additional support resources:

- User Guide (PDF): [User Guide \(PDF\)](#)
- User Manual (PDF): [User Manual \(PDF\)](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question