

[Manuals.plus](#) /

› [Cuisinart](#) /

› Cuisinart FP-8GMP1 8-Cup Food Processor Instruction Manual

Cuisinart FP-8GMP1

Cuisinart FP-8GMP1 8-Cup Food Processor Instruction Manual

Model: FP-8GMP1

INTRODUCTION

Thank you for purchasing the Cuisinart FP-8GMP1 8-Cup Food Processor. This appliance is designed to simplify various food preparation tasks, from chopping and slicing to shredding and mixing. Please read this manual thoroughly before first use to ensure safe and efficient operation.

For a complete user manual in PDF format, please refer to the [Official User Manual \(PDF\)](#).

IMPORTANT SAFETY INFORMATION

WARNING: Blades and discs are sharp. Handle with extreme care.

- Always unplug the appliance from the outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not immerse the motor base in water or other liquids.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- Do not use outdoors.

PARTS AND FEATURES

The Cuisinart FP-8GMP1 Food Processor includes the following components:

- **350-Watt Motor Base:** The powerful base housing the motor.
- **8-Cup Work Bowl:** Transparent bowl with measurement markings for processing ingredients.
- **Work Bowl Cover:** Features an integrated feed tube.
- **Food Pusher:** Used with the feed tube to guide ingredients.
- **Chopping Blade:** Stainless steel S-blade for chopping, mincing, and pureeing.
- **Reversible Shredding/Slicing Disc:** Stainless steel disc for shredding and slicing.
- **Rubberized Controls:** Buttons for High, Low, Off, and Pulse functions.





Image: The Cuisinart FP-8GMP1 8-Cup Food Processor, showcasing its main components including the motor base, work bowl, and feed tube.



Professional results

With premium stainless steel blade & reversible discs.

Image: Close-up of the stainless steel chopping blade and reversible shredding/slicing discs, essential for various food prep tasks.

SETUP INSTRUCTIONS

1. **Unpack Components:** Carefully remove all parts from the packaging. Wash the work bowl, work bowl cover, chopping blade, and discs in warm, soapy water. Rinse thoroughly and dry.
2. **Place Motor Base:** Position the motor base on a clean, dry, and stable countertop. Ensure the unit is unplugged.
3. **Attach Work Bowl:** Place the 8-cup work bowl onto the motor base. Turn it clockwise until it locks securely into place. You should hear a click.
4. **Insert Blade/Disc:**
 - For chopping/mixing: Carefully place the chopping blade onto the center stem of the work bowl.
 - For slicing/shredding: Place the desired reversible disc onto the center stem, ensuring the correct side (slicing or shredding) is facing up.

5. **Add Ingredients:** Place your ingredients into the work bowl. Do not overfill beyond the maximum liquid fill line.
6. **Secure Cover:** Place the work bowl cover onto the work bowl. Turn it clockwise until it locks securely. The food processor will not operate unless the cover is properly locked.
7. **Insert Food Pusher:** Insert the food pusher into the feed tube opening on the cover.

OPERATING INSTRUCTIONS

Once the food processor is assembled and ingredients are loaded, you can begin processing.

1. **Plug In:** Plug the power cord into a standard electrical outlet.
2. **Select Speed:**
 - Press the **HIGH** button for continuous high-speed processing.
 - Press the **LOW** button for continuous low-speed processing.
 - Press the **PULSE** button for short bursts of power. Release to stop. This is ideal for chopping or controlling texture.
3. **Add Ingredients During Operation (for slicing/shredding):** For continuous processing with discs, use the feed tube and food pusher to add ingredients while the motor is running.
4. **Stop Operation:** Press the **OFF** button to stop the motor.
5. **Unplug and Disassemble:** Always unplug the unit before removing the cover, blade, or work bowl. Carefully remove the blade/disc before emptying the work bowl.



Easy-to-use

Rubberized control panel with On/Off, High, Low and Pulse.

Image: Close-up of the rubberized control panel with High, Low, Off, and Pulse buttons for easy operation.



Quick prep

Chop, slice, shred, and mix.

Image: Visual representation of the food processor's versatility, demonstrating its ability to chop, slice, shred, and mix ingredients.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity of your Cuisinart Food Processor.

Cleaning

- **Always Unplug:** Before cleaning, ensure the unit is unplugged from the power outlet.
- **Dishwasher Safe Parts:** The work bowl, work bowl cover, chopping blade, and discs are removable and dishwasher-safe (top rack recommended).
- **Hand Washing:** For hand washing, use warm, soapy water. Exercise extreme caution when handling the sharp blades and discs.
- **Motor Base:** Wipe the motor base clean with a damp cloth. Never immerse the motor base in water or other liquids.

- **Stubborn Stains:** For stubborn stains on plastic parts, use a non-abrasive cleaner or baking soda paste.

Storage

Store the food processor assembled or disassembled in a dry, safe place, out of reach of children. Ensure all parts are completely dry before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on.	Not plugged in; Work bowl or cover not locked correctly.	Ensure power cord is securely plugged into an outlet. Verify the work bowl and cover are properly locked into place.
Motor stops during operation.	Overload protection activated; Unit overheated.	Unplug the unit. Remove some ingredients if overfilled. Let the unit cool down for 10-15 minutes before restarting.
Ingredients are not processed evenly.	Too many ingredients; Ingredients are too large.	Process smaller batches. Cut ingredients into uniform, smaller pieces before adding to the bowl. Use the Pulse function for better control.
Loud noise or vibration.	Blade/disc not properly seated; Unit not on a stable surface.	Ensure the blade or disc is correctly placed on the center stem. Place the unit on a flat, stable surface.

SPECIFICATIONS

Feature	Detail
Brand	Cuisinart
Model Number	FP-8GMP1
Capacity	8 cups
Motor Wattage	350 watts
Voltage	120 volts
Dimensions (D x W x H)	7.6"D x 9.58"W x 15.19"H
Weight	6 pounds
Material	Plastic (BPA-free), Stainless Steel blades
Controls	High, Low, Off, Pulse (Rubberized)

Feature	Detail
Care Instructions	Dishwasher Safe (removable parts), Hand Wash

8-Cup Food Processor



Image: Diagram showing the dimensions of the Cuisinart FP-8GMP1 8-Cup Food Processor: 15.2 inches high, 9.6 inches wide, and 7.6 inches deep.

WARRANTY AND SUPPORT

Limited 2-Year Warranty

This Cuisinart Food Processor is covered by a limited 2-year warranty. Please refer to the official user manual (PDF) for complete details regarding warranty policies, terms, and conditions. The warranty covers defects in materials and workmanship under normal household use.

For warranty claims or service, retain your proof of purchase.

Customer Support

For any questions, troubleshooting assistance, or to inquire about replacement parts, please visit the official Cuisinart website or contact their customer service department. Contact information can typically be found in the full user manual or on the Cuisinart brand website.

Visit the [Cuisinart Store on Amazon](#) for more products and information.

© 2023 Cuisinart. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00MVWGFP4>

More documents and user manuals: <https://manuals.plus/>